



Aussie K200 truck.
Resin kit, 1/24

Warning!

This kit requires a donor chassis. As default chassis we suggest to use Italeri's generic American chassis (except Volvo VN and Perbilts).

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.


This model kit is for advanced modellers only!

You can download this instruction as PDF-file at the our site at «Instructions» section.

Symbols:


 - glue parts;


 - do not glue parts;

 - bend parts;



 - attention;



 - moving parts;

 - your choice;

 - cut;

Numbers of photo-etched parts

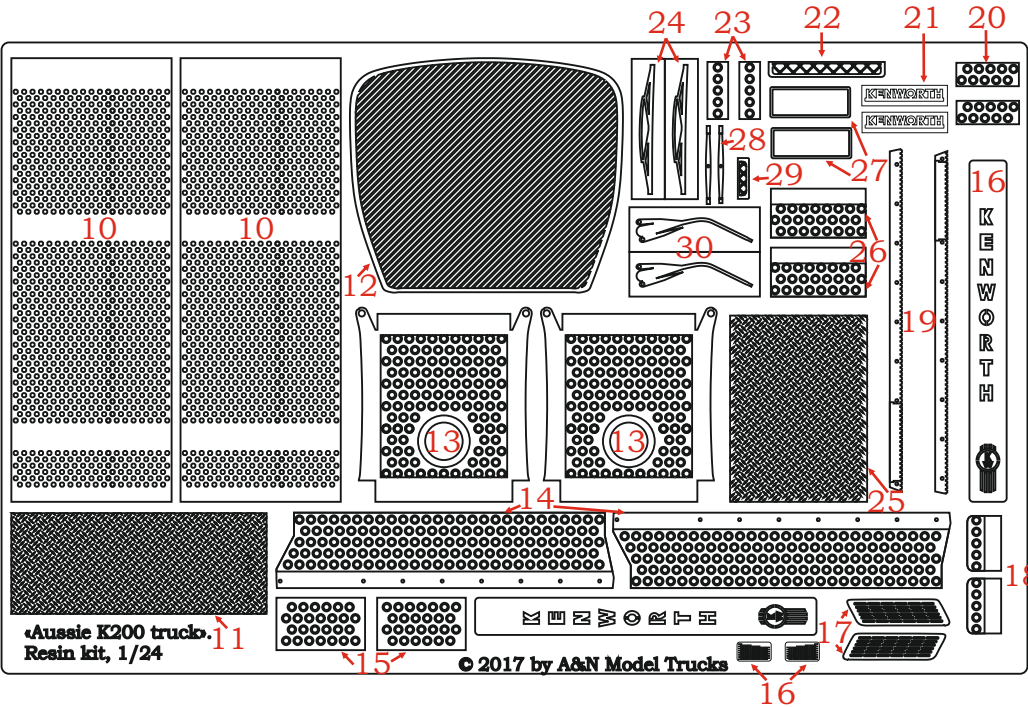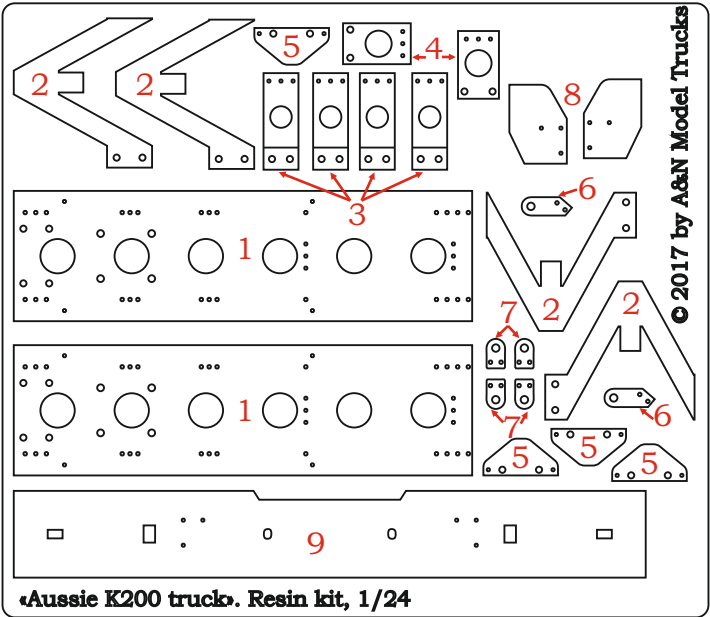

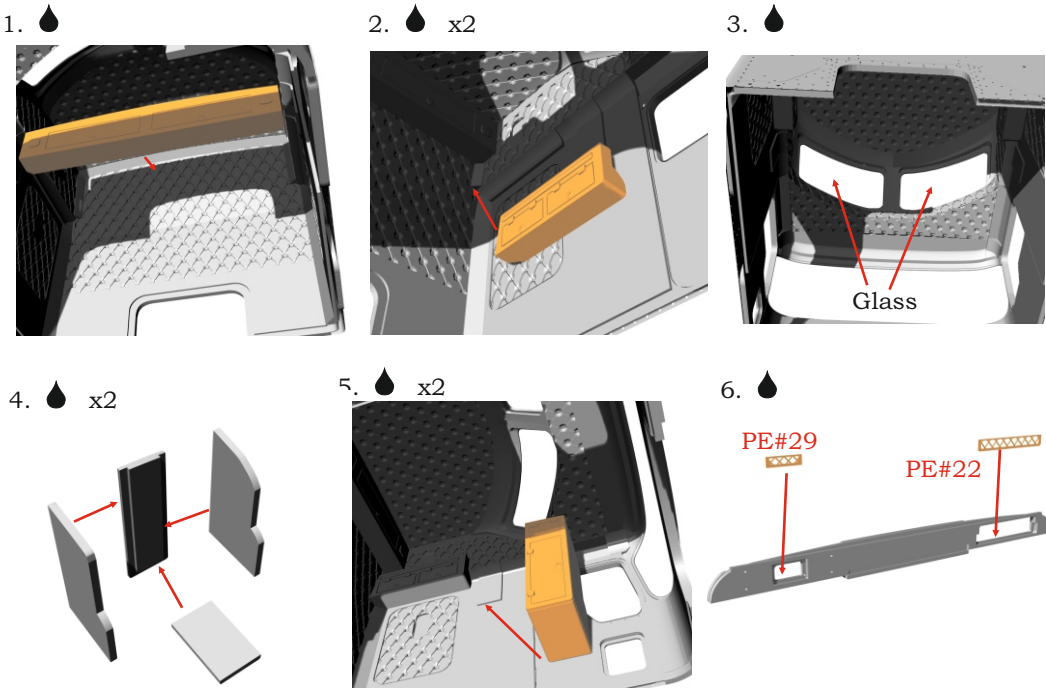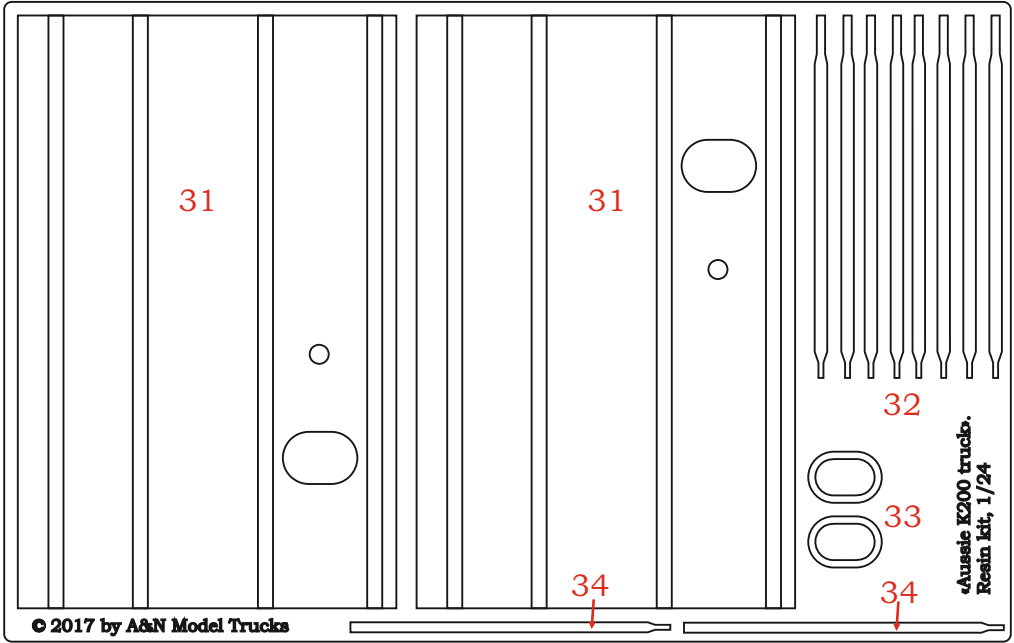




Aussie K200 truck. Resin kit, 1/24

7.

8.

9. x2




10. x2

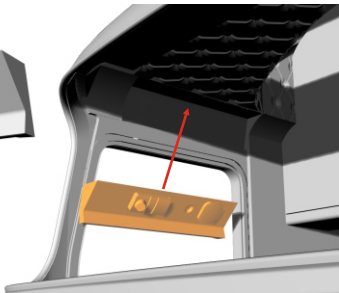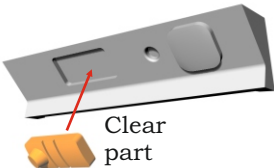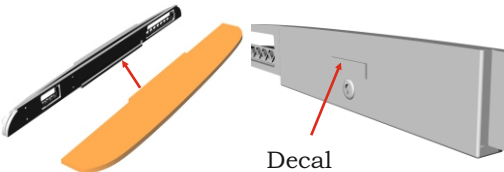

11.

12.




13.

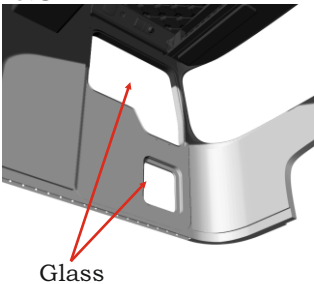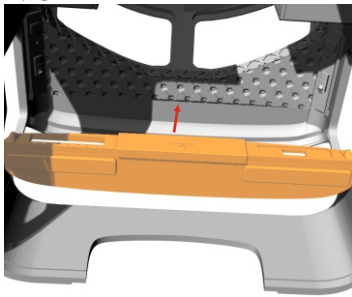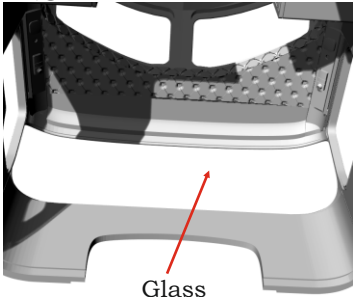

14.

15. x2




16. x2

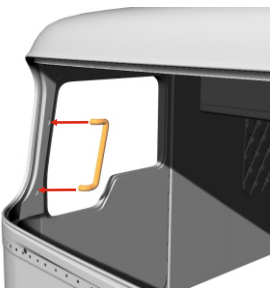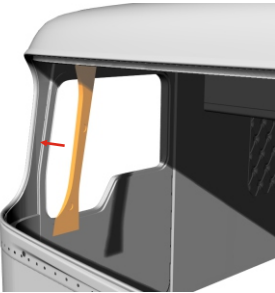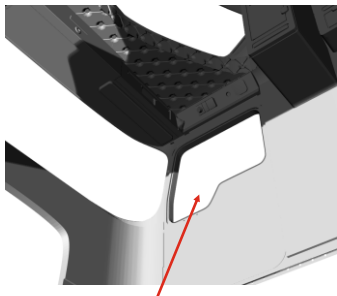


17. x2

18. x2


19.

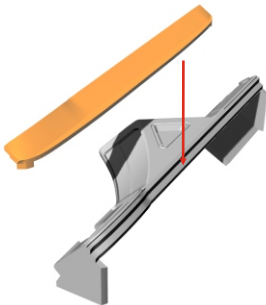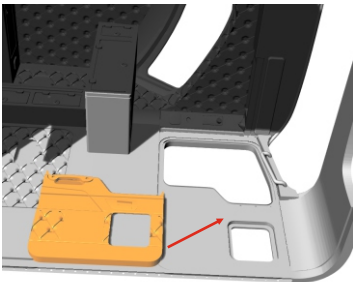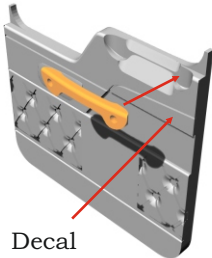


20.

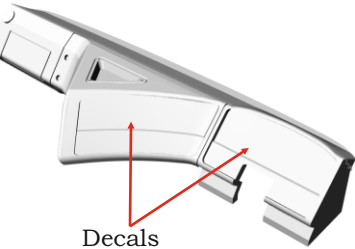


21.

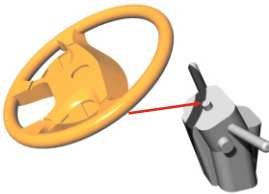

22.

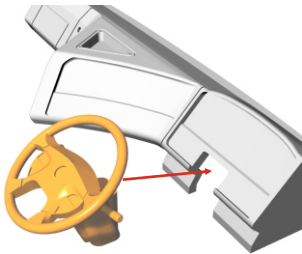


23.

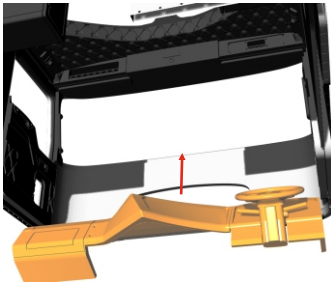


24. x2




25. x2

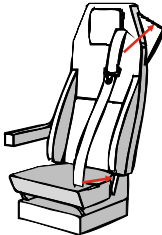


26.

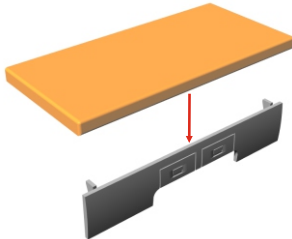


27.

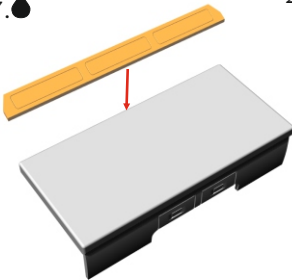


28.

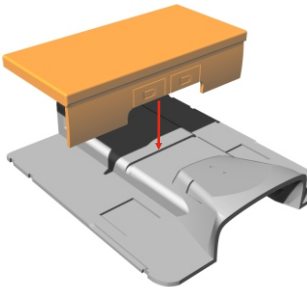


29.

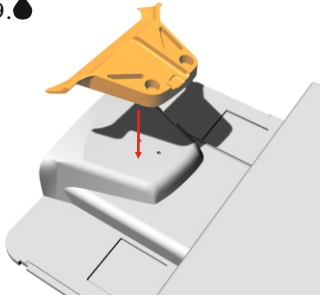


30.

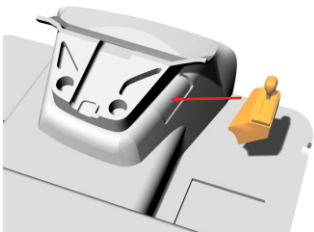

31.

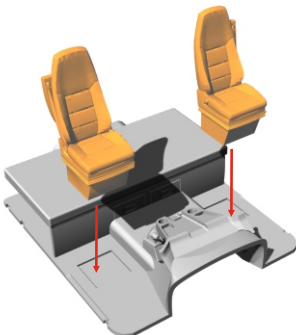


32.

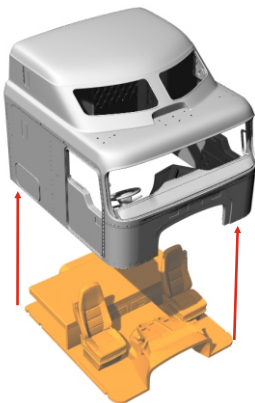




34. x2

35.

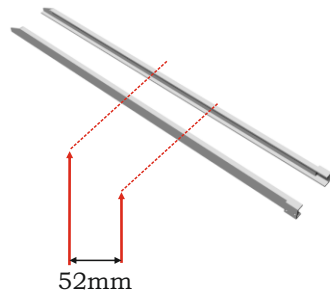

36. x2

37.

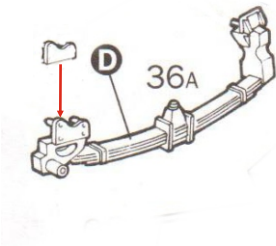

Move front axle backward for 10 mm.

38.




39.

PE#34

40.


41. x2

42.

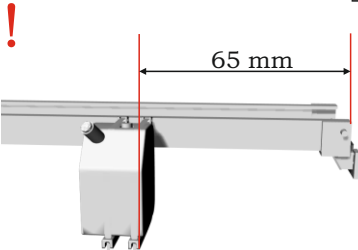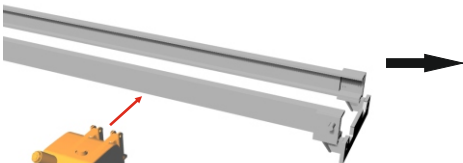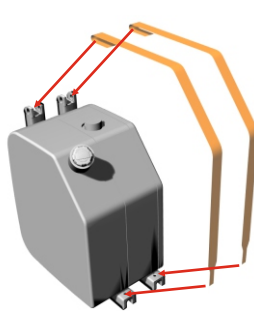


43.


44.

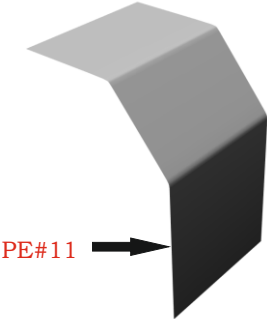



PE#11

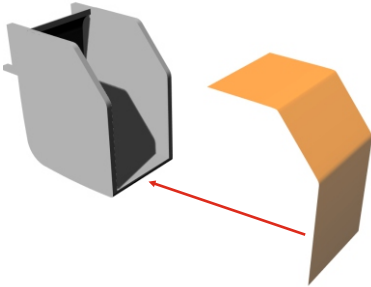



Aussie K200 truck. Resin kit, 1/24
45.💧

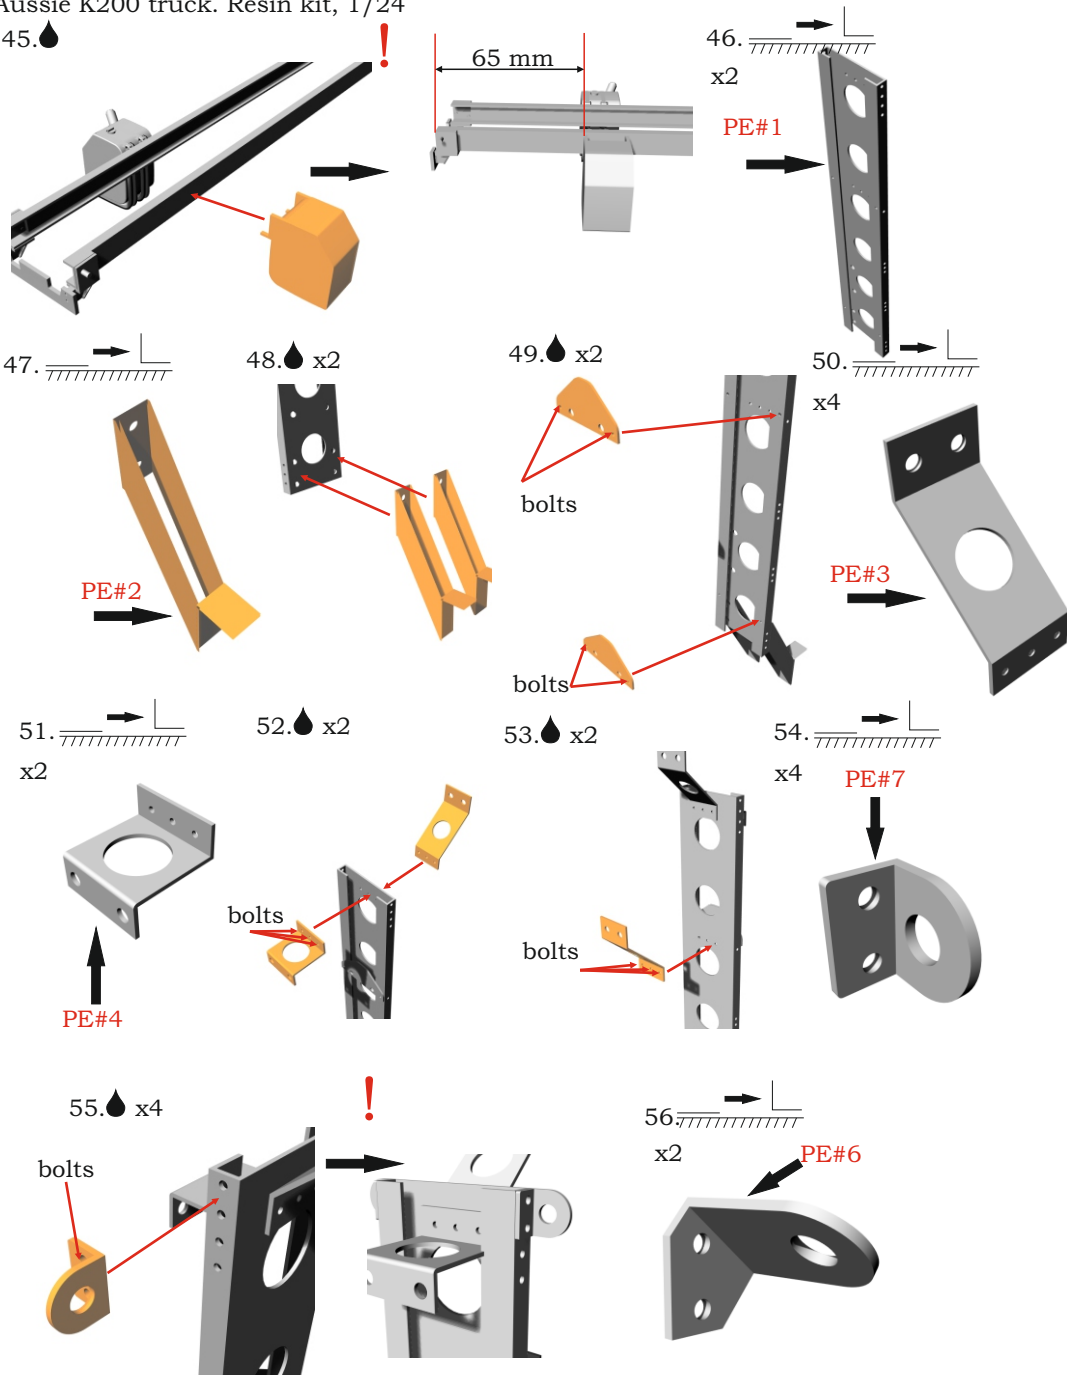


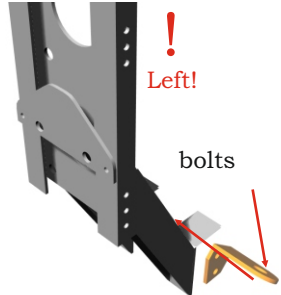
57.  **Left!**
bolts

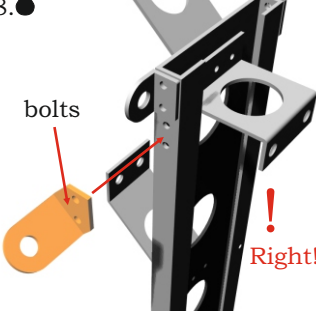
58.  bolts
Right!

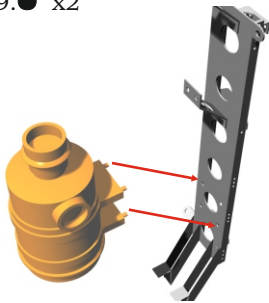
59.  x2

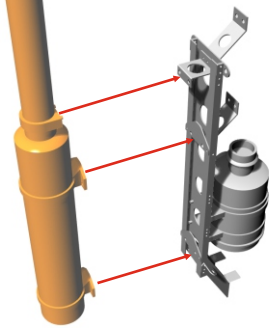
60.  x2

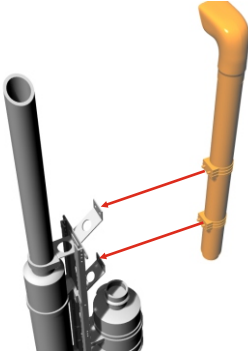
61.  x2

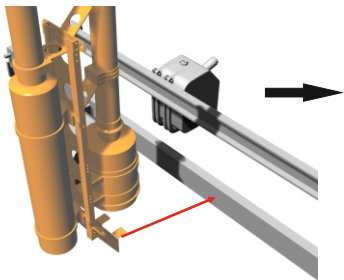
62.  x2

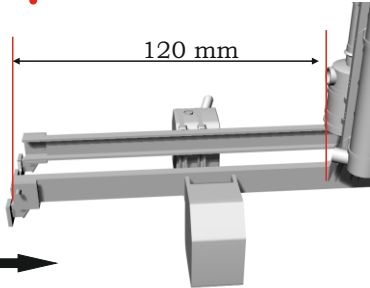
 120 mm

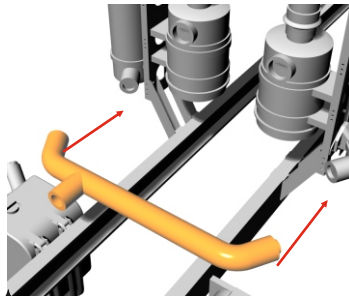63. 

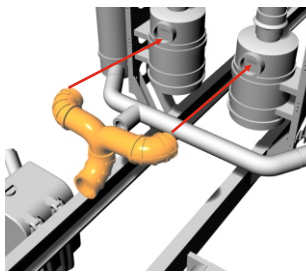64. 












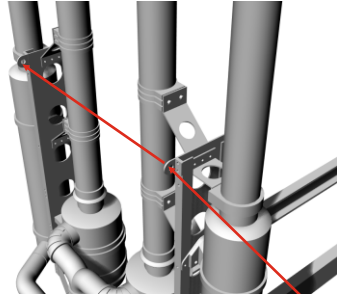
65.  x2
Round profile

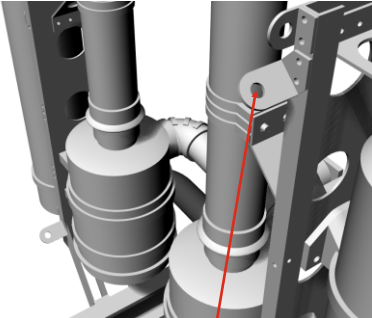66.  Round profile

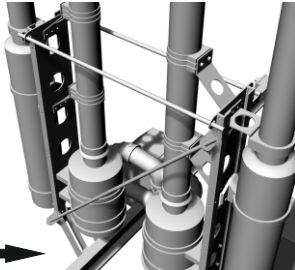


© 2017 by A&N Model Trucks

Aussie K200 truck. Resin kit, 1/24

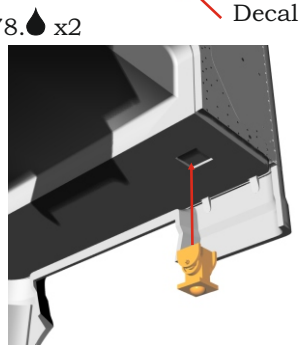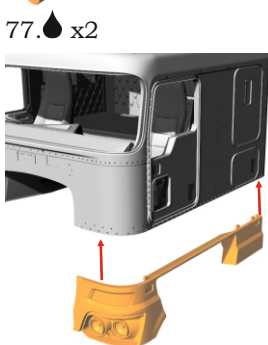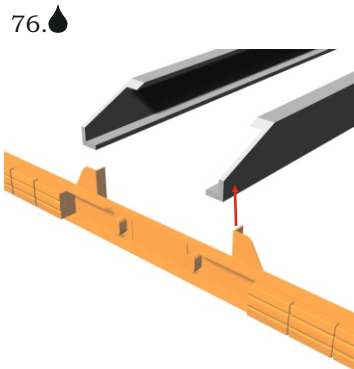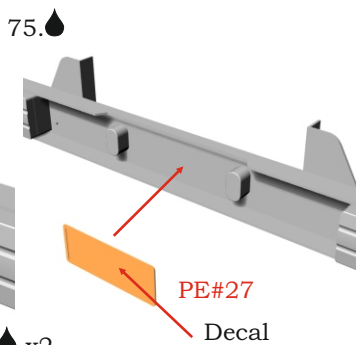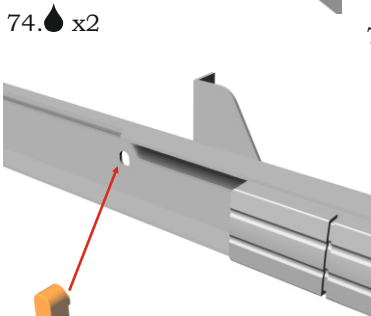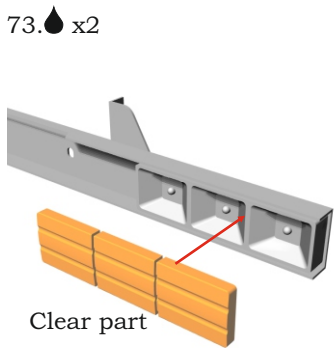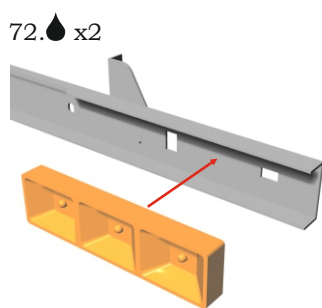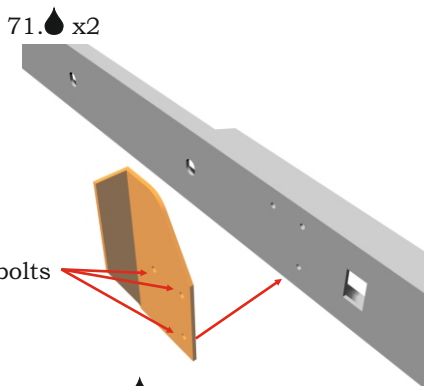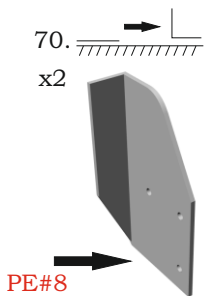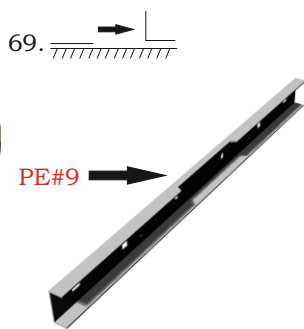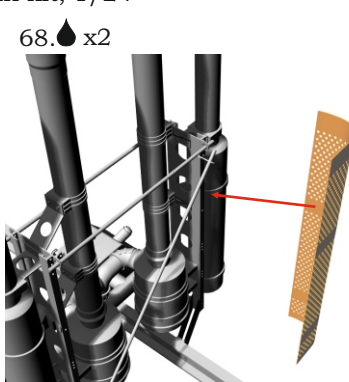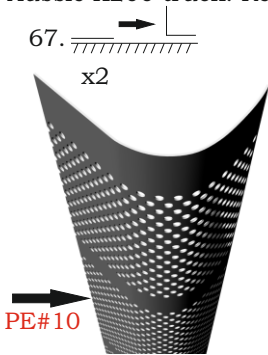


Aussie K200 truck. Resin kit, 1/24


79. x2

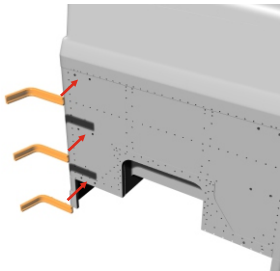



80.

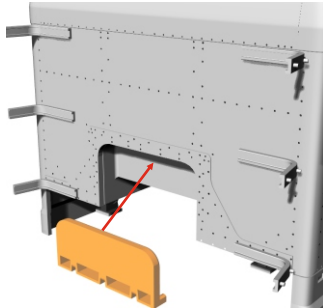

81.


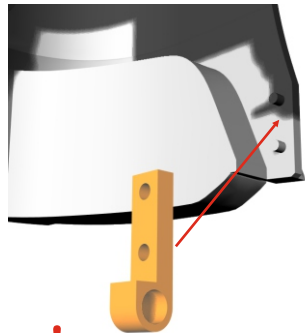


82. x2

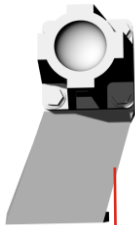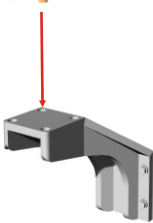


Front
side


83. x2

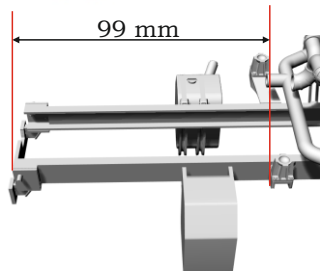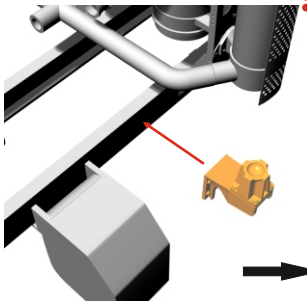


84.

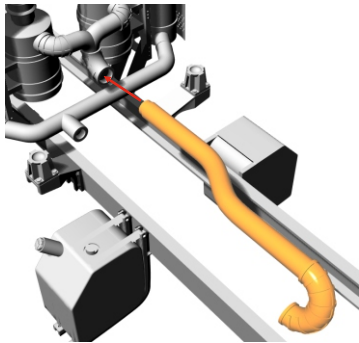


85.

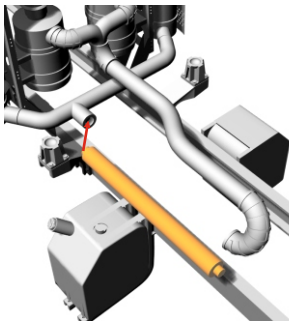


86.

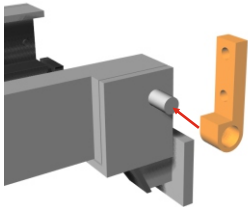


87.

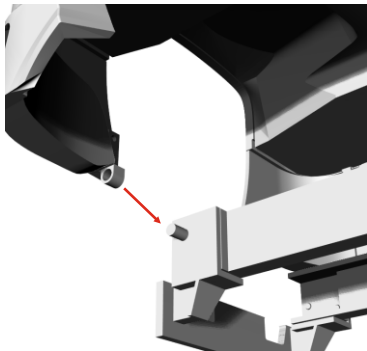

88.

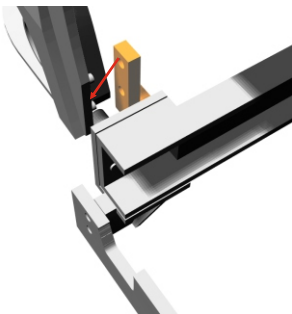


89. x2




Clear
part

Aussie K200 truck. Resin kit, 1/24


90.  x2

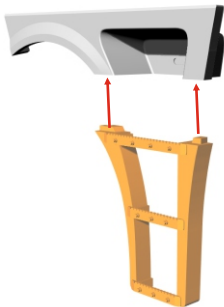

91.  x2

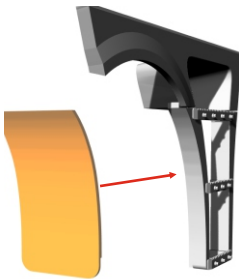


92.  x2

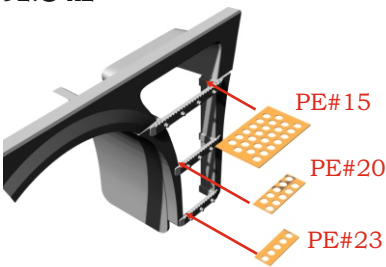


93. 
 x2


PE#14

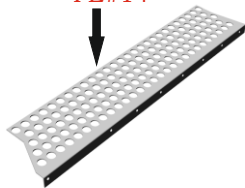


94.  x2

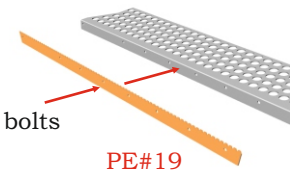


95.  x2

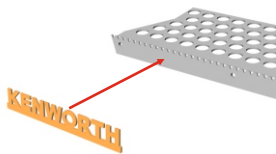

96.  x2

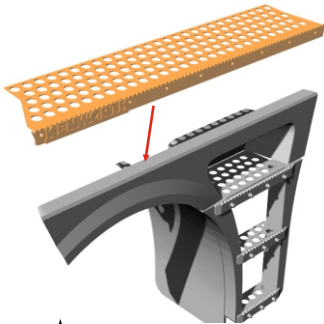


97.  x2

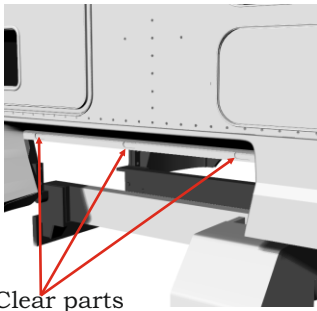


Clear parts

98.  x2

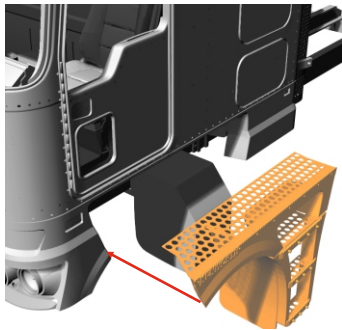


99.  x2

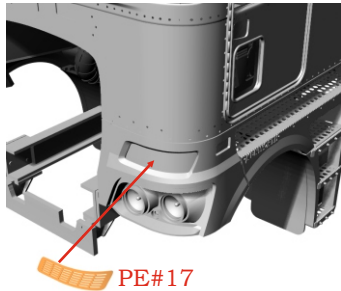


PE#17

100.  x2

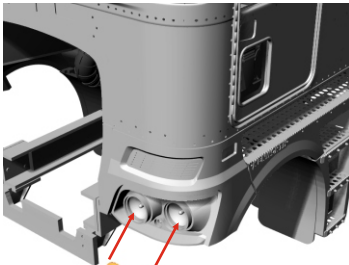

Clear parts


101.  x2

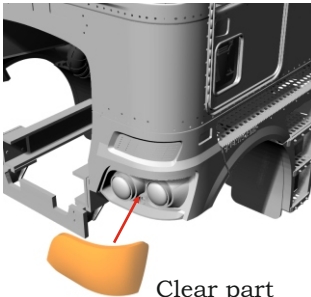


Clear part

Aussie K200 truck. Resin kit, 1/24


102.  x2

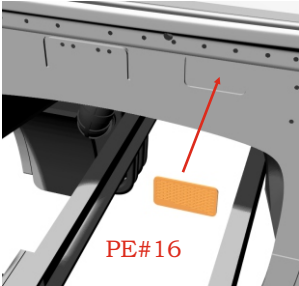


103.  x2

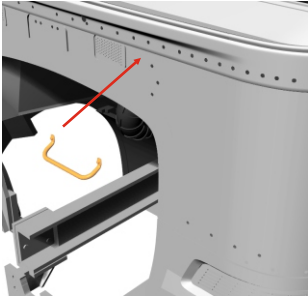


104. 

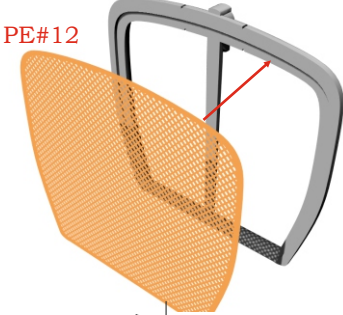


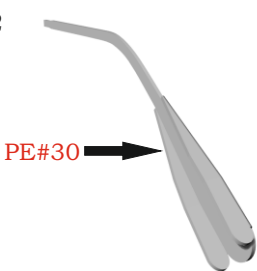
105. 

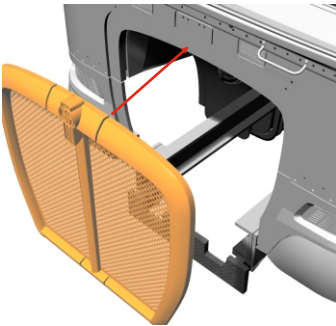


106.  x2

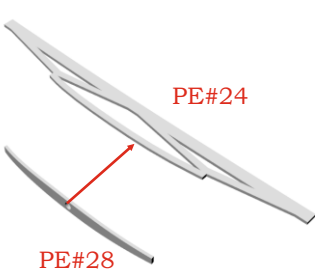


107.  x2




108.  x2

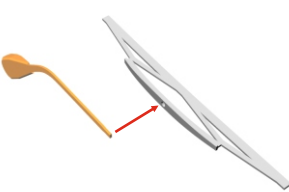


109.  x2

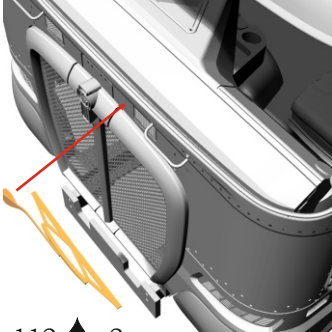


110.  x2

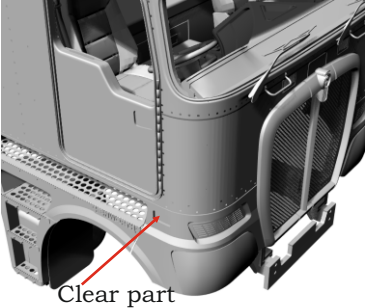


111.  x2

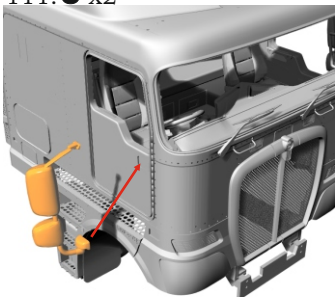










112.  x2

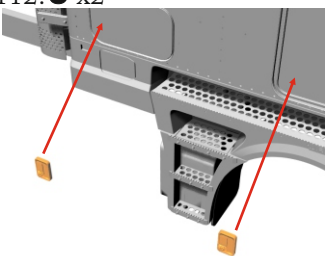

113.  x2

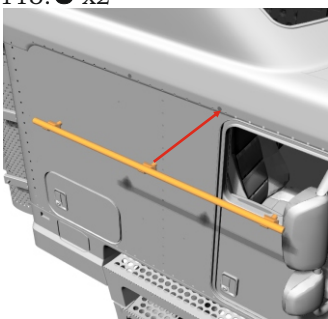

Aussie K200 truck. Resin kit, 1/24

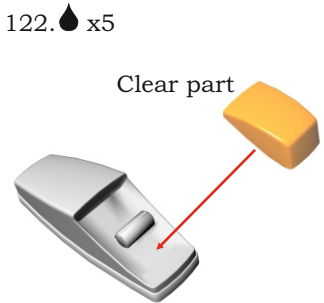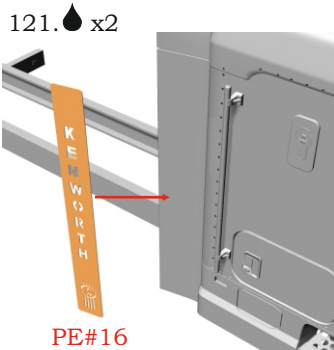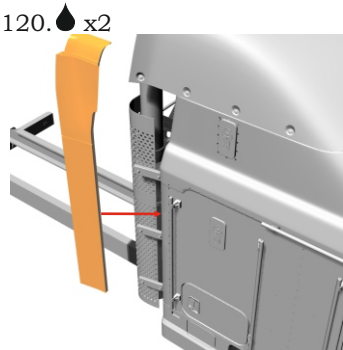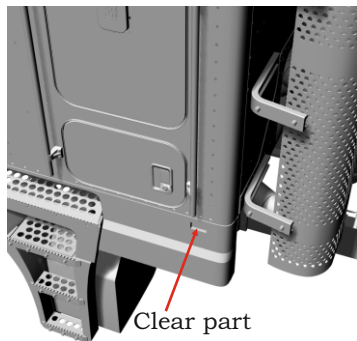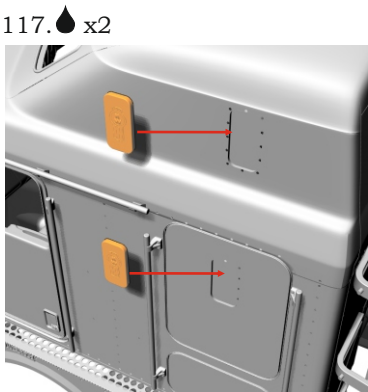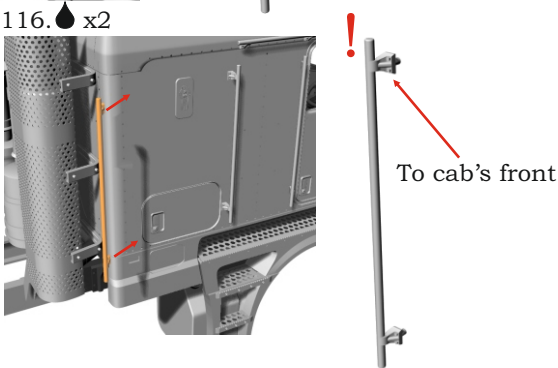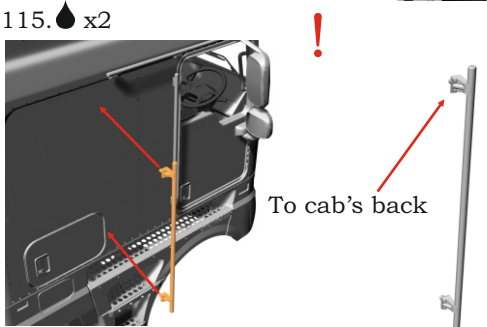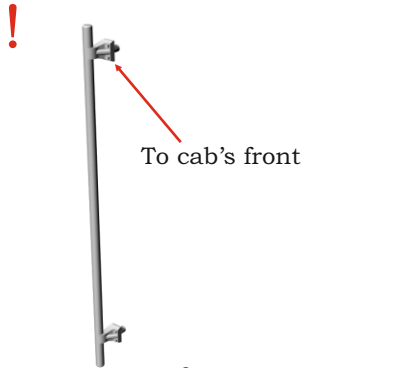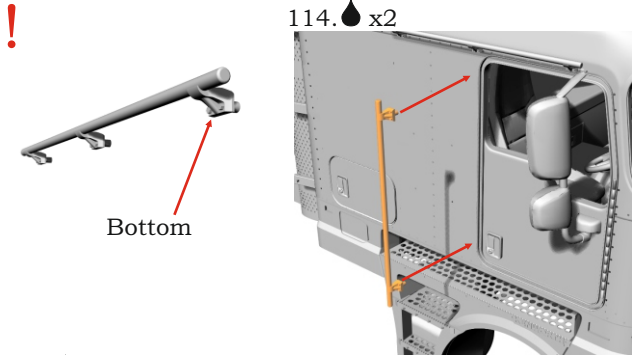


PE#16


123.  x5




124.  x2

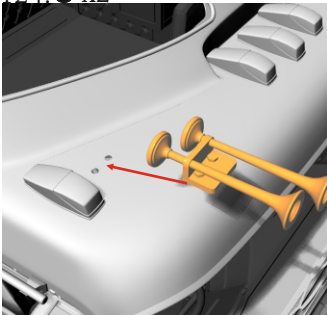

125. 

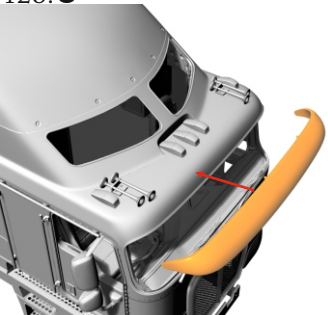

126. 

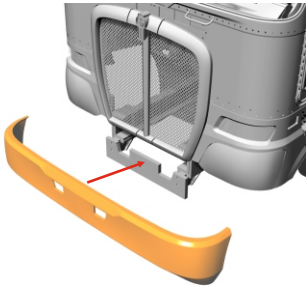


For detailed photo-instruction how to make photo-etched fuel tanks, please see the article at the our site. Section «Instructions->photo-instructions». Or use QR-code on the right.




127.  x2


PE#31

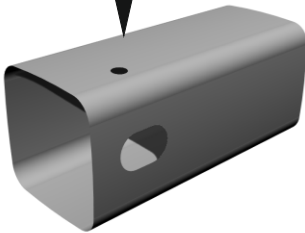


128.  x2

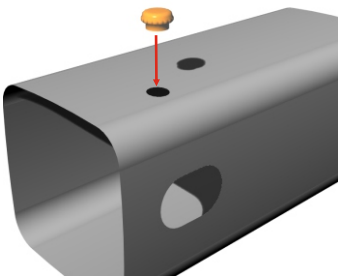


129.  x2

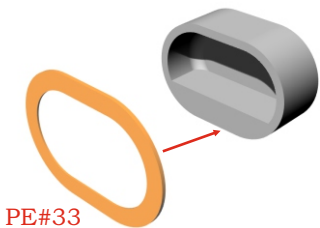


130.  x2

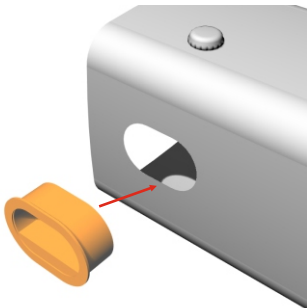

131.  x4

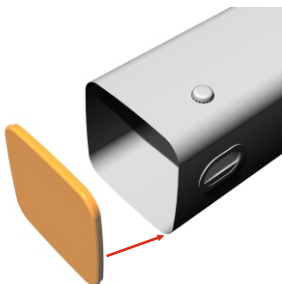


132.  x8

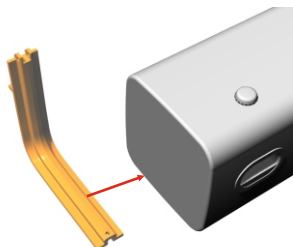


Aussie K200 truck. Resin kit, 1/24

133.  x2

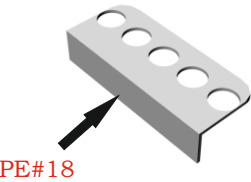


134.  x2

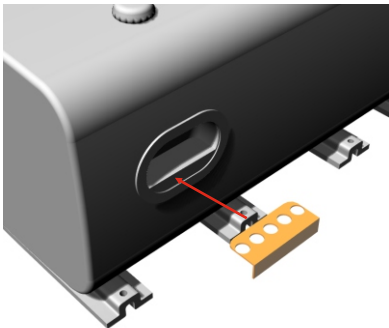



135.  x2




136.  x2

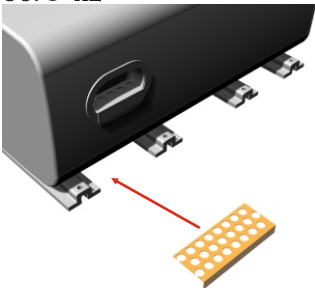


137.  x2

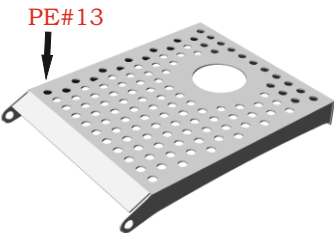



138.  x2

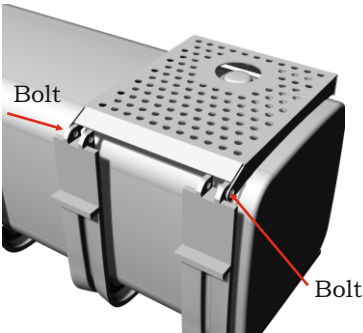


139.  x4

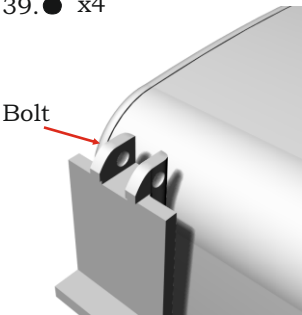



140.  x8

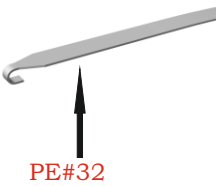


141.  x8

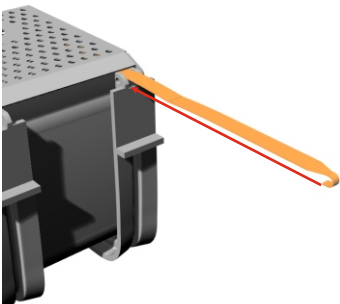

142.  x8

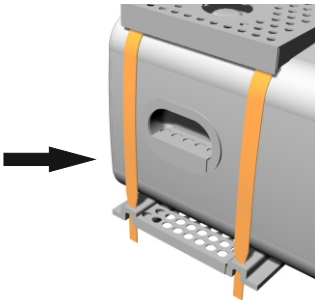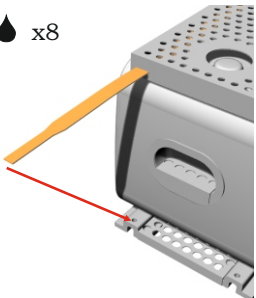


143.  x2

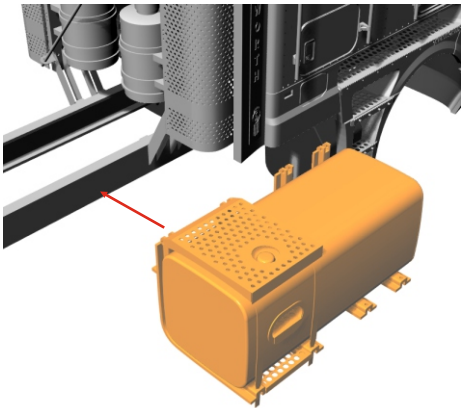

144. 

PE#25

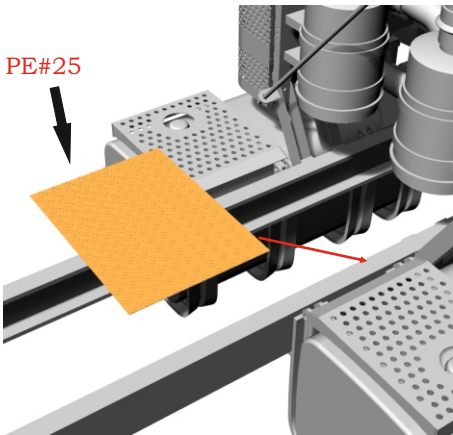

Made in Latvia