

8x8 chassis  
for German construction truck.

Scale 1/24

Warning!

Please follow this instruction while assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.

This model kit contains small parts and is not suitable for children.

This model is for advanced modellers only.

Symbols:

☉ - glue parts;

⊘ - do not glue parts;

→ L - bend parts;

! - attention;

↔ - moving parts;

? - your choice;

h# - frame rails holes' numbers;


1. → L

PE-part #1 →



2. → L


PE-part #3 →

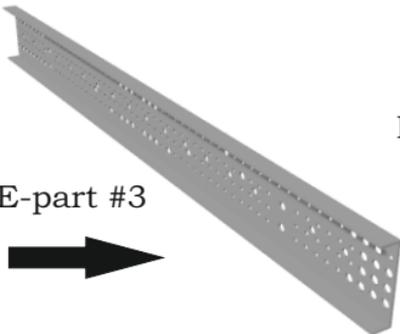

3. ☉


PE-part #41

PE-part #1

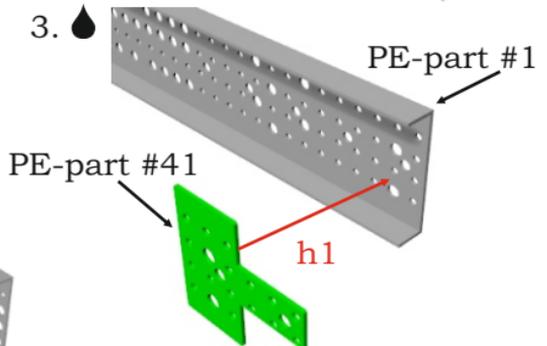


8x8 chassis for German construction truck


4. 

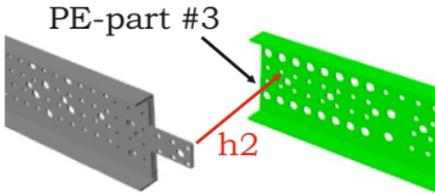


5. 

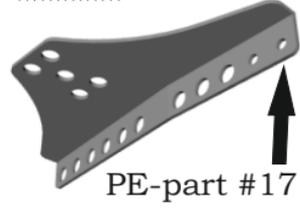


6. 

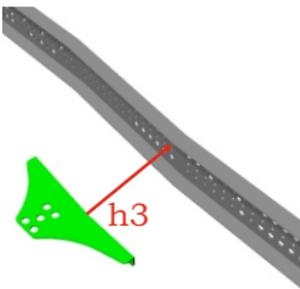


7. 

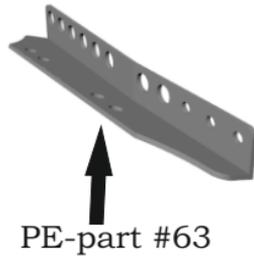


8. 

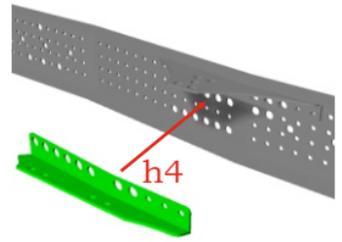

9. 

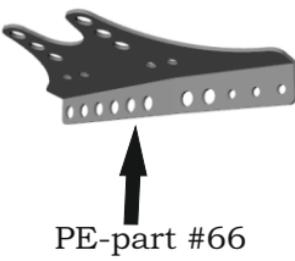


10. 

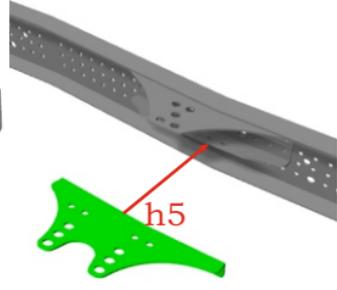


11.

Repeat steps 1-10 for left side.


12. 

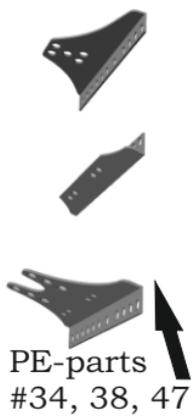


13. 

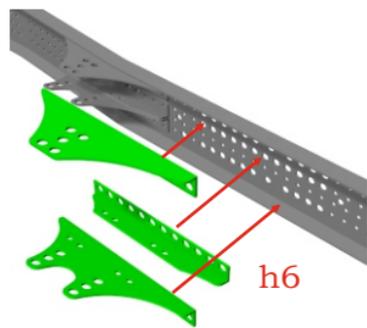


14. 

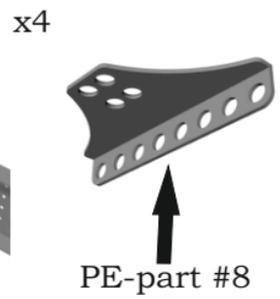

15. 

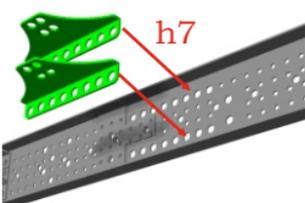


16. 

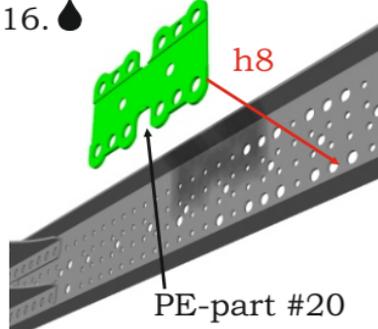


8x8 chassis for German construction truck

17. 

x2

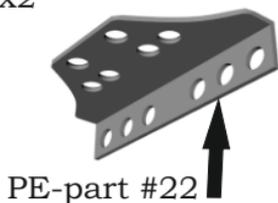



18. 

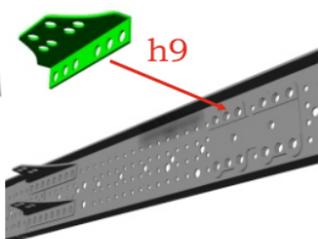



19.

Repeat steps 12-18 for left side.

20. 

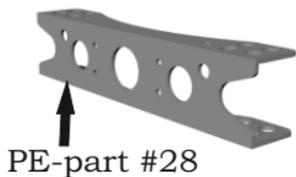


21. 

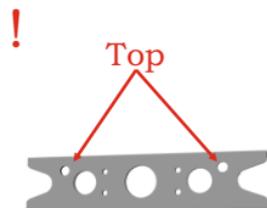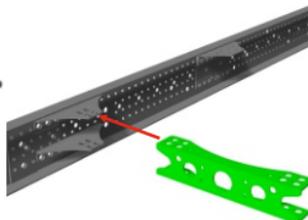

22. 

x2

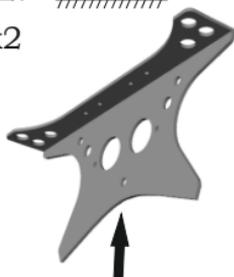


23. 


x2



24.  x2

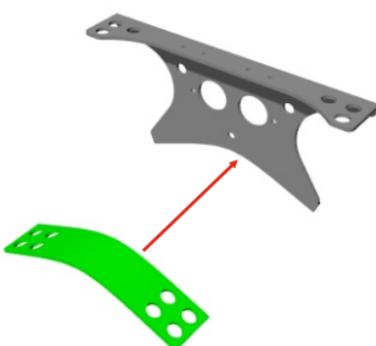


25. 

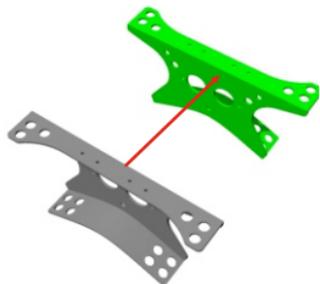


26. 


x2

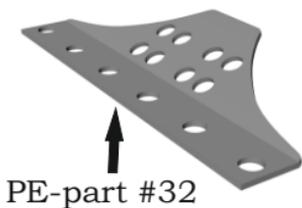


27. 

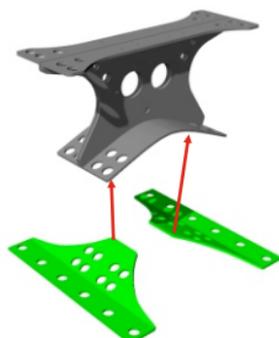


28. 

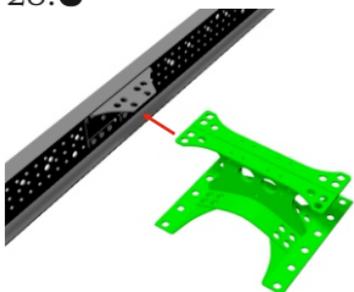


29. 

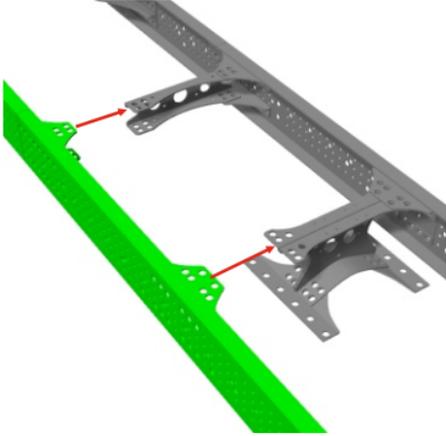


30.  x2

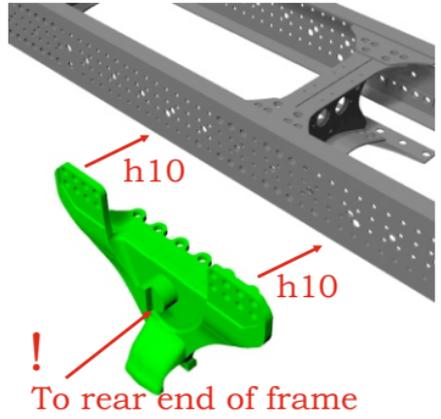


31. 

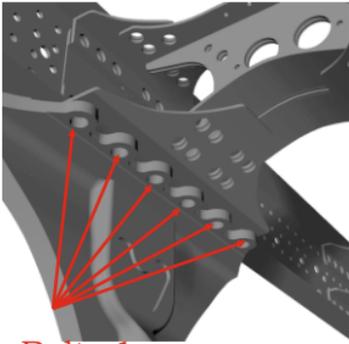


Bolts 1mm


32. 

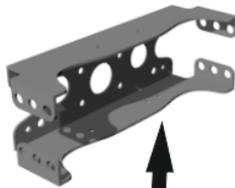


PE-part #25

33. 

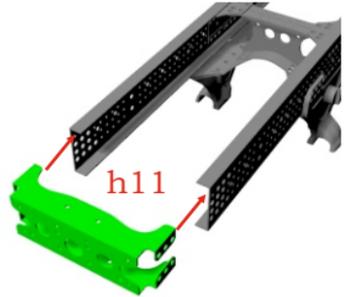


34. 

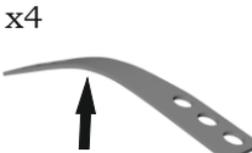


PE-part #55

35. 

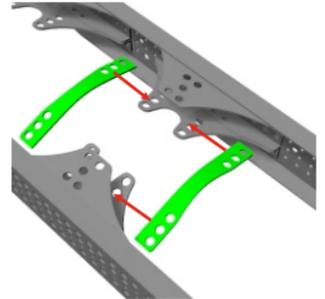


36. 

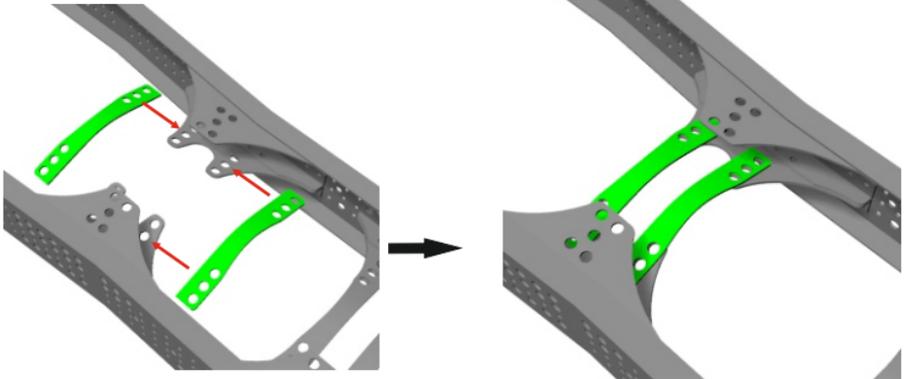


8x8 chassis for German construction truck


37.  x2

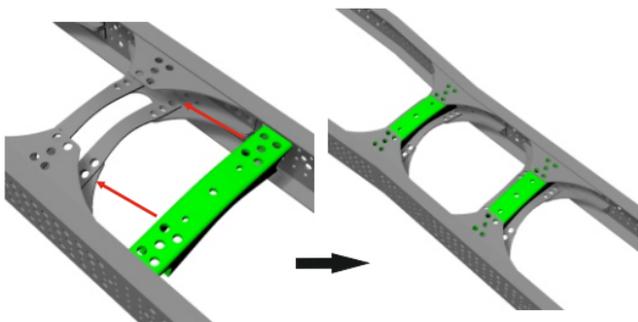


38.  x2

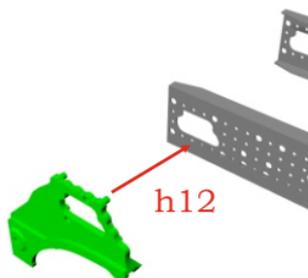


39.  x2

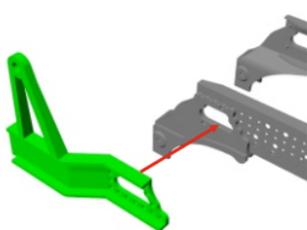

40. 

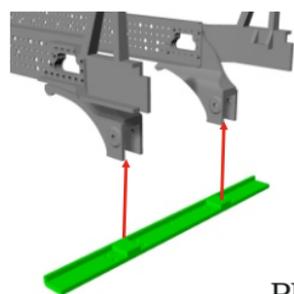

41. 

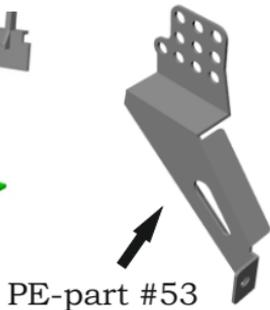


42. 



PE-part #49


43. 

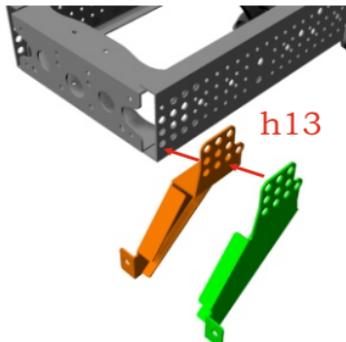

44.


Repeat steps 41-43 for left side.

45. 

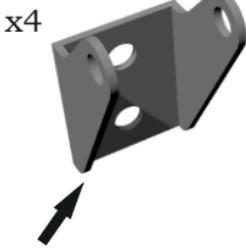

PE-part #9

46.  x2

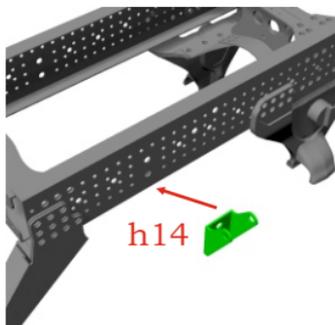


47. 

Repeat step 46 for left side.

8x8 chassis for German construction truck


48.  x2

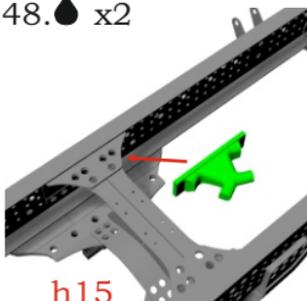


49.  x24

Bolts to h8


50.  x2

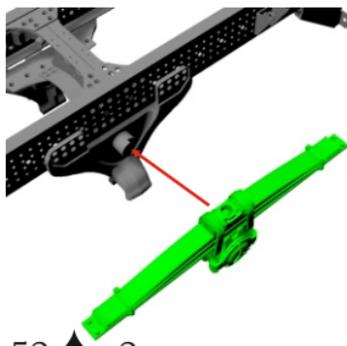


51. 

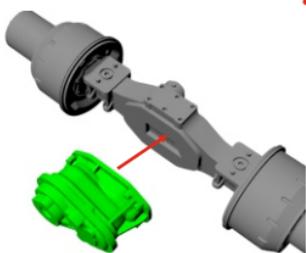


52.  x2

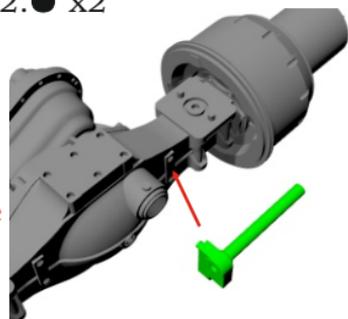


53. 

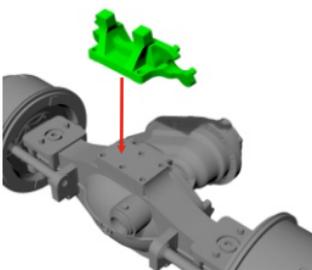


54.  x2

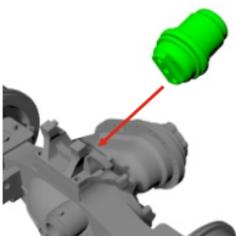


55.  x2

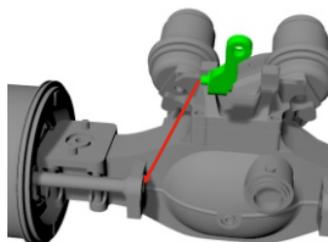


56.  x2

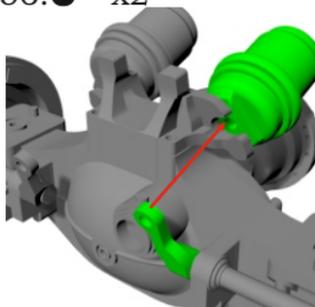


57. 

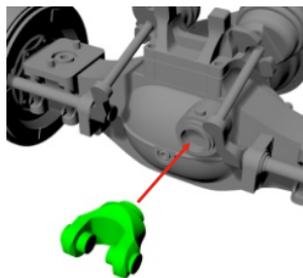


58. 

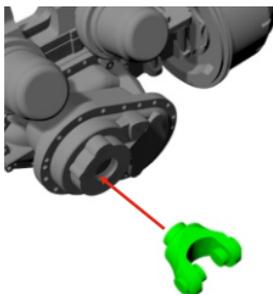

59.  x2

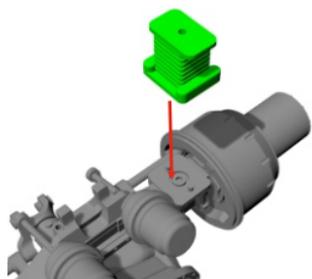


60.  x2

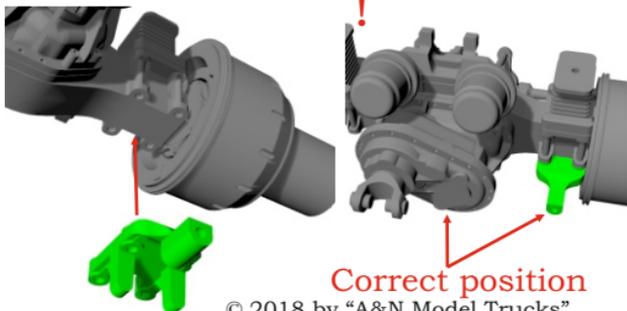


8x8 chassis for German construction truck


61. 

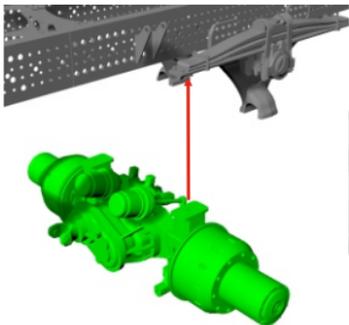


62. 

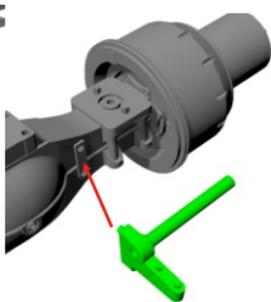

63. 

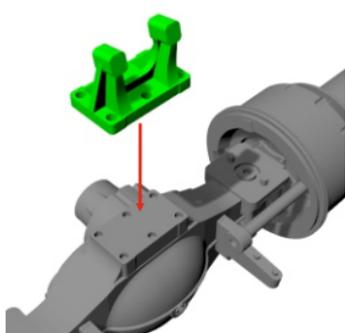


64. 

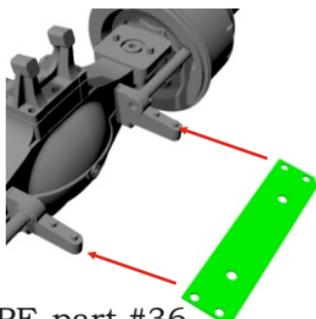


PE-part #36


65.  x2

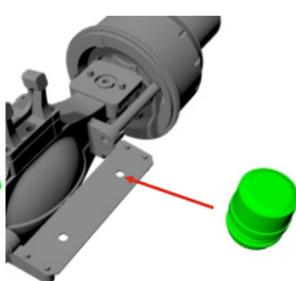


66.  x2

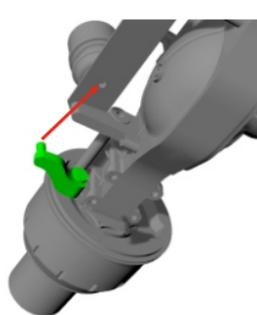


67.  x2

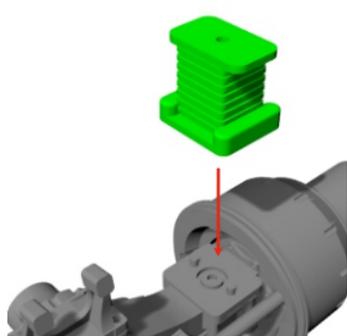

68. 

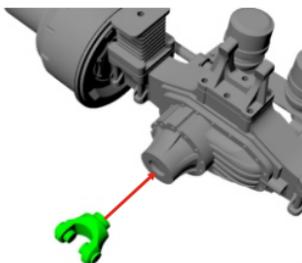


69.  x2

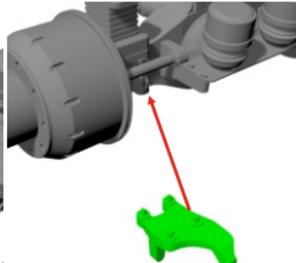


!


70. 

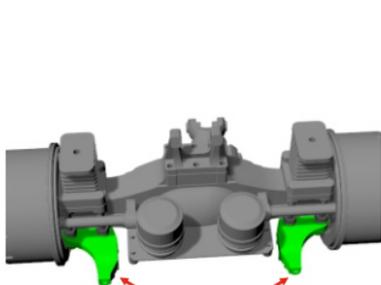


Correct position

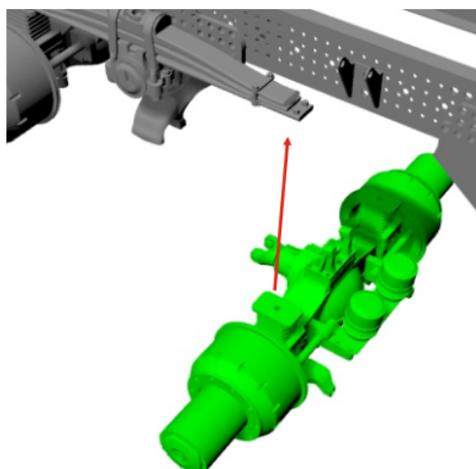

8x8 chassis for German construction truck

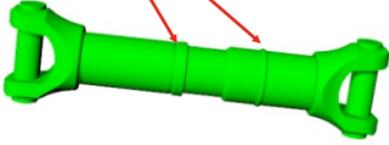




71.

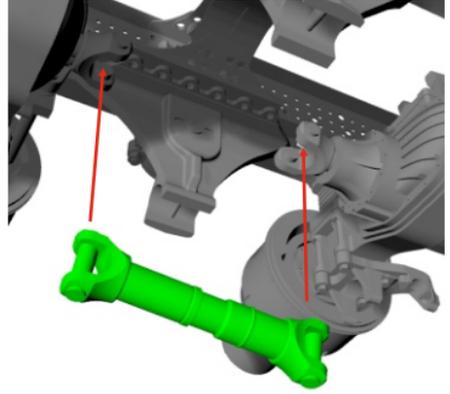

72. PE-part #52

73. x2




74. x4

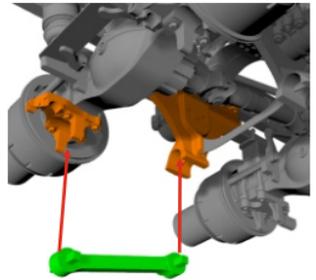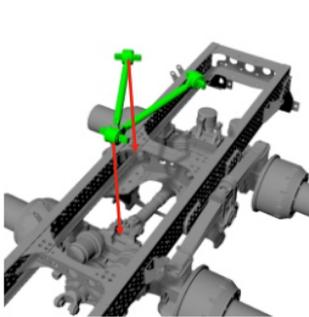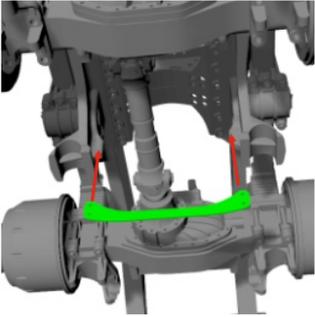

75. x4

76.




77. x4

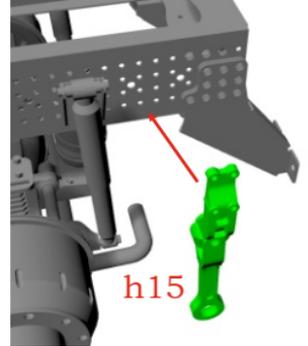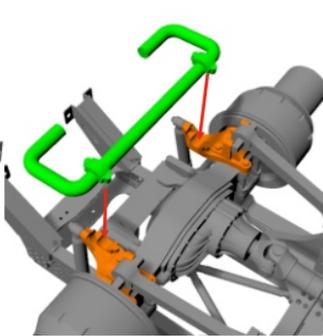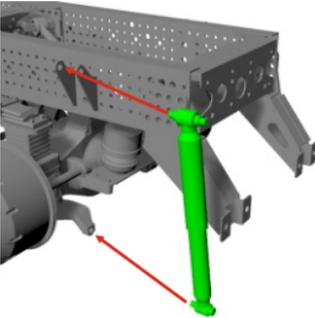

77.

78.


79.

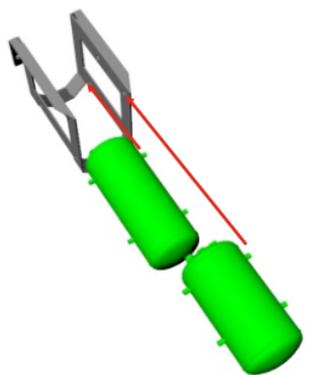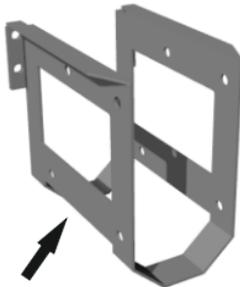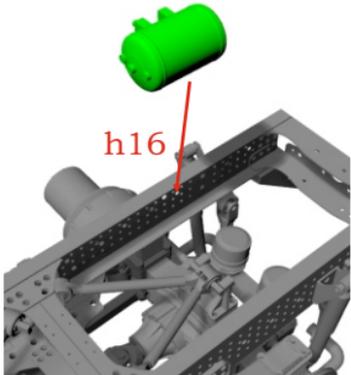

PE-part #64

8x8 chassis for German construction truck


80. 

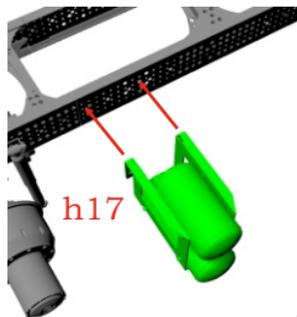


81. 




82.  x2

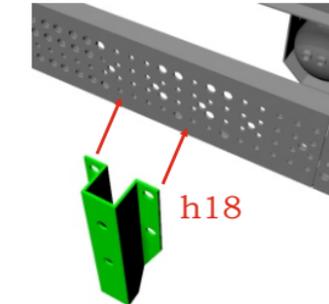


83.  x2

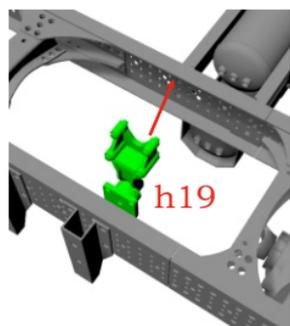


84.  x2

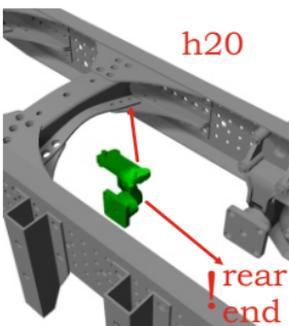


85.  PE-part #50

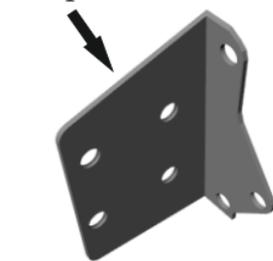


86.  PE-part #6

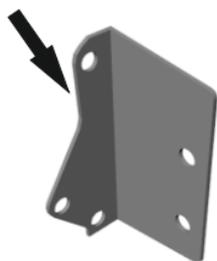

87. 

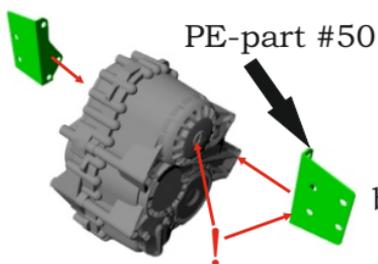


88. 

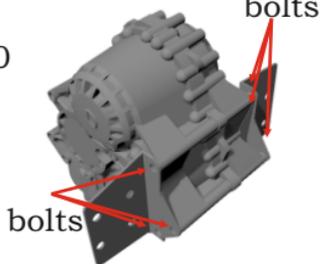


89.

Repeat steps 85-88 for left side.












90. 

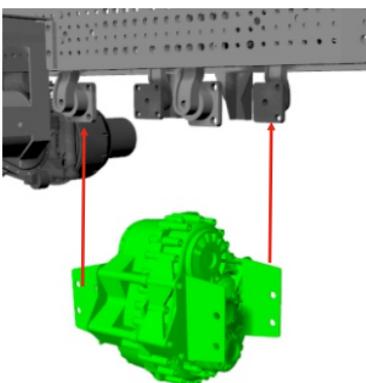

91. 

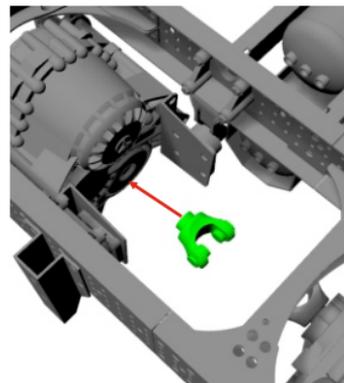


8x8 chassis for German construction truck

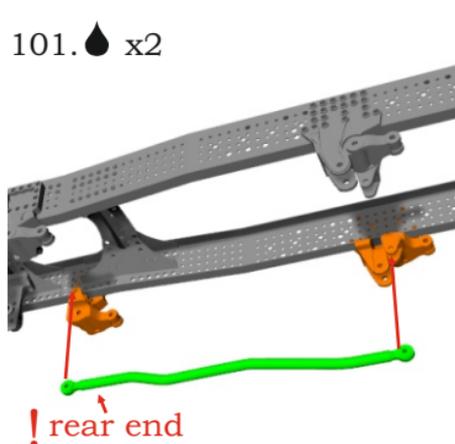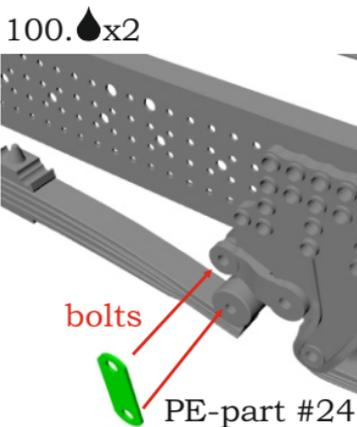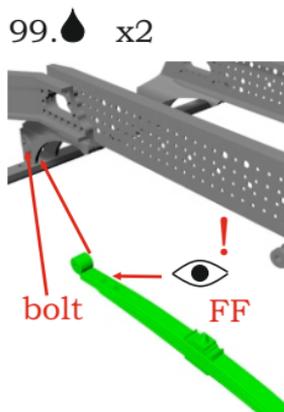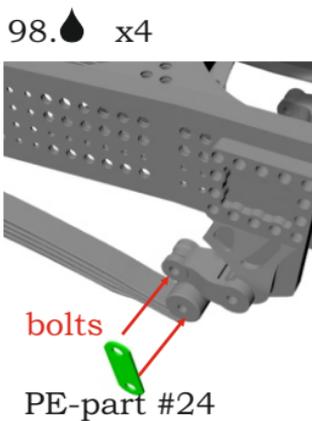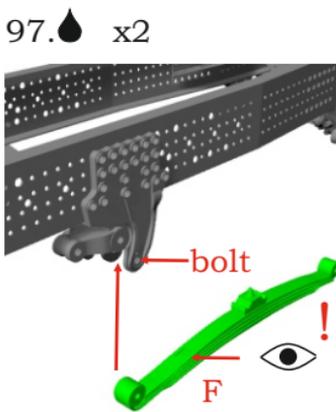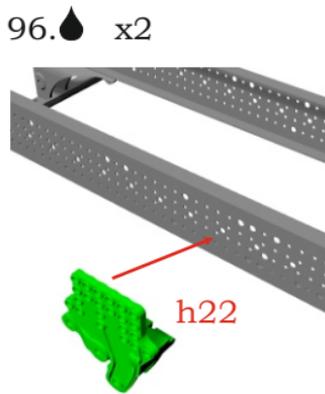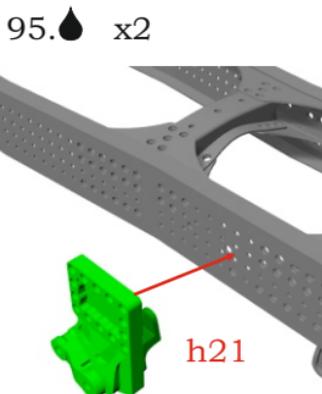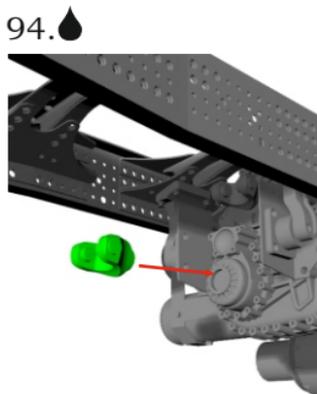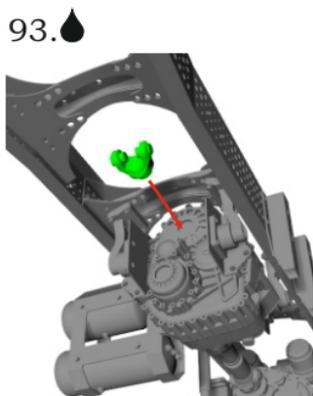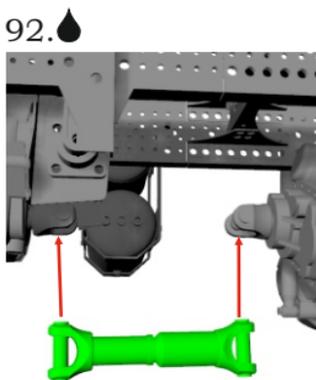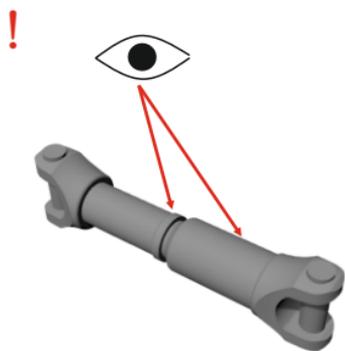


8x8 chassis for German construction truck


102.  x2

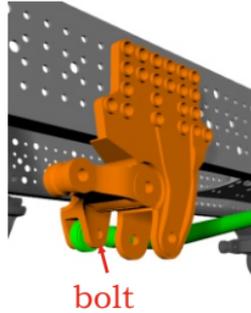


103.  x2

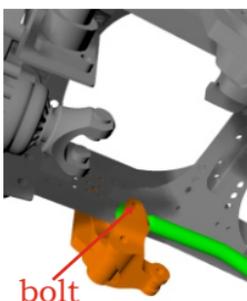


104. 

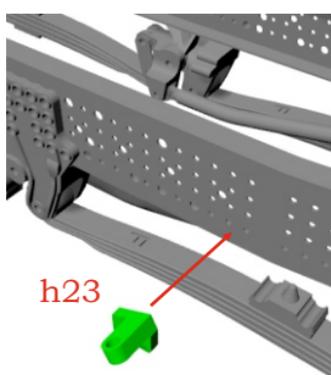

105. 

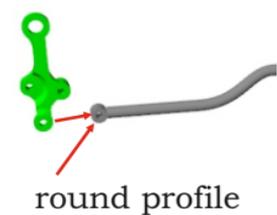


106. 

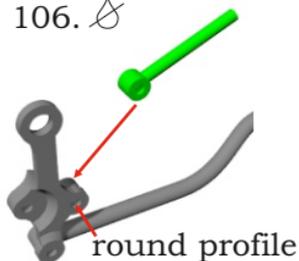


107. 


round profile

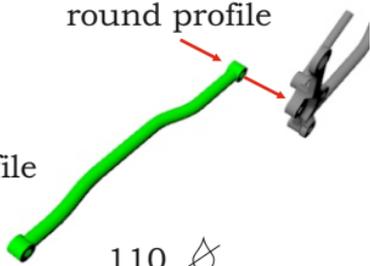


108. 

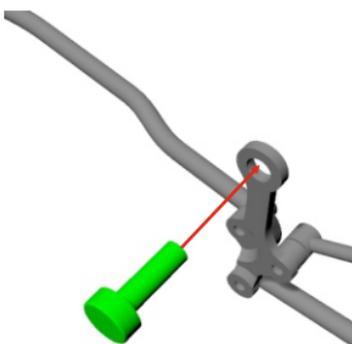


109. 

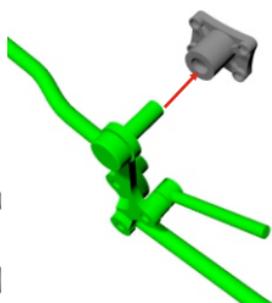


110. 

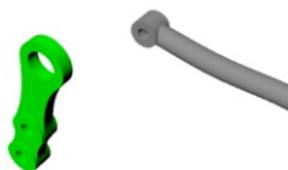


111. 

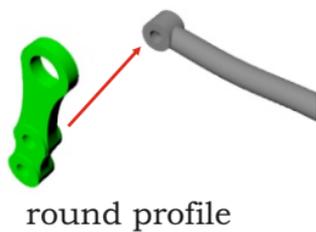

112. 

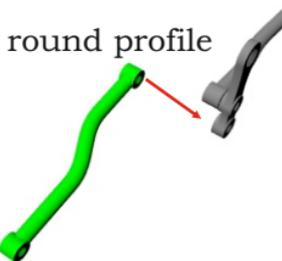


113. 

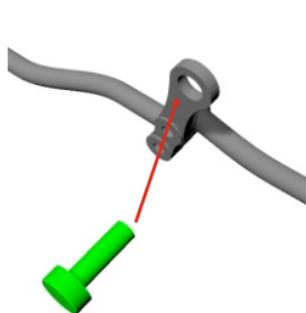


114. 




115. 

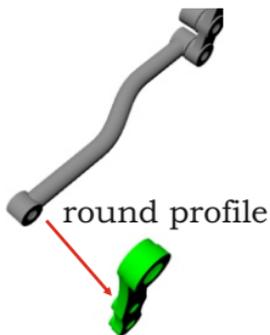


116.   
round profile

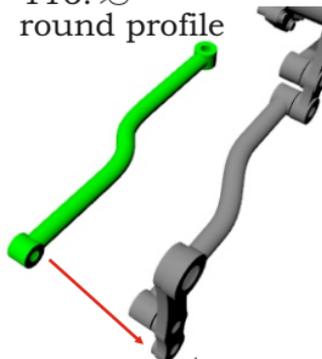


117. 

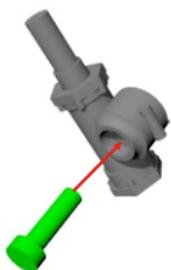


118. 

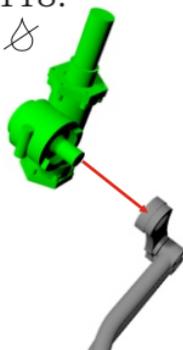


119. 

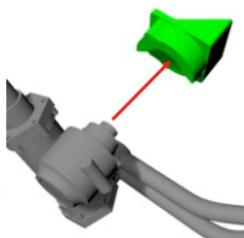


120.  x2

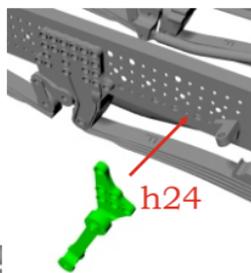


121.  x2

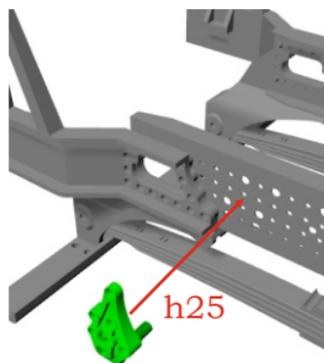


122. 

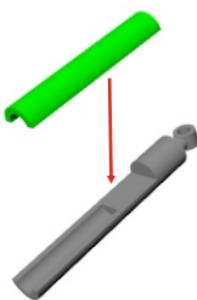


123. 

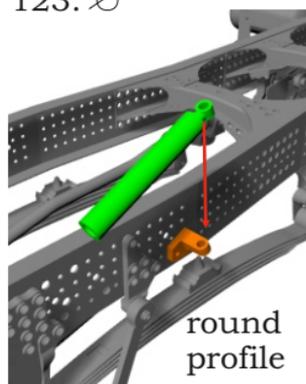


124.

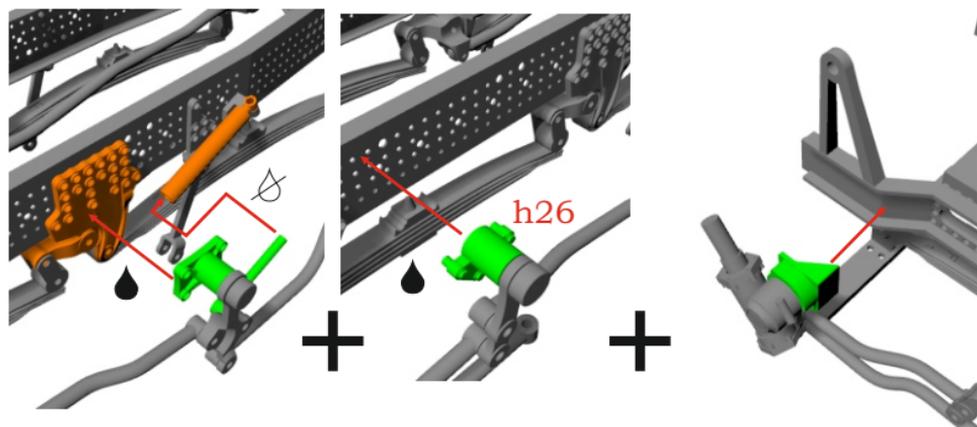

125. 

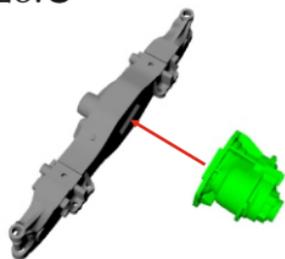


**! Correct position**

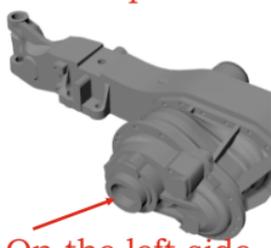


On the left side


126.  x2

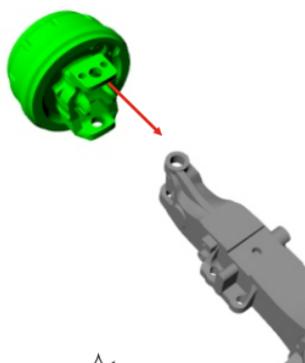


127.  x2

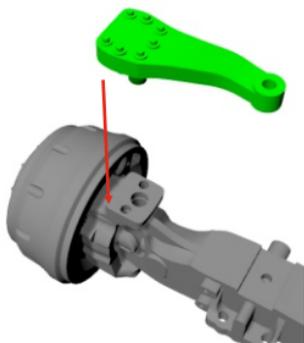

128.  x2

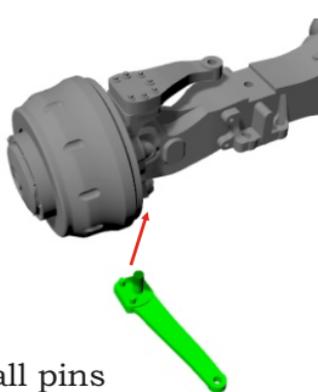


129. 

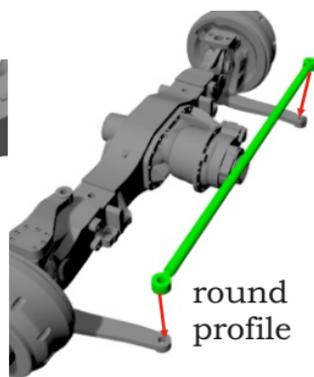


round profile

**!** Glue small pins only! Front wheels are steerable.


130.  x2

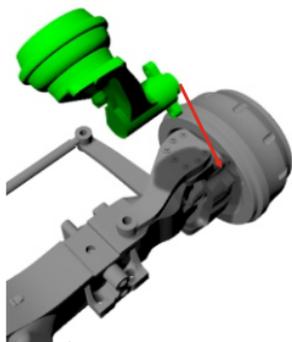


131. 

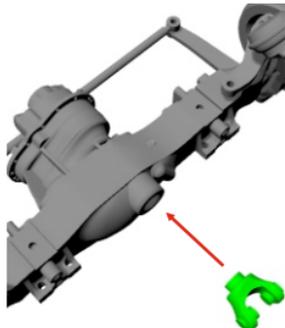


132. 

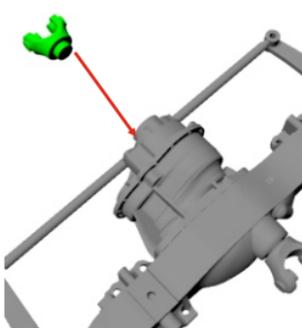


133. 

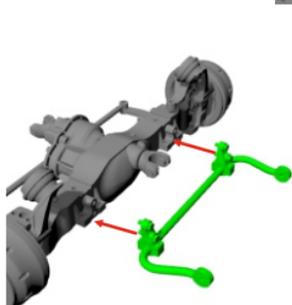

134. 

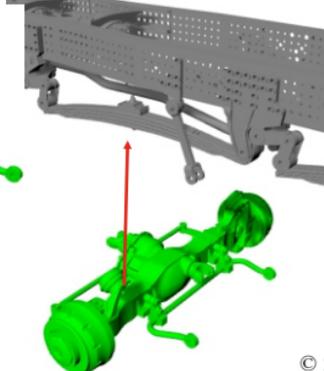


135.  x2

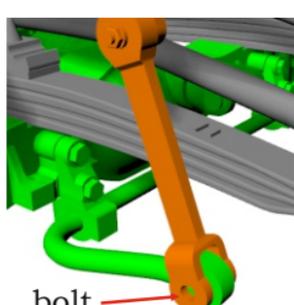


bolt

8x8 chassis for German construction truck


136.  x4

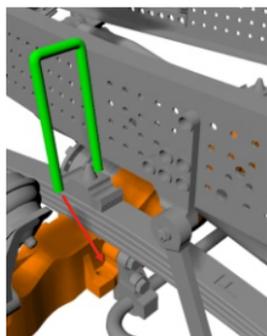


137. 

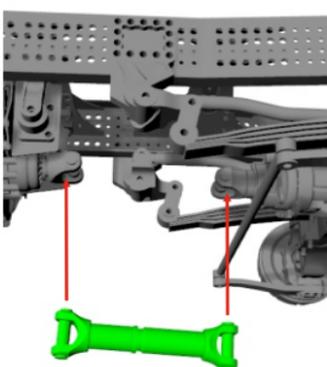


138.  x2

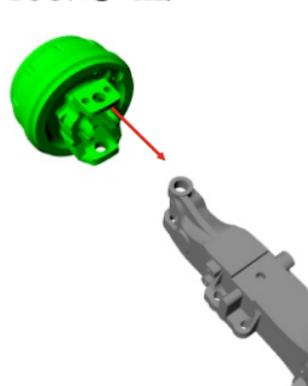


139.  x2

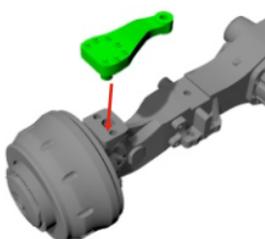

140.  x2

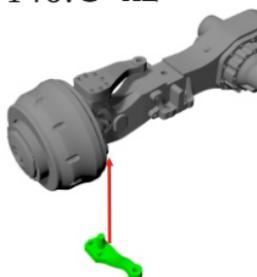


141. 

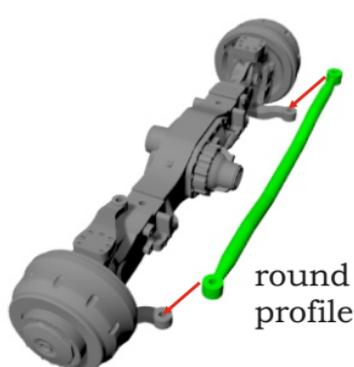


! Glue small pins only! Front wheels are steerable.


142. 

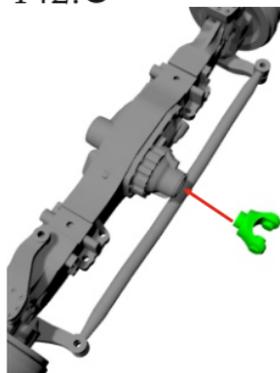


143. 

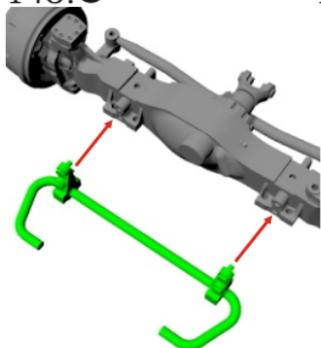


144.  x2

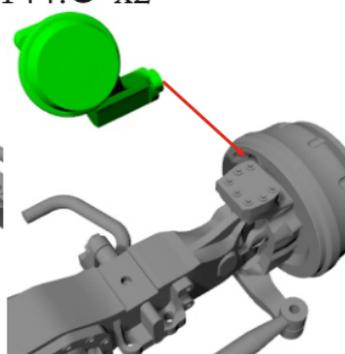


145. 

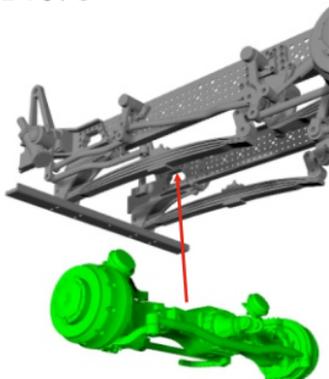

146. 

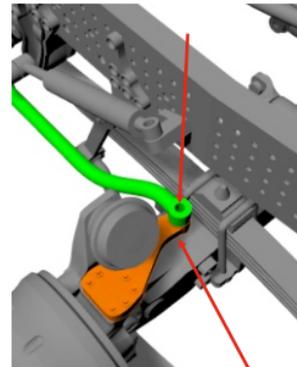


147. 

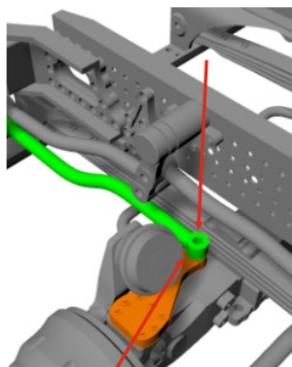


round profile

8x8 chassis for German construction truck


148.  x4

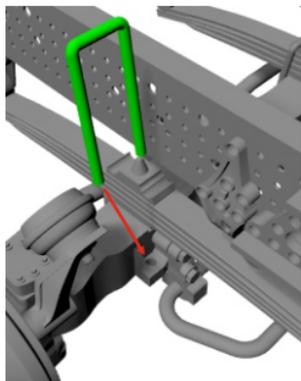


149.  x2

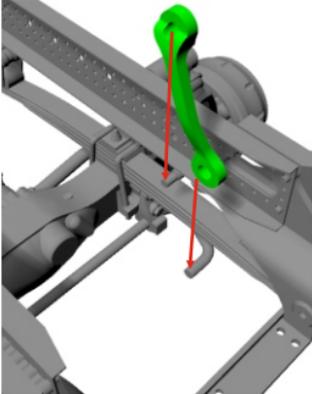


150.  x2

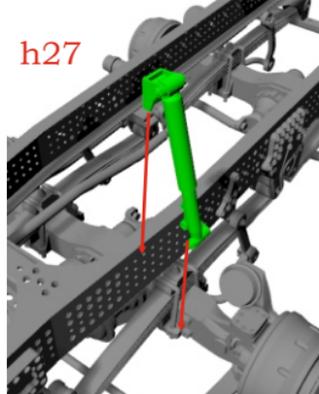


151. 

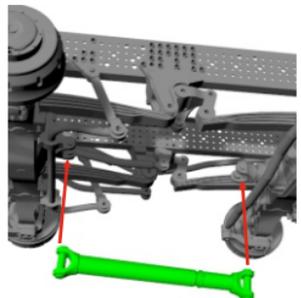


152.  x2

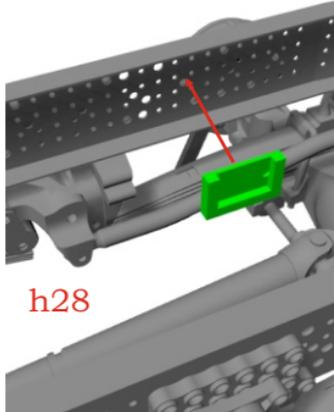


153.  x2

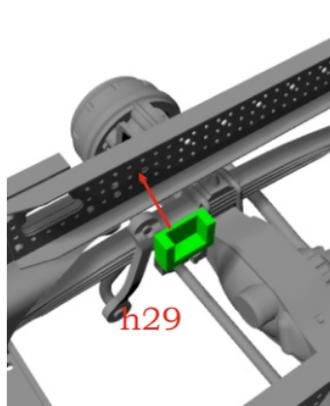


154.  x2

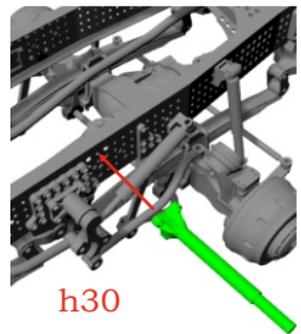


155. 

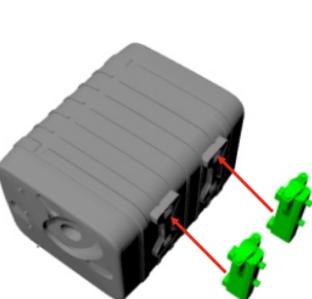


156. 

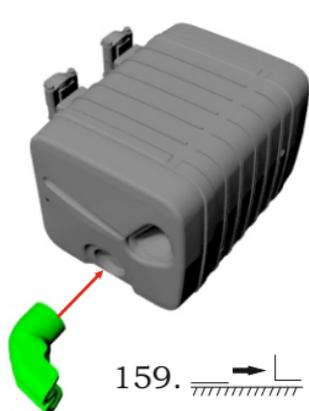

157. 

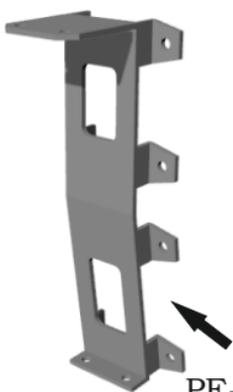

158. 

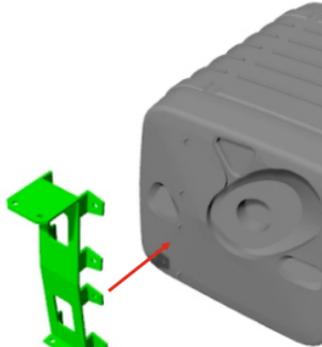


159. 




! Rear end

! Front end

160. 

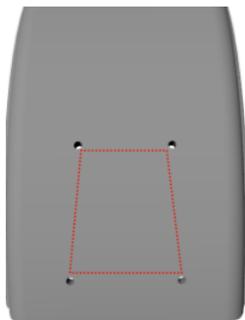

To rear end

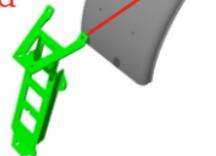

161.   
x2




PE-part #39


162.   
x2




PE-part #40

163. 


PE-part #11

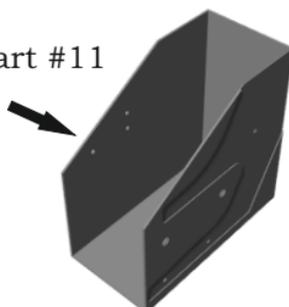


164.   
PE-part #23

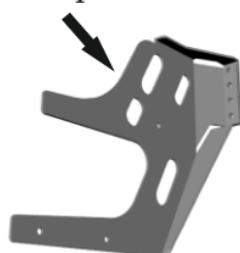


165. 

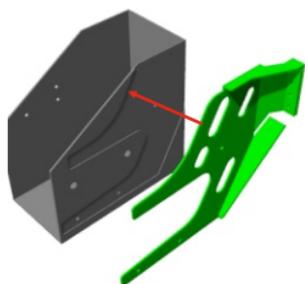

166. 

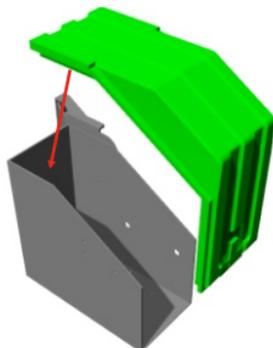


167. 

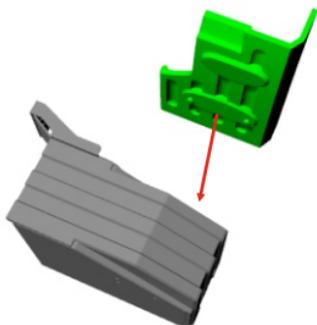


168. 

PE-part #39

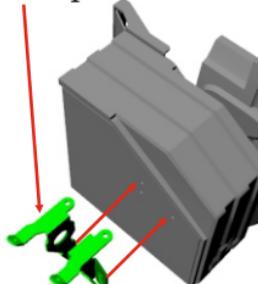

PE-part #40

169. 

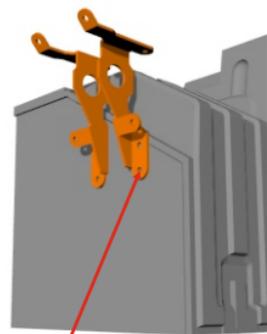


bolts 0.5 mm


8x8 chassis for German construction truck

170. 


bolts  
0.5 mm  
x4

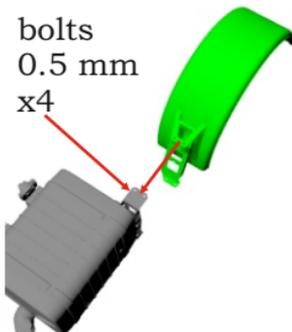


171. 

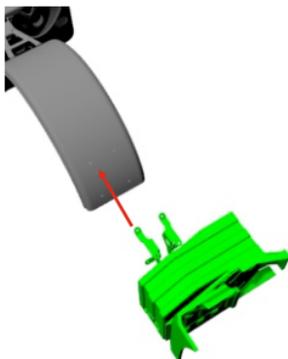


172. 

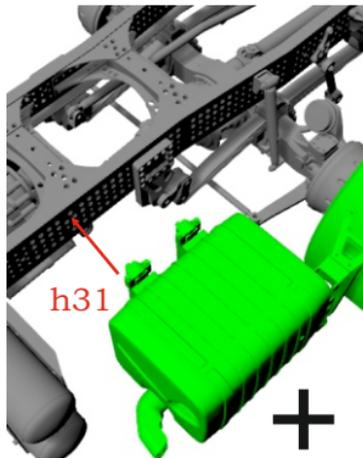





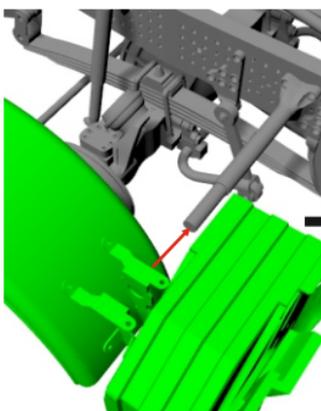



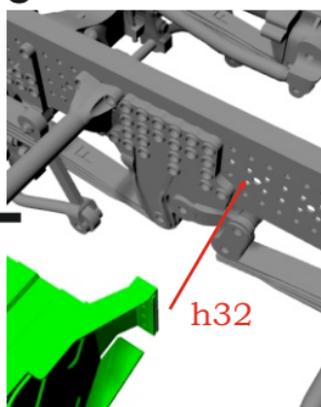

173. 

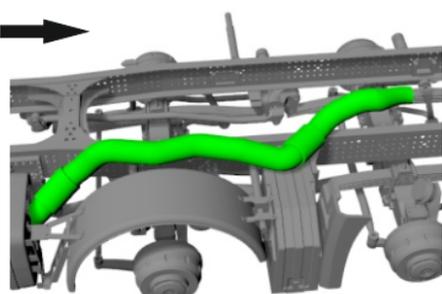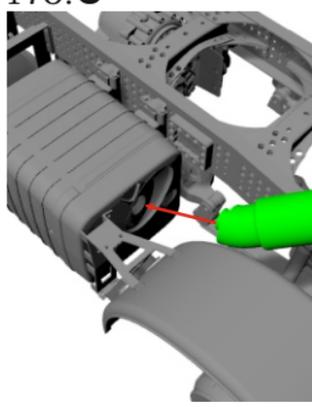


174. 

To glue  
engine in


175. 

PE-parts #12, 13

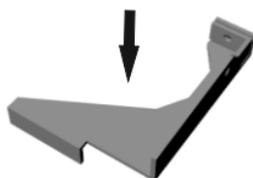


176. 

PE-parts #14, 15

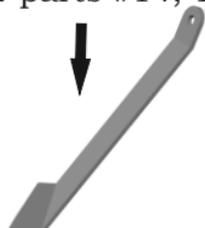

177. 

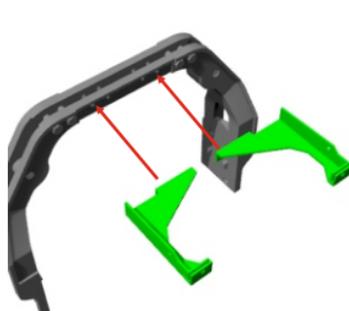

178.  x2




8x8 chassis for German construction truck


179. 




180. 

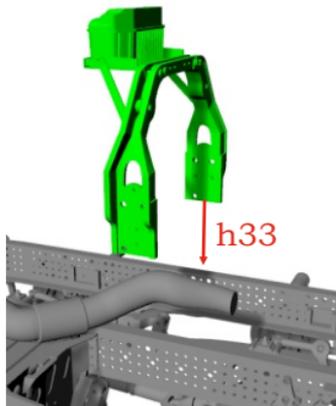


181.  x2

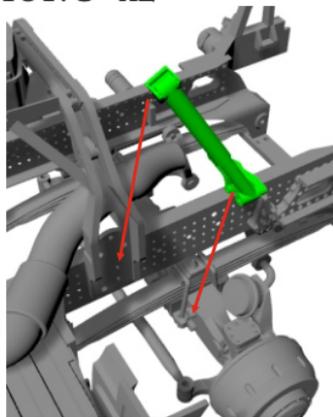


182. 

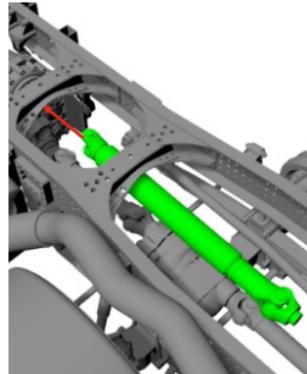


183. 

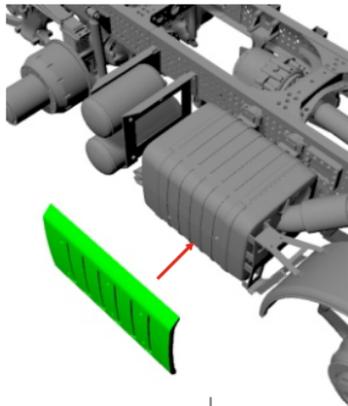

184.  PE-part #27

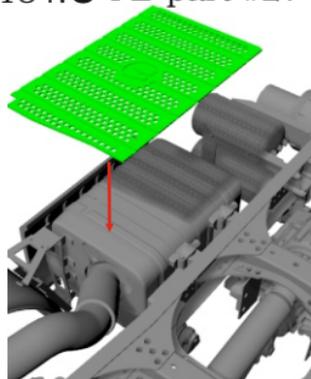


185.  PE-part #26

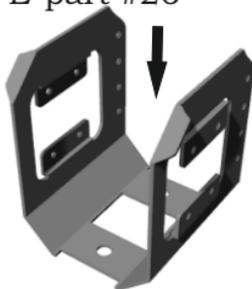


186.  PE-part #43



187. 

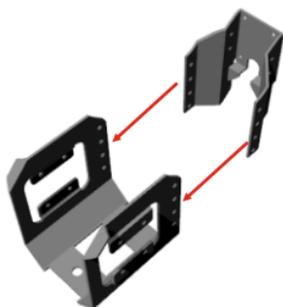

188.  x2  
PE-part #45

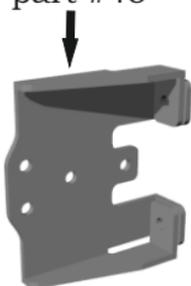


189.  x2  
PE-part #18




8x8 chassis for German construction truck


190.  x2

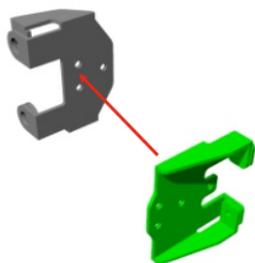


191. 

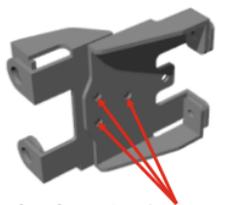


bolts 0.5 mm

192. 

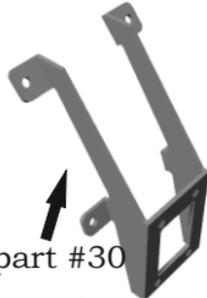


PE-part #30

193. 

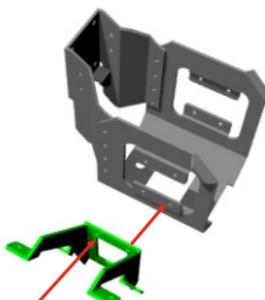


bolts 0.5 mm

194. 

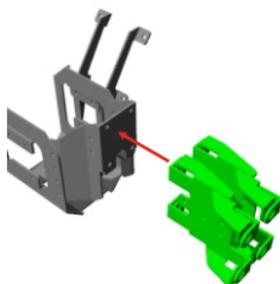


195. 

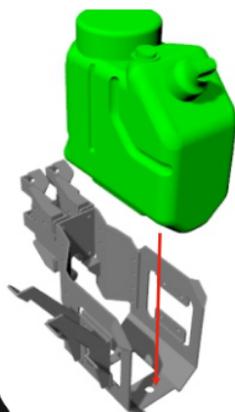


196. 


PE-part #35

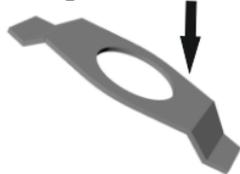

197. 

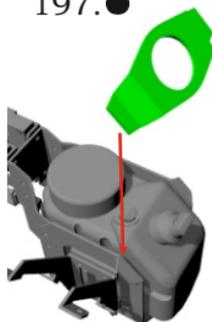


198. 

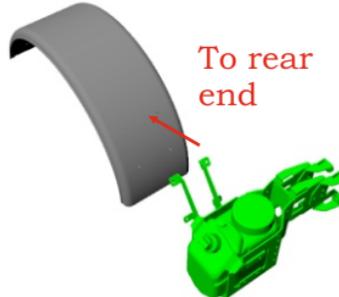


To rear end

199. 

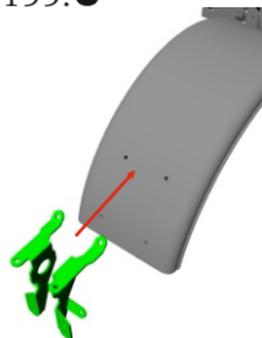

200. 

PE-part #19

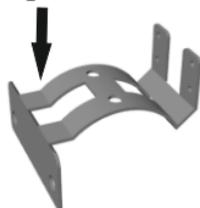

!  
Correct shape



8x8 chassis for German construction truck


201. 

! **Correct shape**


PE-part #5




202. 

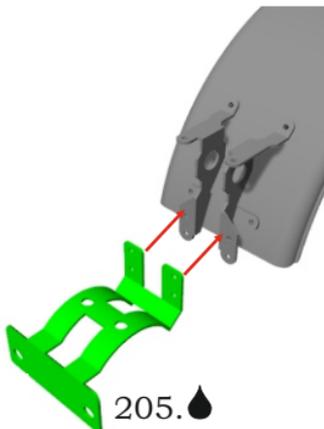


203. 

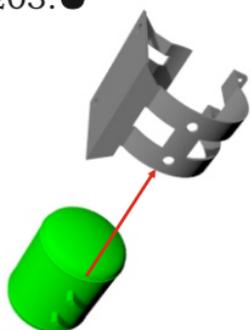


204. 

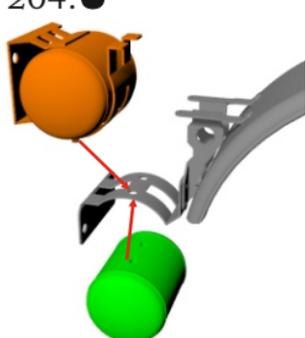


205. 

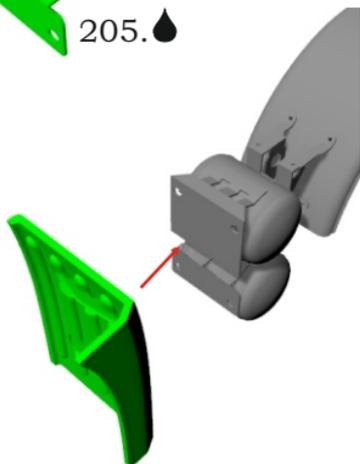


206. 

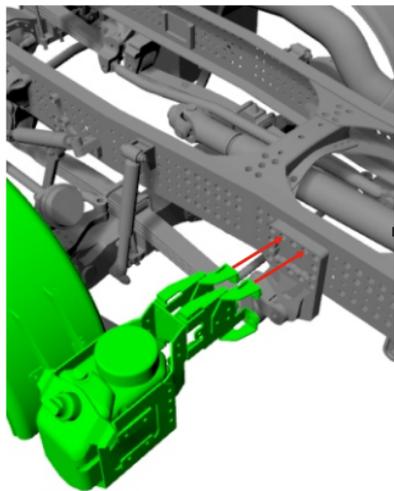

+

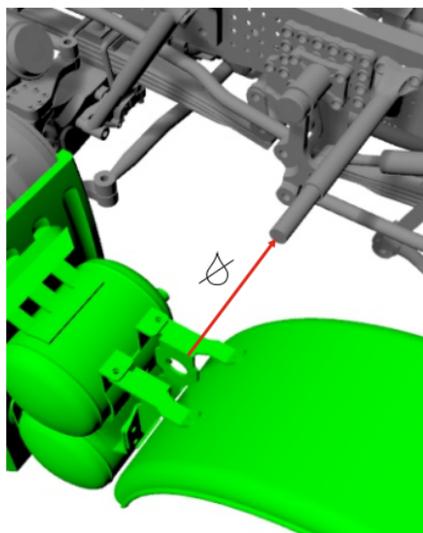


207. 

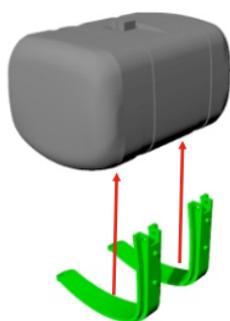


208.    
x2




209.  x2

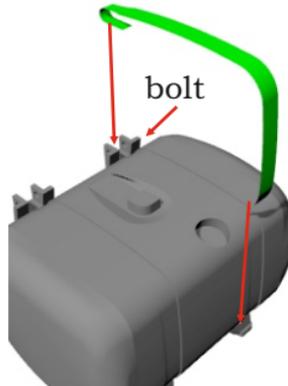


210. 

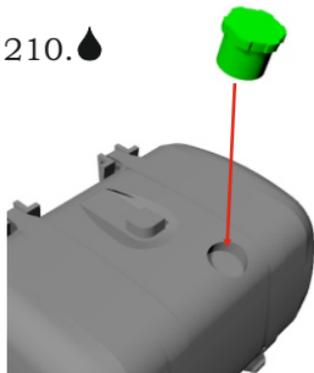


211. 

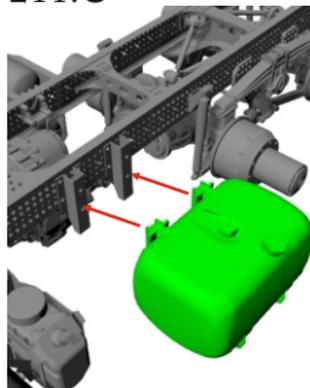


212. 

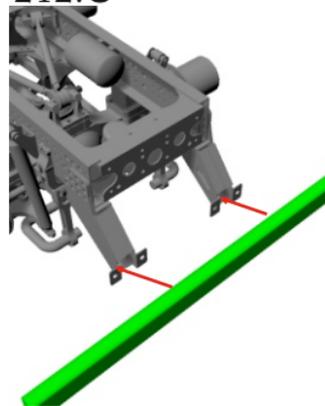

213.  x2  
PE-parts #56, 57

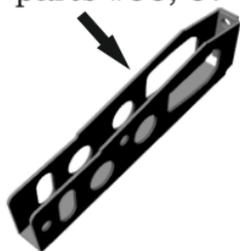


214.  x2

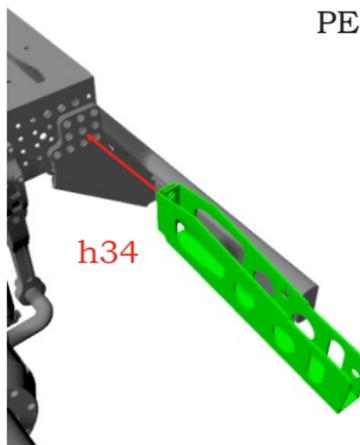

215.  x2  
PE-parts #58, 59




216.  x2

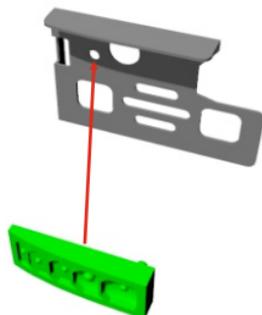

217.  x2




218.  x2

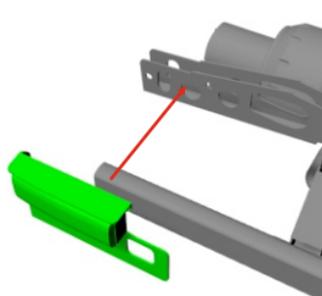

8x8 chassis for German construction truck

219. 

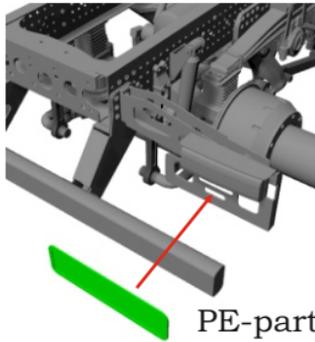

PE-part #21