



Aussie K200 truck
(flat roof).
Resin kit, 1/24

© 2019 by A&N Model Trucks.

Warning!

This kit requires a donor chassis. As default chassis we suggest to use Italeri's generic American chassis (except Volvo VN and Perbilts).

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.


This model kit is for advanced modellers only!

You can download this instruction as PDF-file at the our site at «Instructions» section, or use QR-code on the last page.

Symbols:


 - glue parts;


 - do not glue parts;

 - bend parts;



 - attention;



 - moving parts;

 - your choice;

 - cut;


Numbers of photo-etched parts

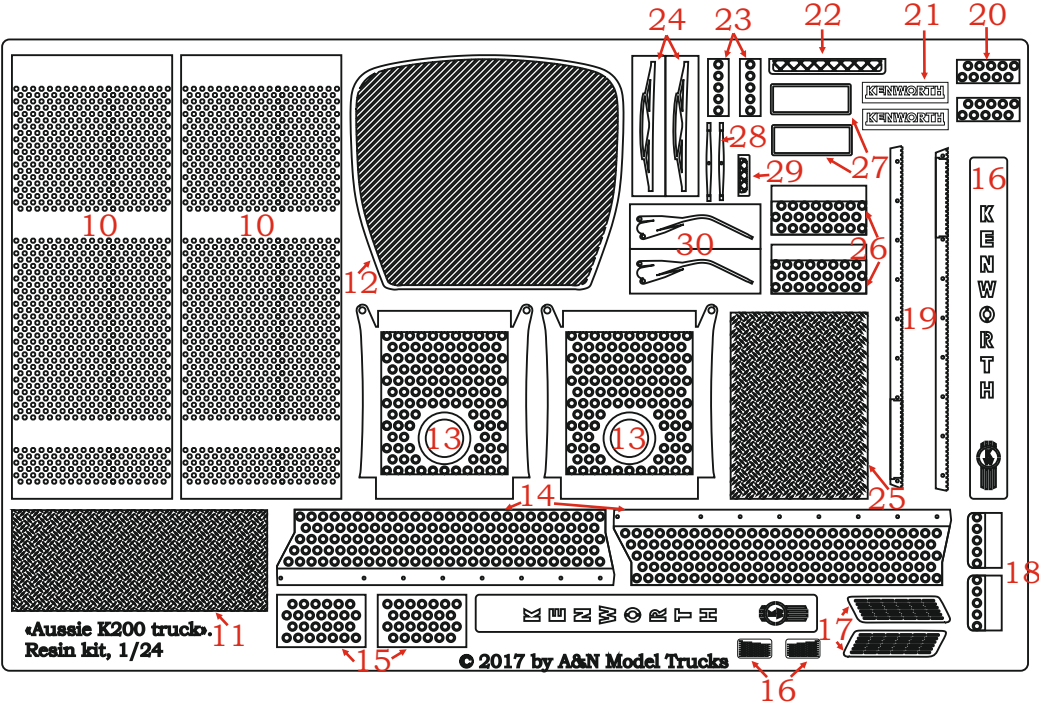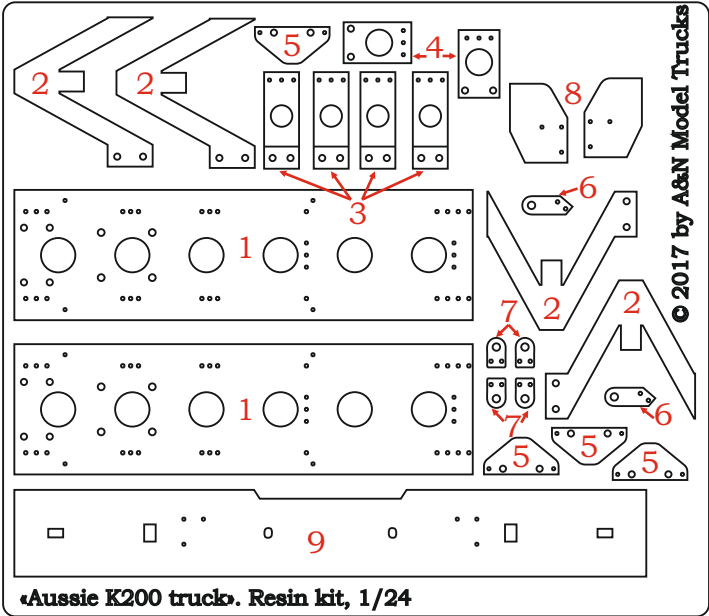

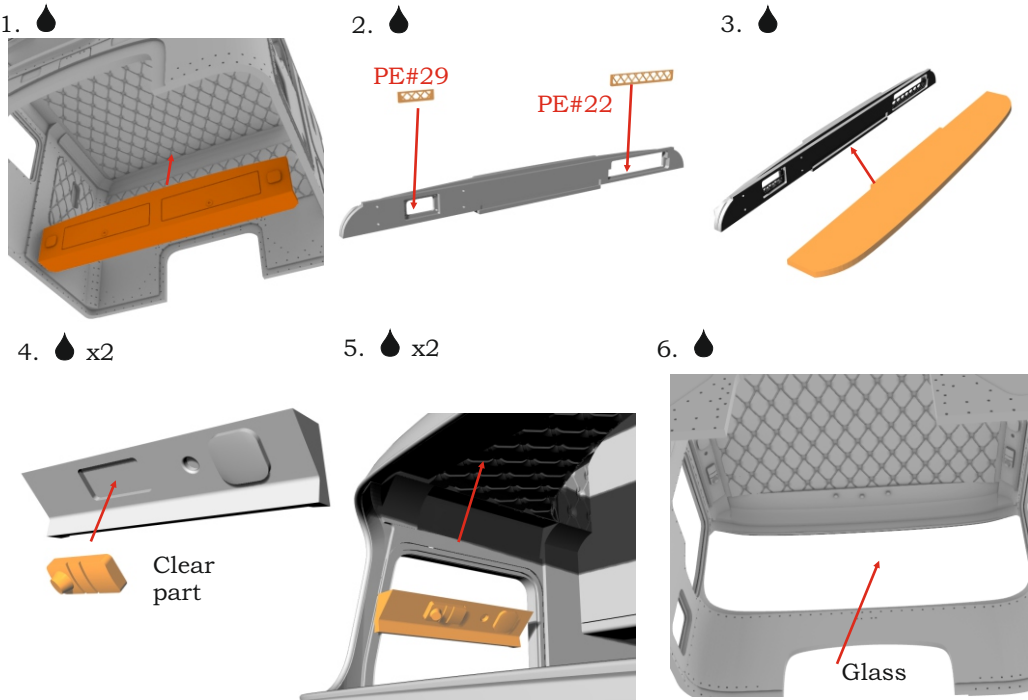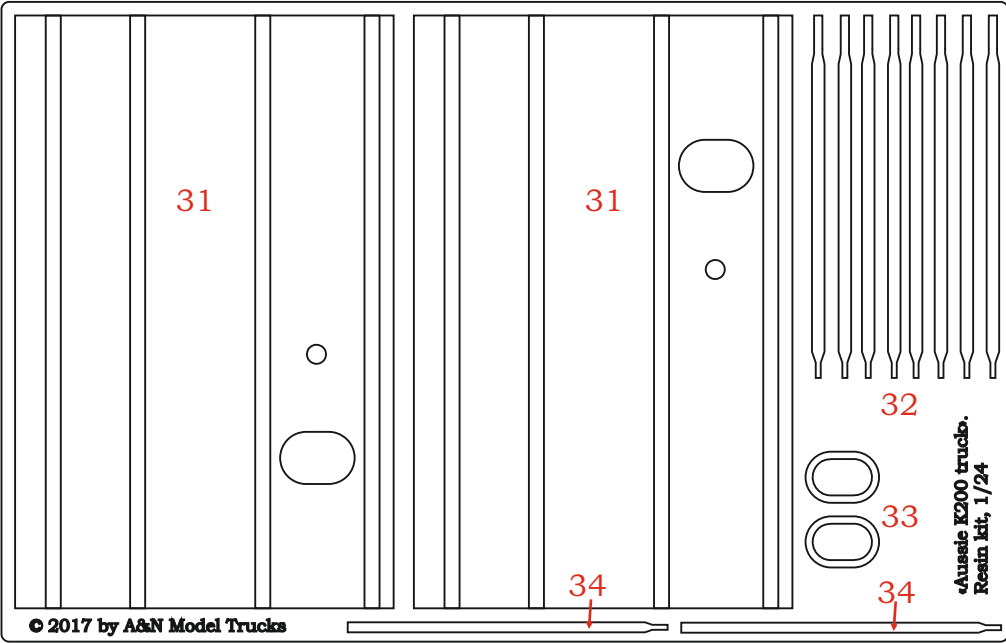


Aussie K200 truck (flat roof). Resin kit, 1/24


7. 

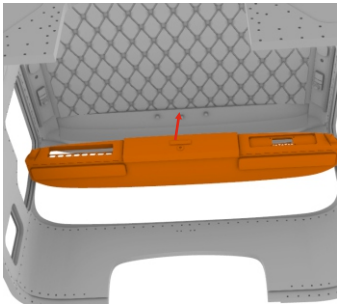


8. 

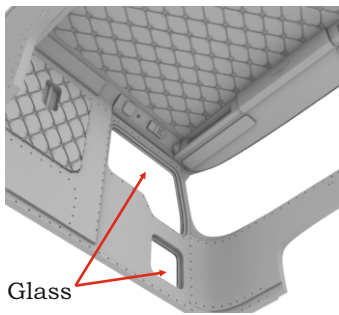


9. 

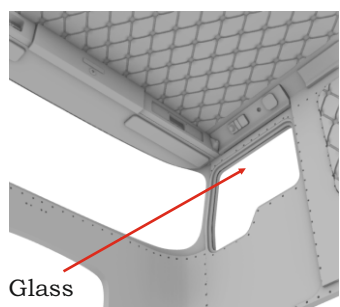


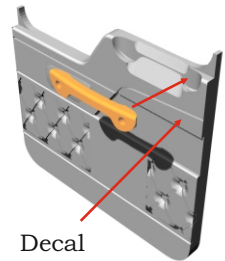
10.  x2

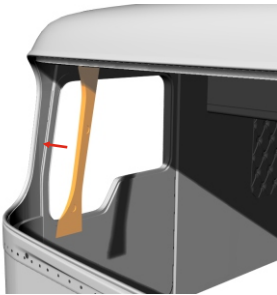


11.  x2

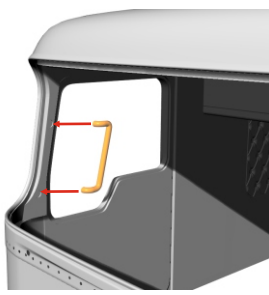


12.  x2



13.  x2

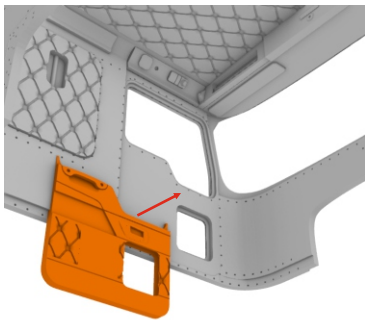


14. 

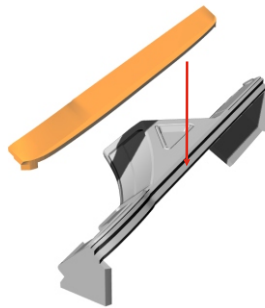


15. 




16. 

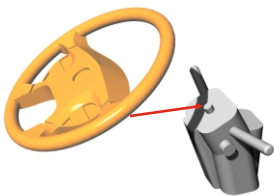

17. 

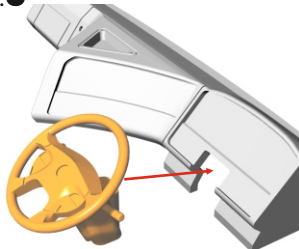


18. 

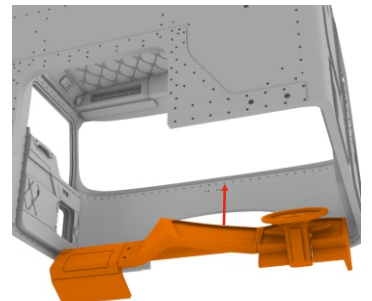


Aussie K200 truck (flat roof). Resin kit, 1/24


19.  x2




20.  x2

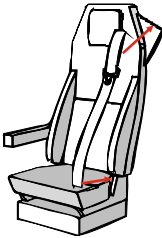


21. 

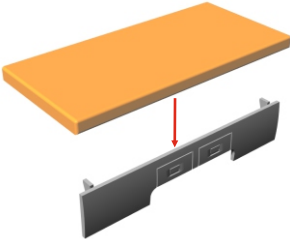


22. 

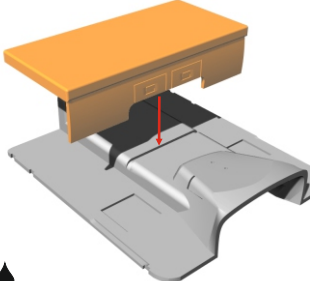


23. 

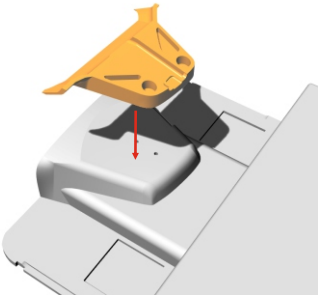

24. 

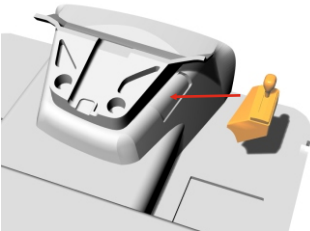


25. 

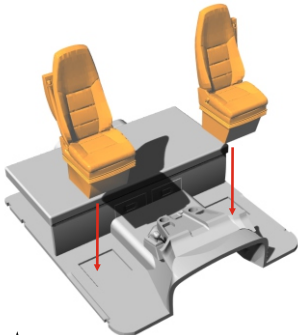

26. 




27. 

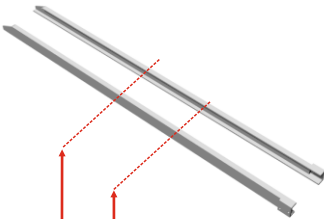


Optional

30.  x2

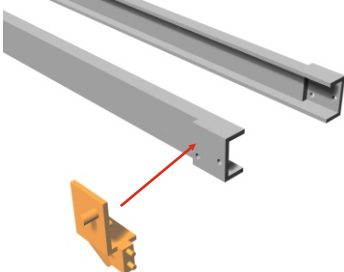


28.  x2

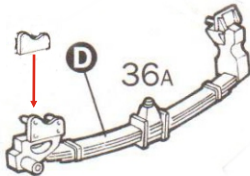


29. 

Move front axle backward for 10 mm.


31. 

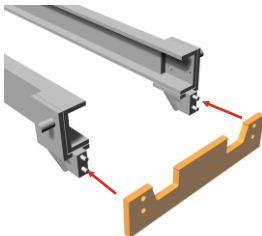













Aussie K200 truck (flat roof). Resin kit, 1/24

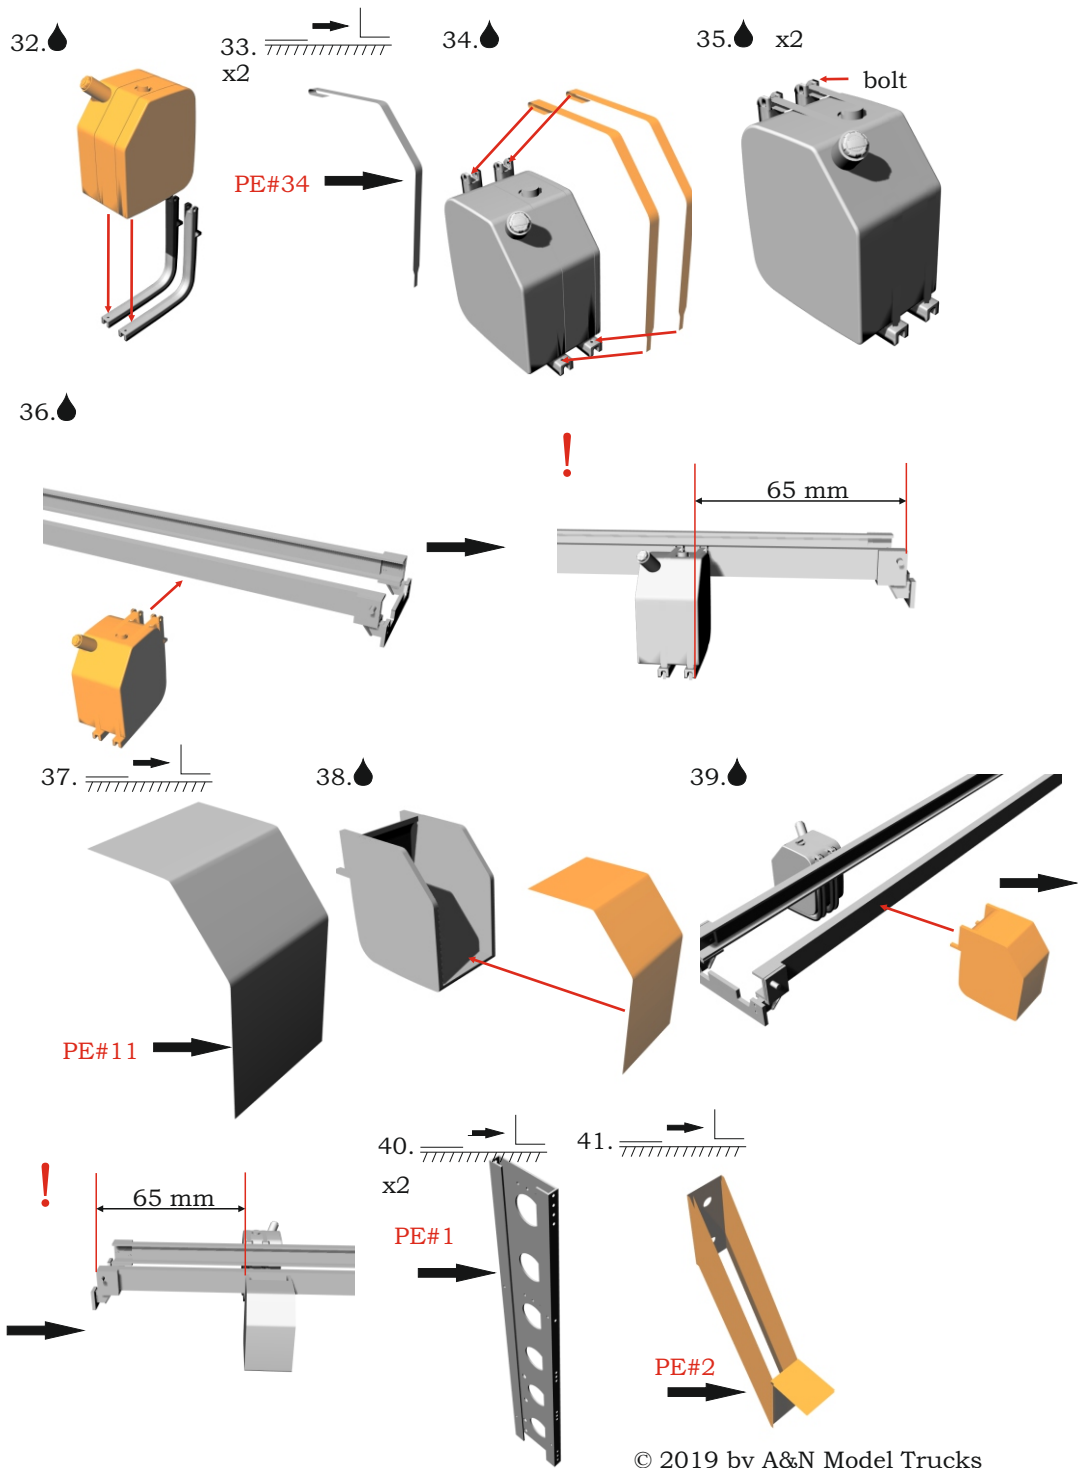



Aussie K200 truck (flat roof). Resin kit, 1/24

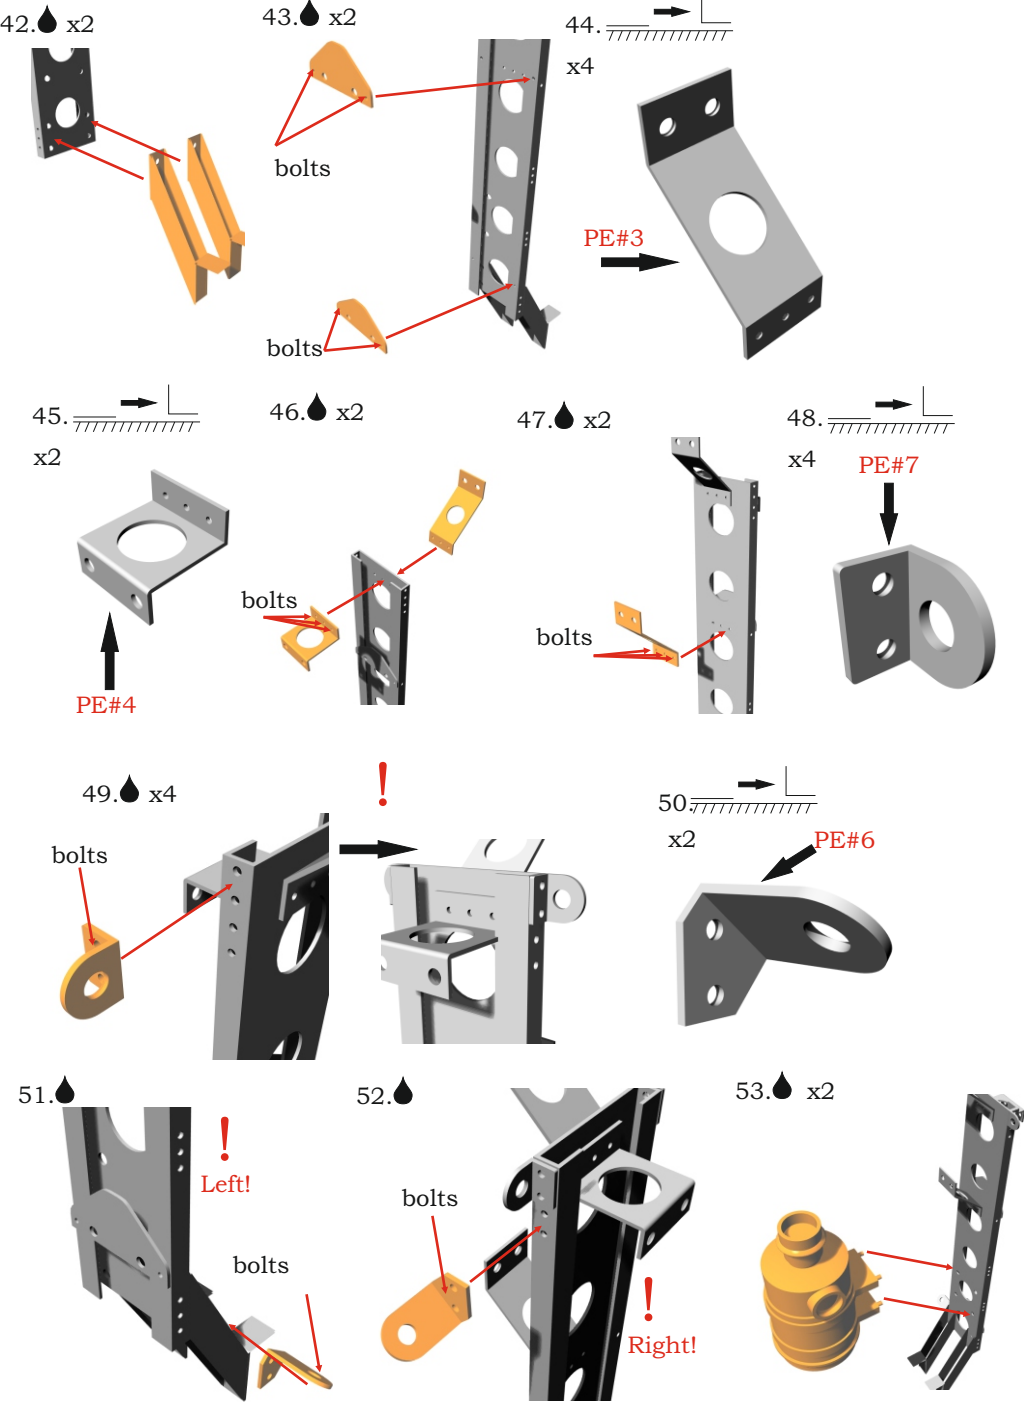

Aussie K200 truck (flat roof). Resin kit, 1/24

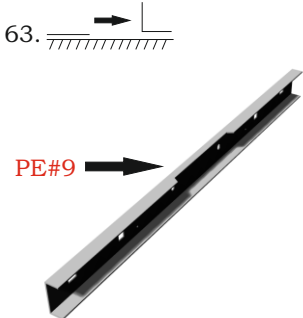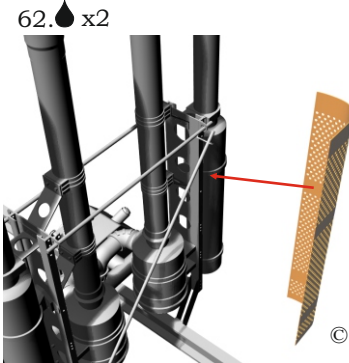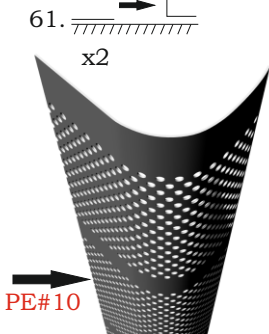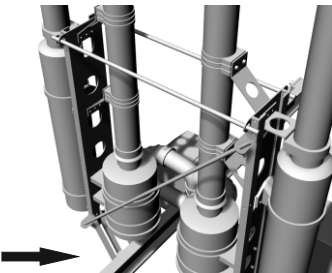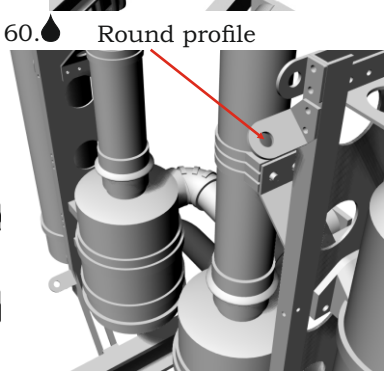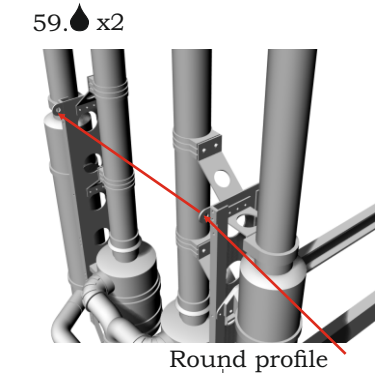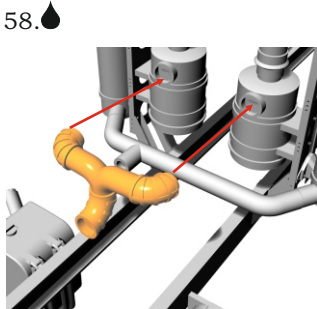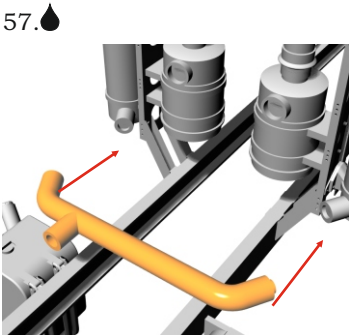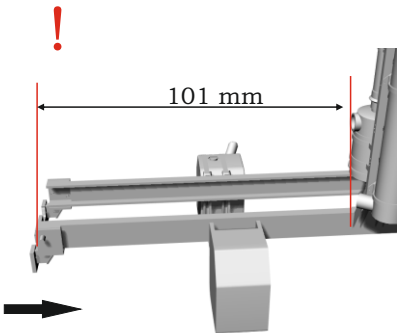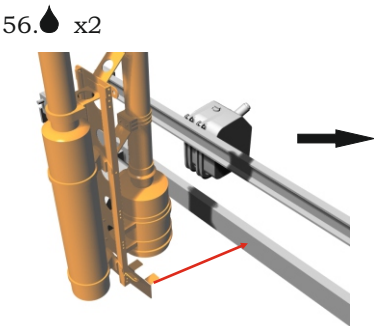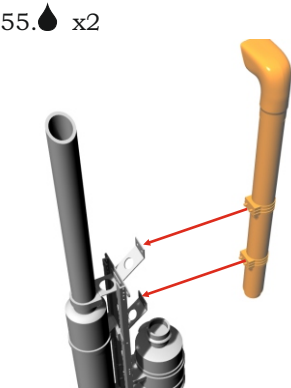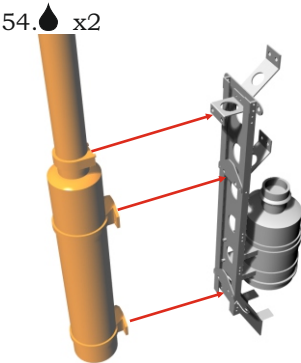

Aussie K200 truck (flat roof). Resin kit, 1 / 24

64.  
x2

PE#8 

65.  x2

bolts 

66.  x2

67.  x2

68.  x2

69. 

Clear part 




PE#27 

Decal 

70. 

71.  x2




72.  x2

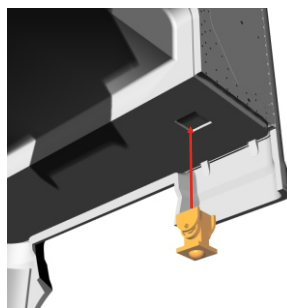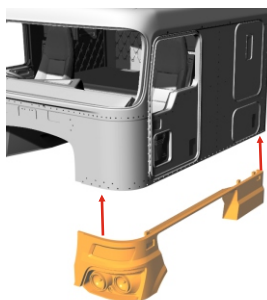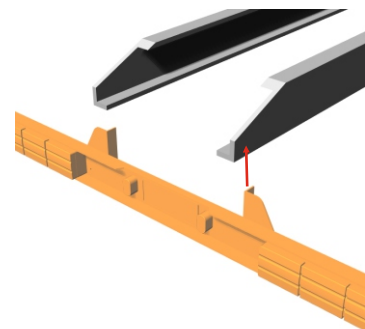

73.  x2


74. 

75. 

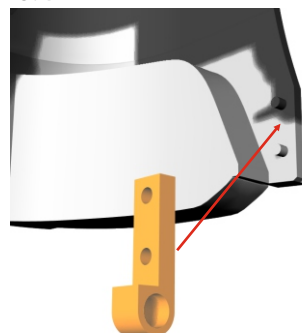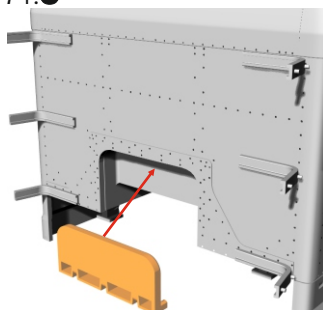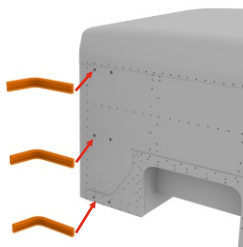



Aussie K200 truck (flat roof). Resin kit, 1/24

76.  x2



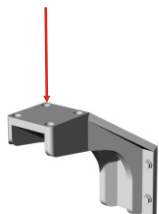


Front side


77. 

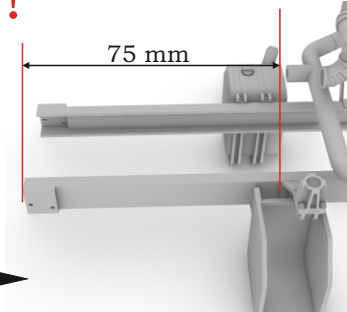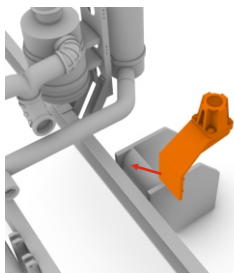


78. 

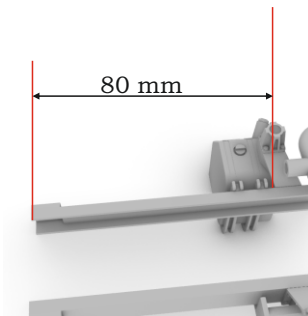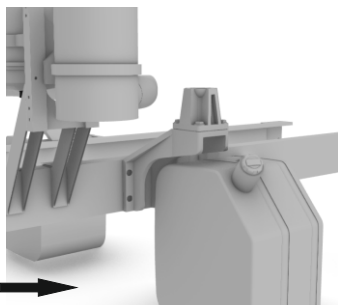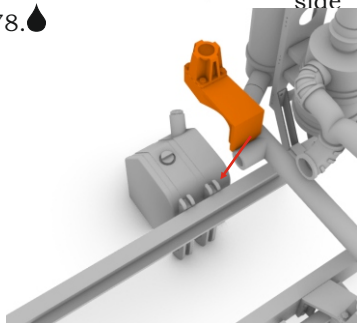


79. 

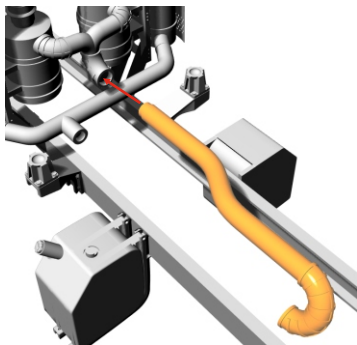


80. 

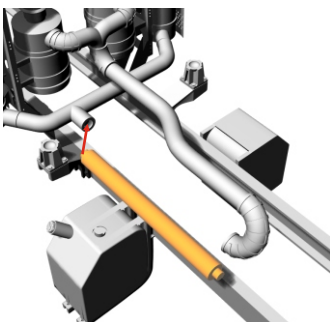


81. 

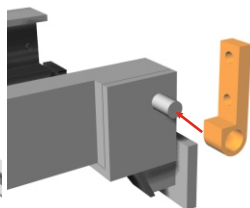


82. 

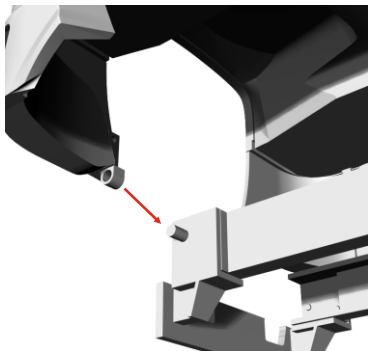

83. 

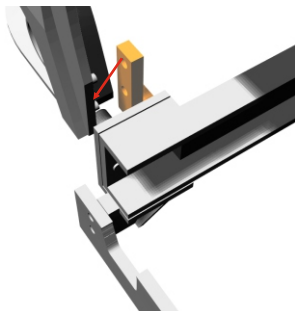


84.  x2




Clear part

Aussie K200 truck (flat roof). Resin kit, 1/24


85.  x2

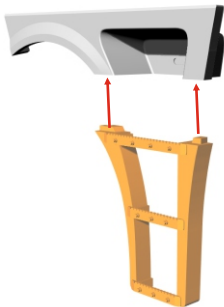


86.  x2

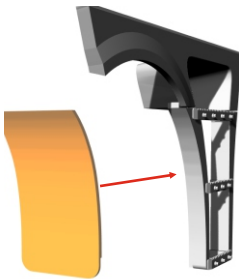


87.  x2

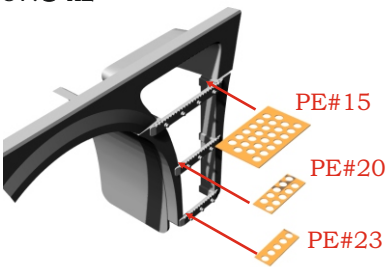


88.  x2

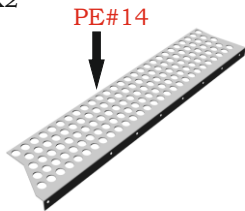


89.  x2

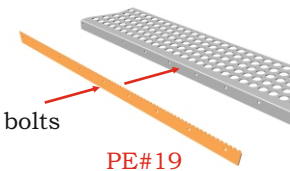


90.  x2

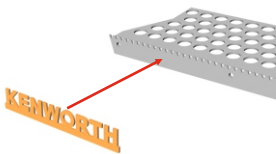


91.  x2

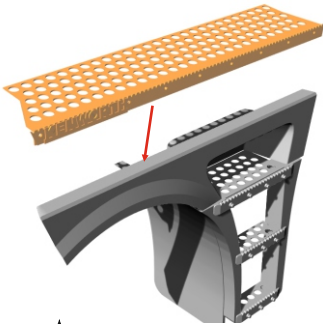


92.  x2

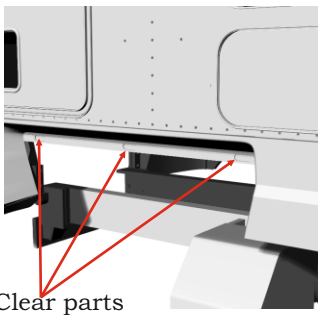


93.  x2

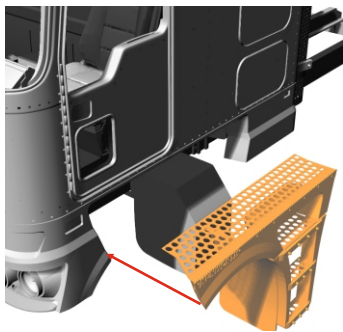


94.  x2

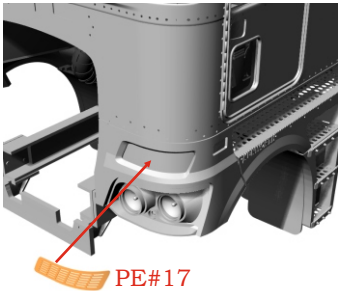

95.  x2

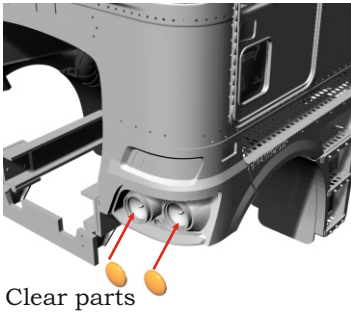


96.  x2

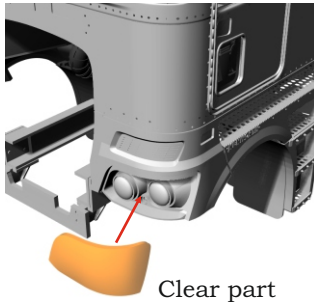


Aussie K200 truck (flat roof). Resin kit, 1/24


97.  x2

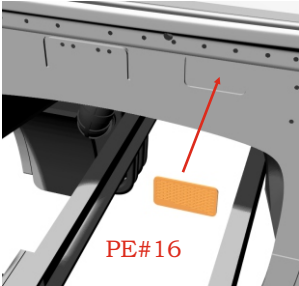


98.  x2

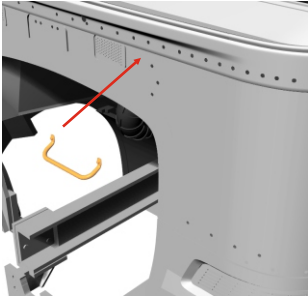


99. 

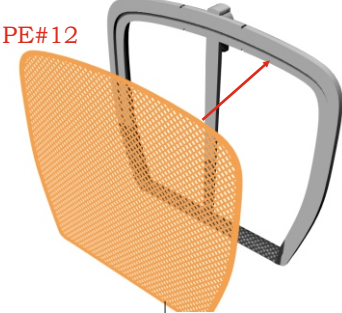


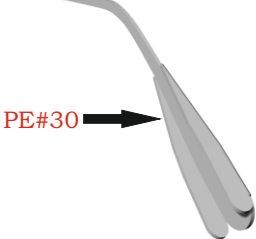
100. 

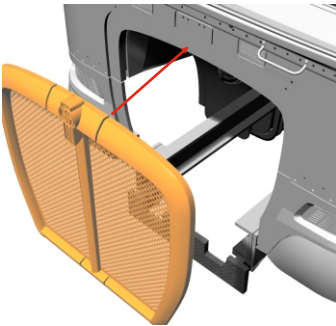


101.  x2

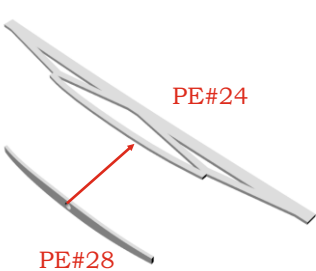


102.  x2




103.  x2

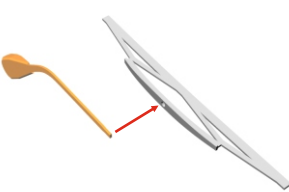

104.  x2

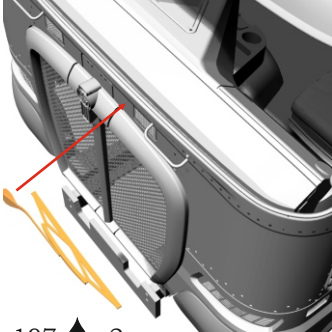


105.  x2

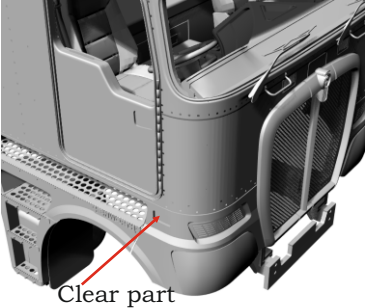


106.  x2



107.  x2

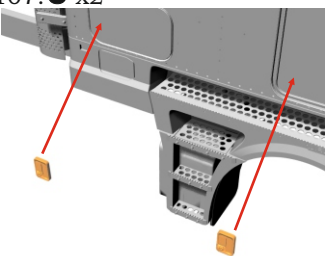

108.  x2

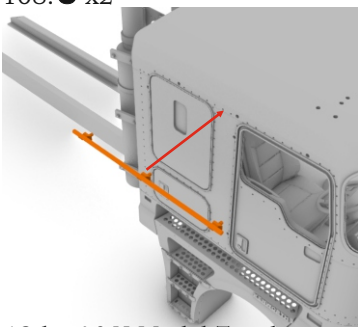


Aussie K200 truck (flat roof). Resin kit, 1/24




Bottom

109. x2

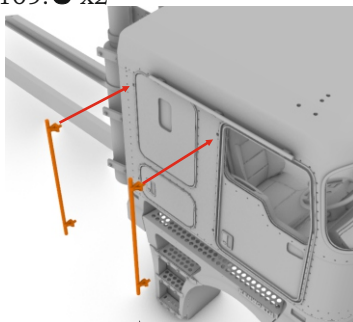


To cab's front


110. x2

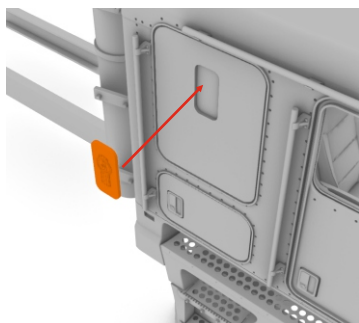


111. x2

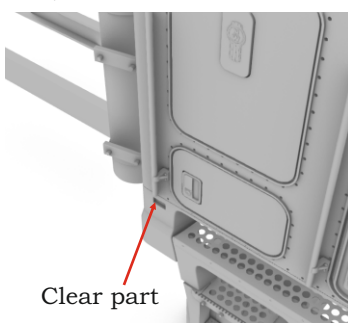


112. x2

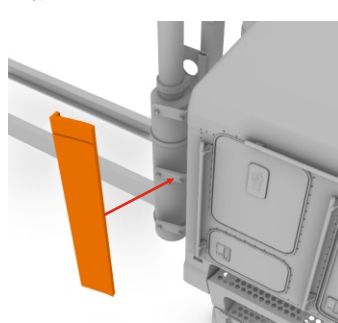


113. x2

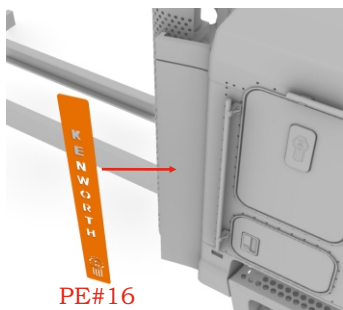


114. x5

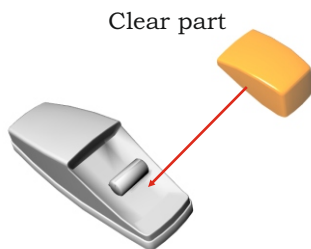


115. x5

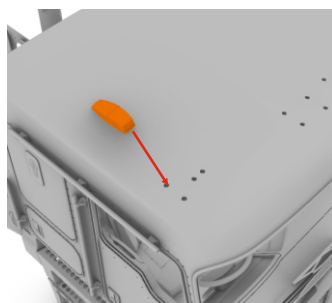


116. x2

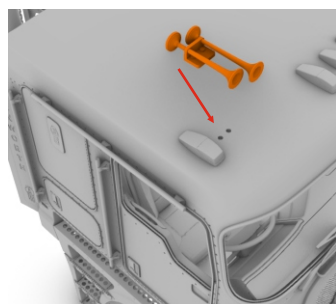

117.

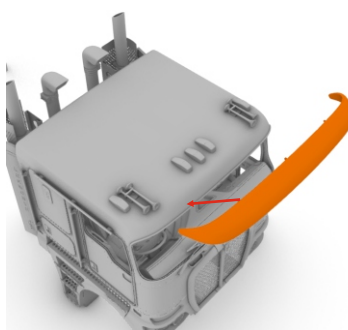

118.

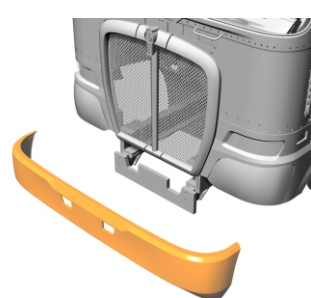





For detailed photo-instruction how to make photo-etched fuel tanks, please see the article at the our site. Section «Instructions->photo-instructions». Or use QR-code on the right.




119. x2




PE#31

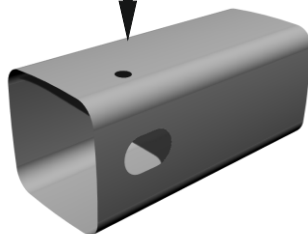


120. x2

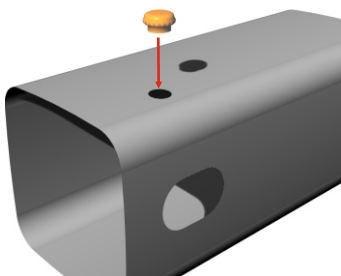


121. x2

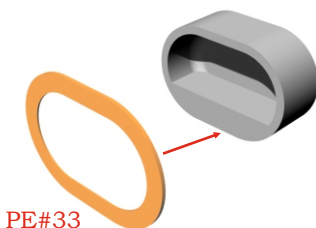


122. x2

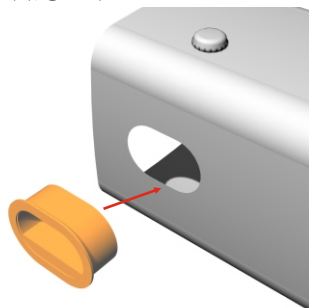


123. x4

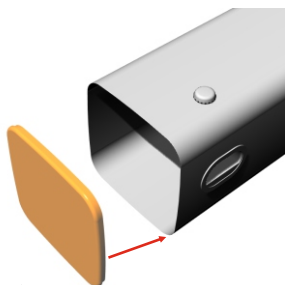


124. x8

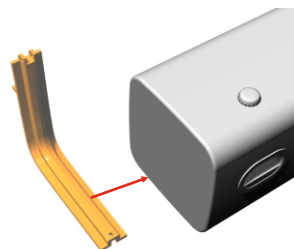


125. x2

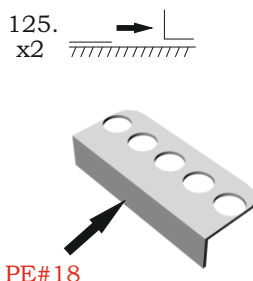


126. x2

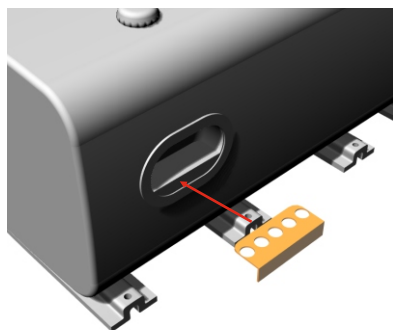

127. x2

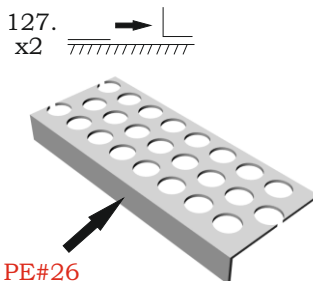

128. x2

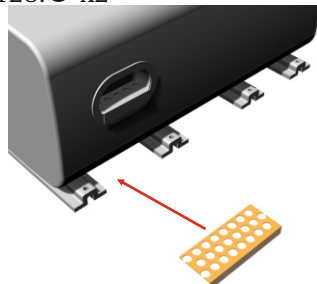

Aussie K200 truck (flat roof). Resin kit, 1/24

