

A&N Model Trucks

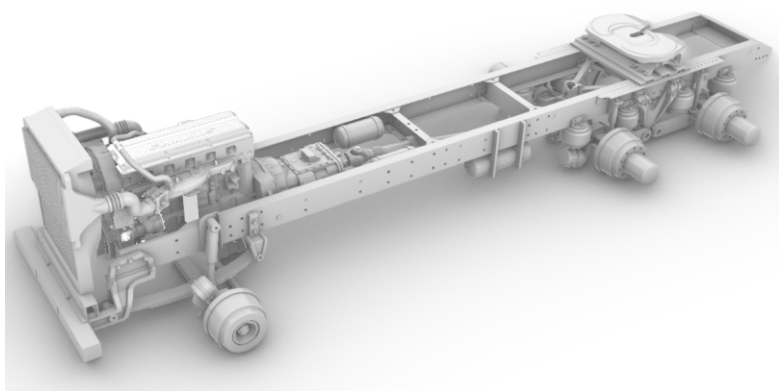


Photo-etched chassis for
Aussie T610 regular truck

Scale 1/24

Warning!

Please follow this instruction while assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.

This model kit contains small parts and is not suitable for children.

This model is for advanced modellers only.

Symbols:

● - glue parts;

⊗ - do not glue parts;

→└┐ - bend parts;

! - attention;

↔ - moving parts;






? - your choice;

h# - frame rails holes' numbers;

1. →└┐

2. →└┐ x8

3. ●

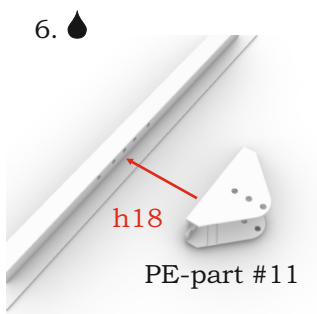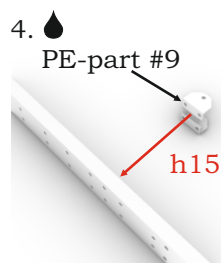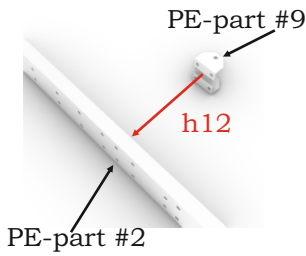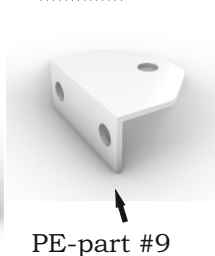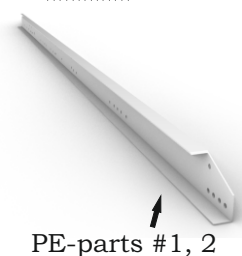


7.



PE-parts #3, 4

8.

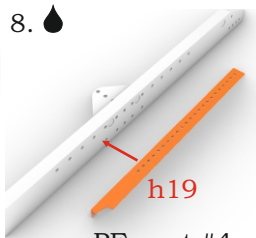


PE-part #4

9.



PE-parts #7, 8

10.

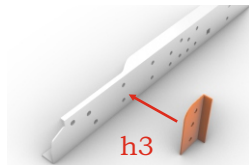


PE-part #8

11.

Repeat steps
2-10 for right
side

12.

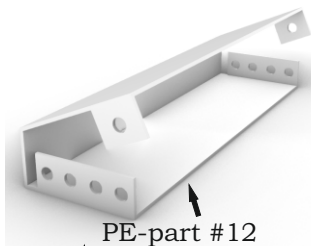


PE-part #12

13.




h20

14.

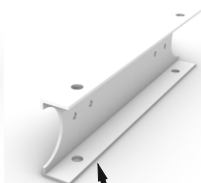


PE-part #5

15.

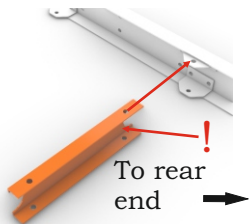


To rear
end

16.

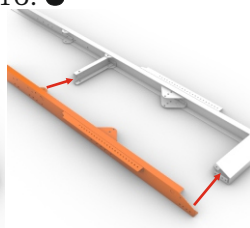


17.

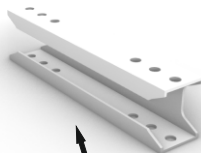


PE-part #13

18.

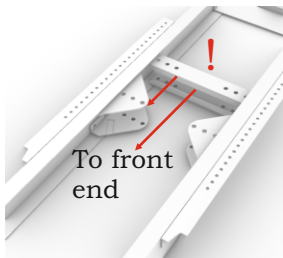

To front
end

19.

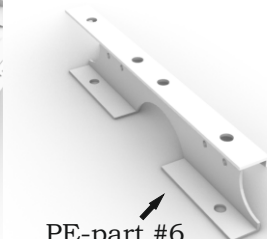


PE-part #6

20.




PE-part #10

21.

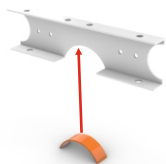


22.

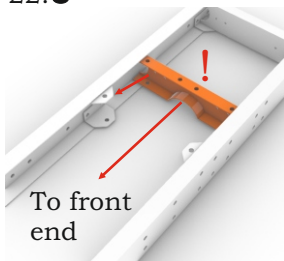


!

Green parts in this instruction are from T610 cab kit.


23. x2

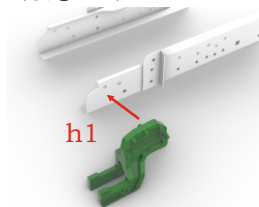


24.

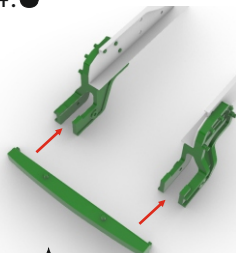


25. x2

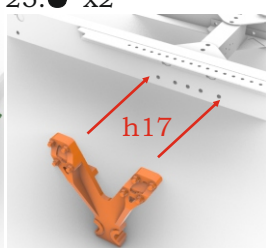

26. x2

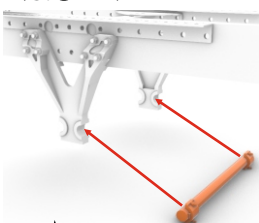


27. x2

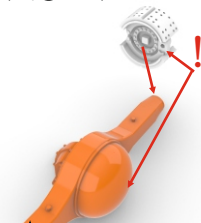


! Find this mark




28. To rear end; left side

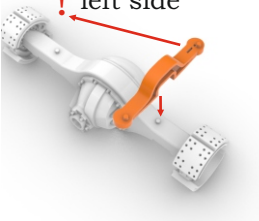

29.

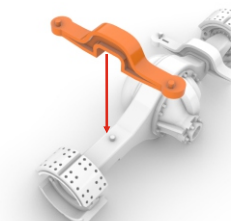


30. x2

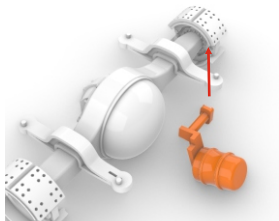


31. x2














32. x2

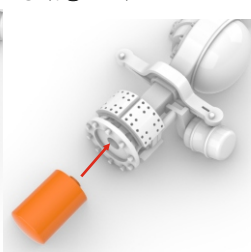


33. x2

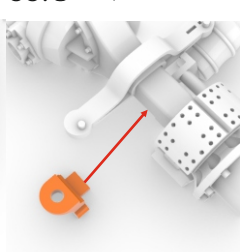


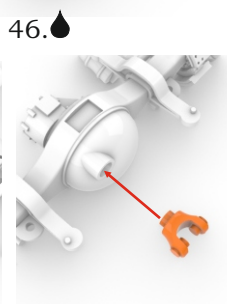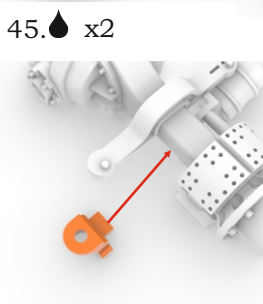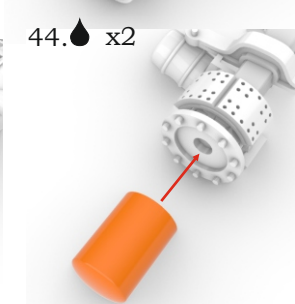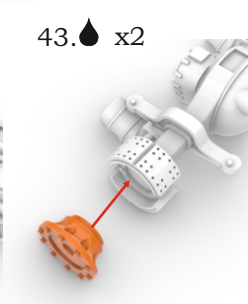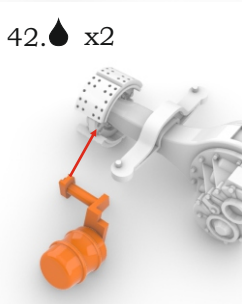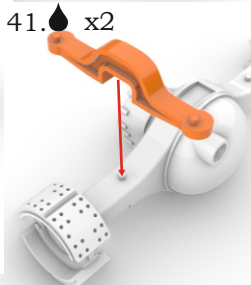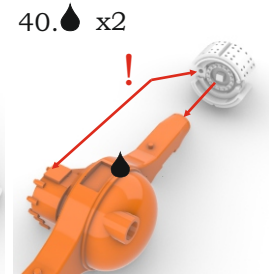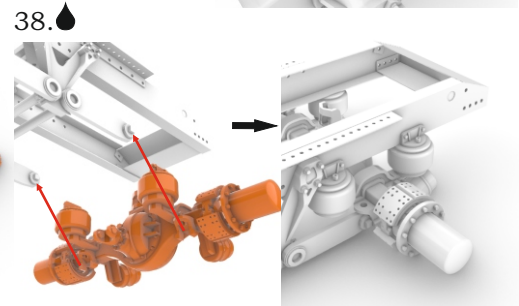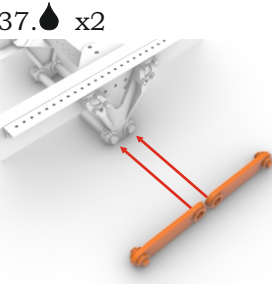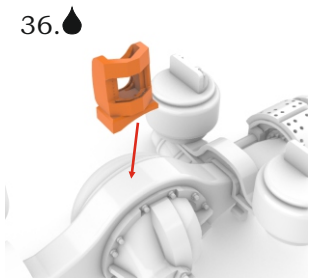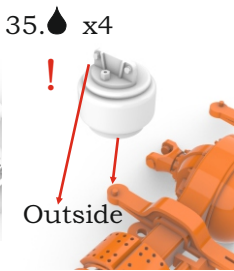


48.  x4

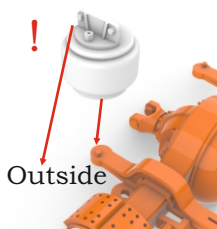



49. 

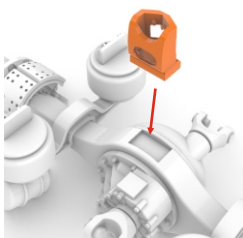


50. 

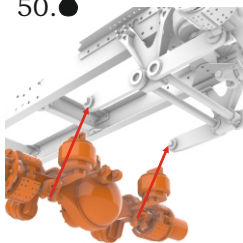


51.  x4

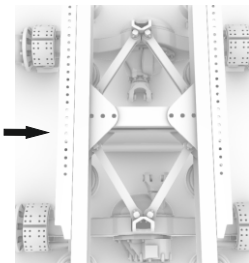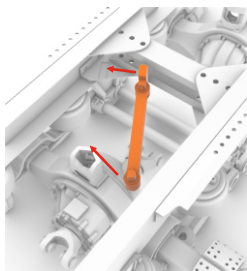


52. 

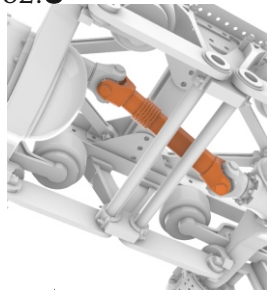


53.  x4

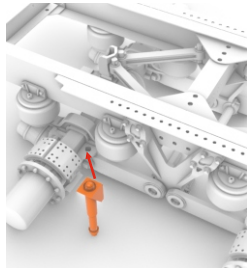


54.  x4

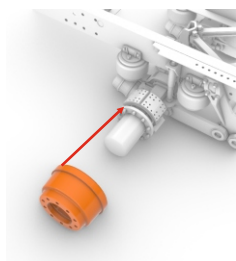


55. 

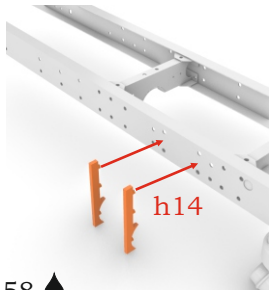


56. 

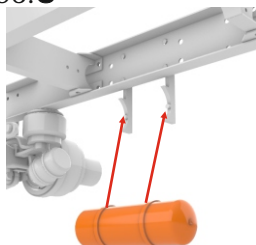


57. 

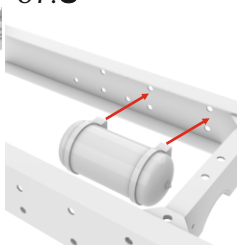

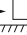



58. 

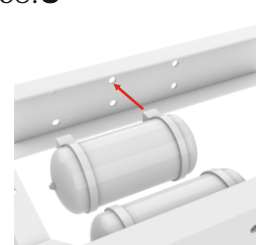


59. 

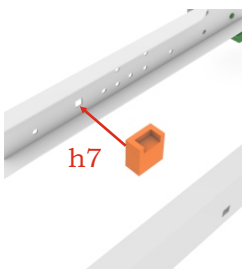

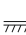
60.   
PE-part #39
from T610
cab kit

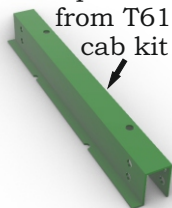


61. 

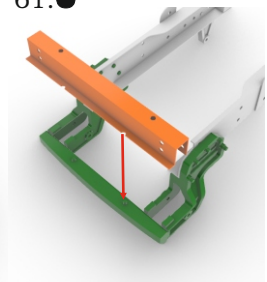


62.  x2

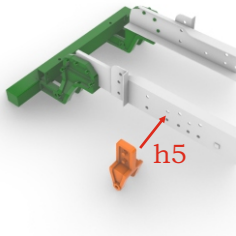


63.  x2

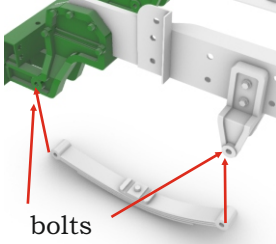


64. 

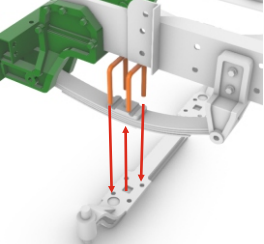


65.  x2

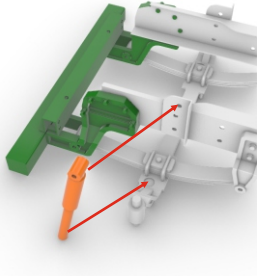


66.  x2

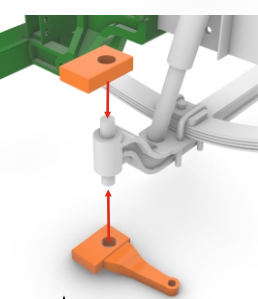


67.  x2

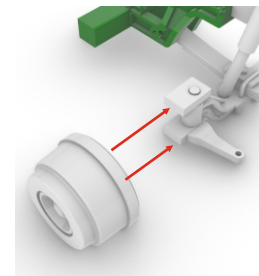


68.  x2

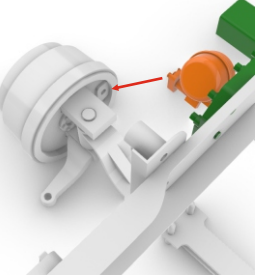

69. 

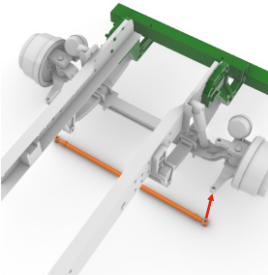


70. 

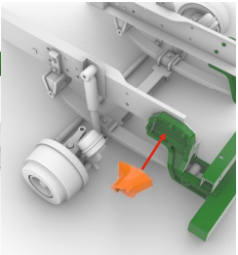


71. 




72. 

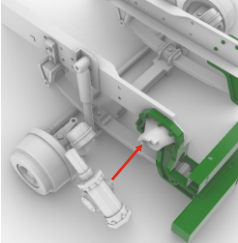


73. 

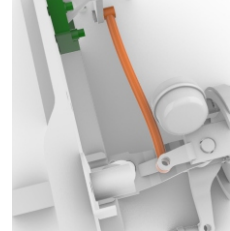

74. 

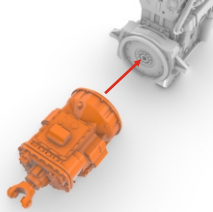

75. 

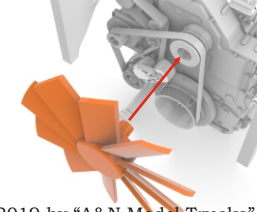

!
The engine in
this instruction -
X15 engine by
A&N Model Trucks

