

A&N Model Trucks



W990 US truck.
Resin kit, 1/24

Warning!

For the best results we highly suggest to use our photo-etched chassis for US W990 truck. But you still can use an Italeri's generic American chassis (except Volvo VN and Peterbilts).

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is **not suitable for children**.


This model kit is for advanced modellers only!

You can download this instruction as PDF-file at the our site at «Instructions» section, or use QR-code on the last page.

Symbols:


 - glue parts;

 - do not glue parts;

 - bend parts;


 - attention;

 - moving parts;


 - your choice;

 - apertures' number;

Numbers of photo-etched parts

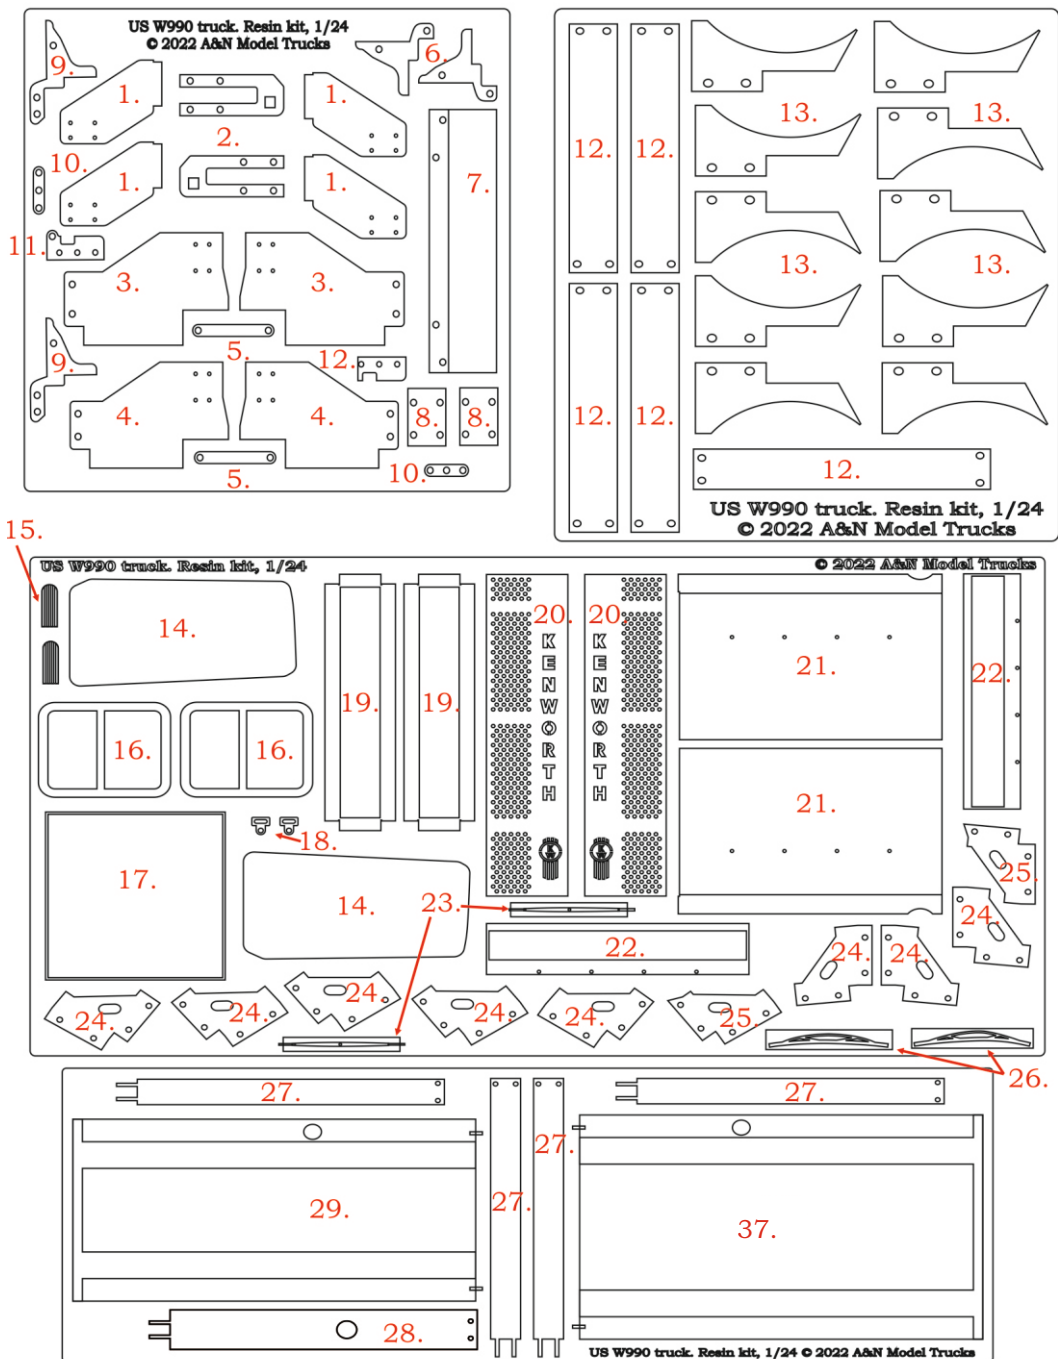

Numbers of photo-etched parts

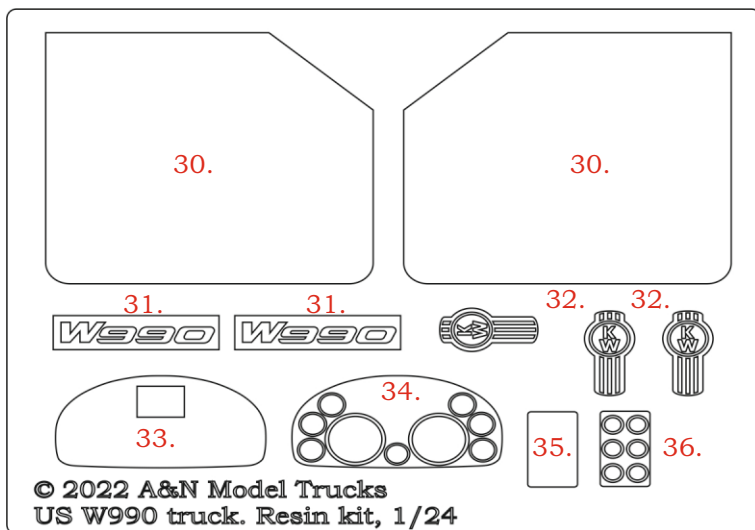

! Basic guidelines for modification of Italeri's chassis


(skip this section and jump on page 6 if you use photo-etched chassis).

WARNING! We didn't test our cab kits with Italeri chassis, we can provide only basic dimensions for chassis.


1. Frame length.




2. Space between front end of the frame and center of second axle.

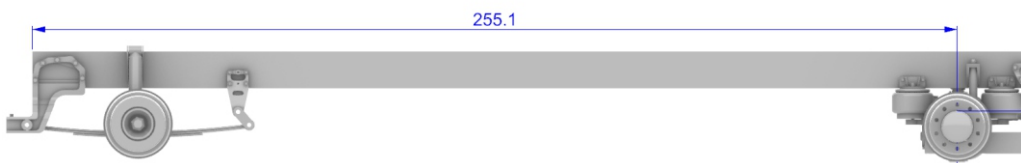

3. Dimensions for front suspension.

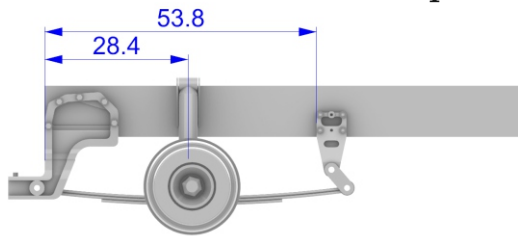

4. Dimensions for front fender's and cab's supports (from front end of frame).

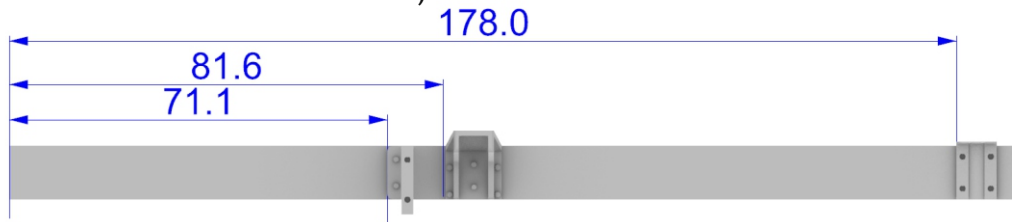


5. Max height of radiator.



7. Space from front end of frame and front ends of tanks:
Left side.



Right side.

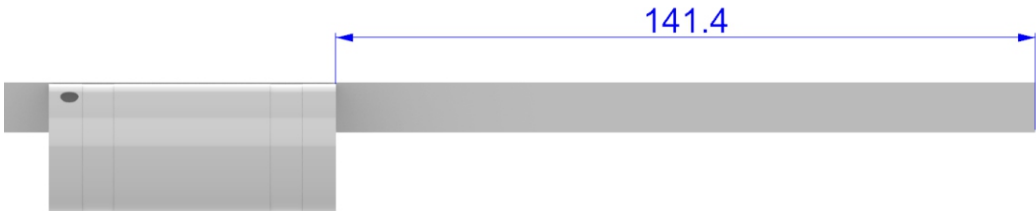


Apertures' numbers you can find in assembling instruction for our «Chassis for US W990 truck» kit.


In case if you use Italeri chassis kit as donor, please refer previous section for dimensions.

Main section


1.  x2

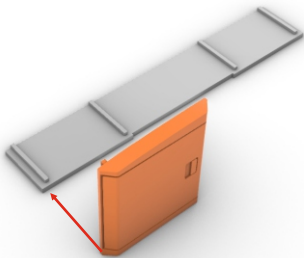


2.  x2

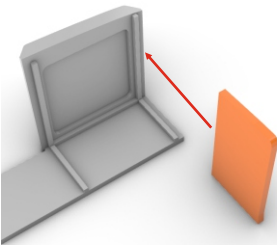

3.  x2

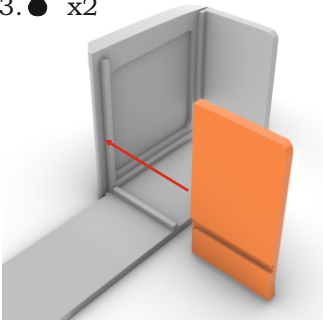


4. 

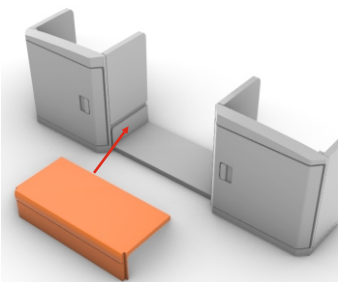


5. 




6.  x2

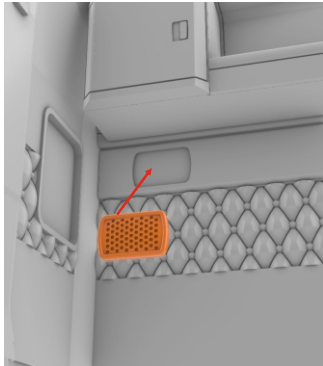


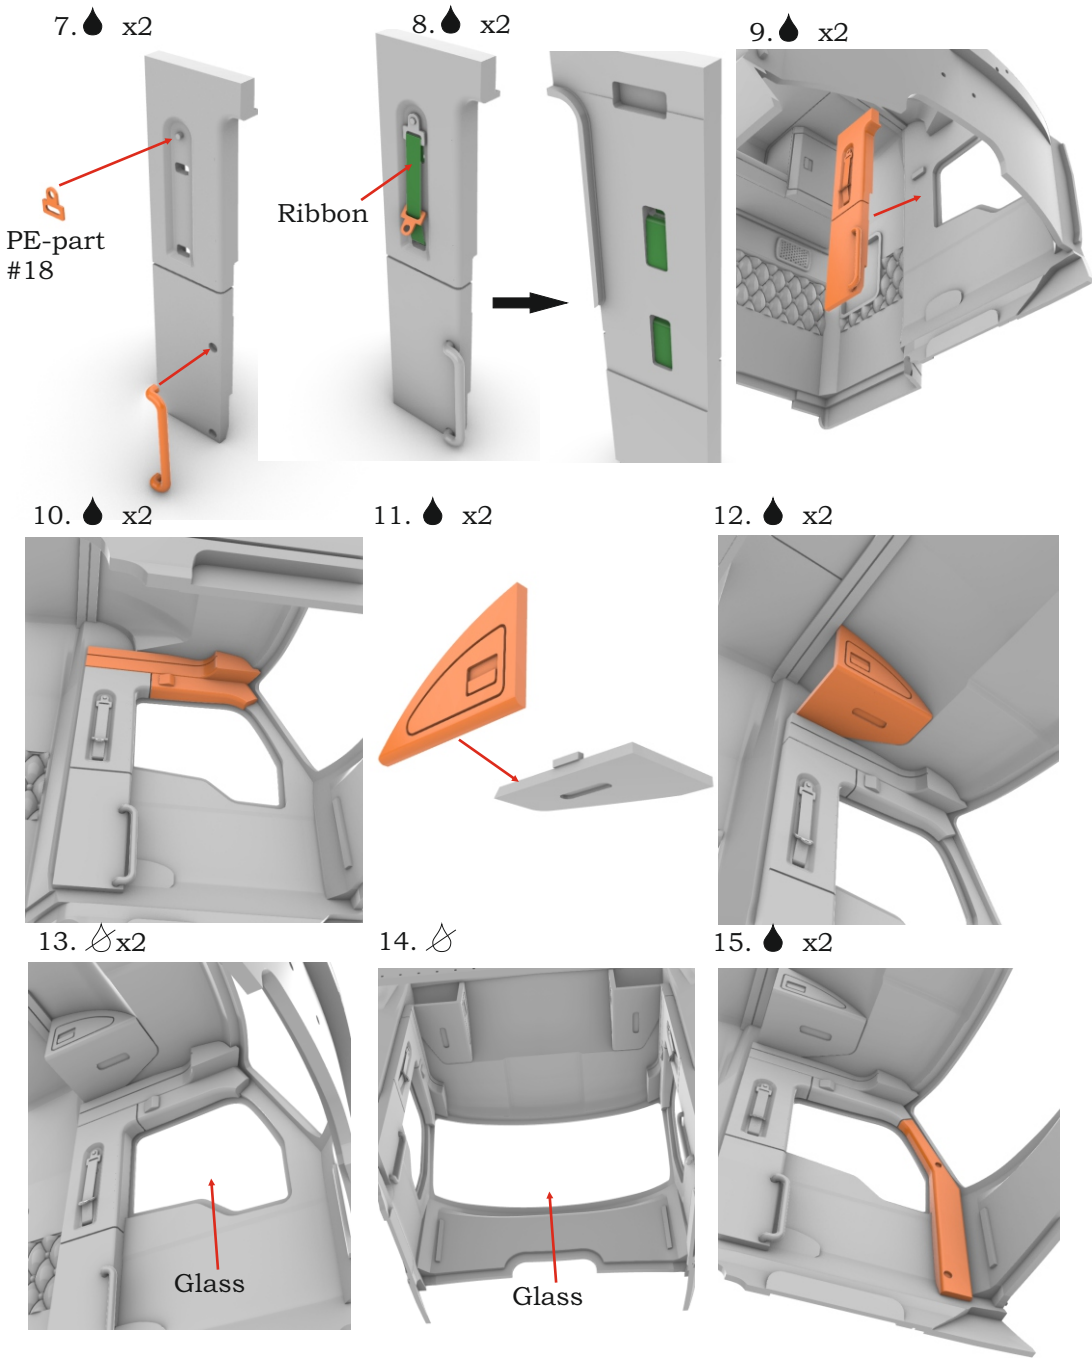


16. 

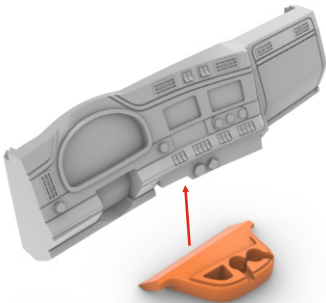


17. 

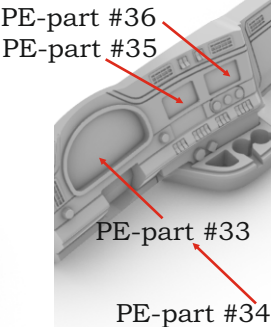


18. 

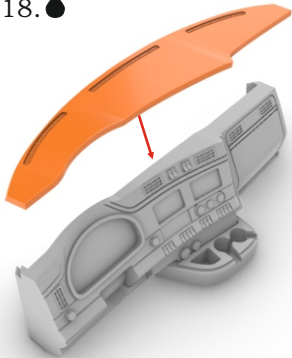


19. 

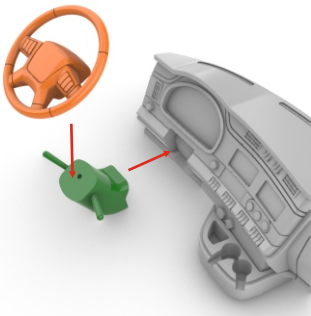

20. 

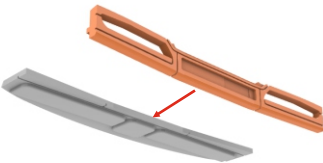


21. 

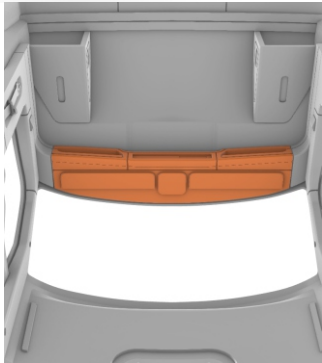


22. 




23.  x2

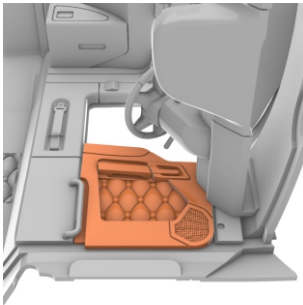


24.  x2

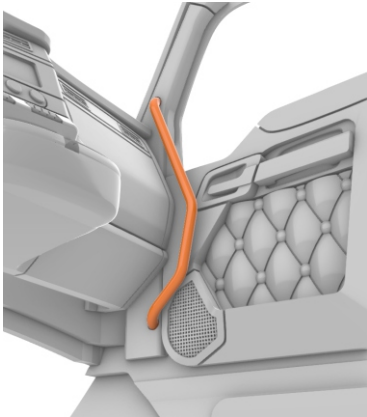

25. 

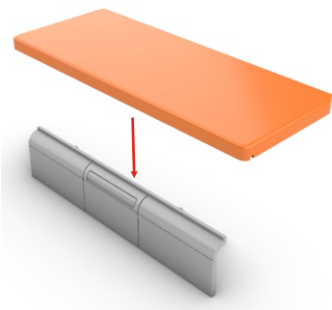


26. 

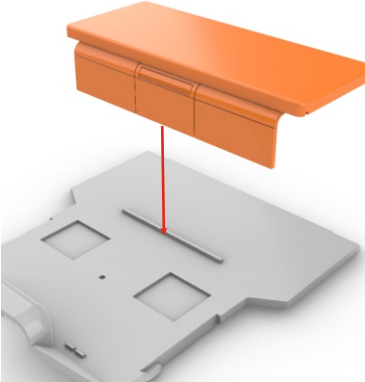

27. 

PE-parts #5

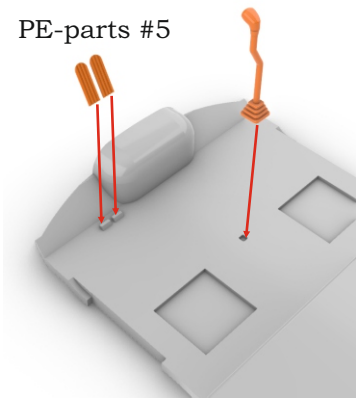


28.  x2




29.  x2




30. 

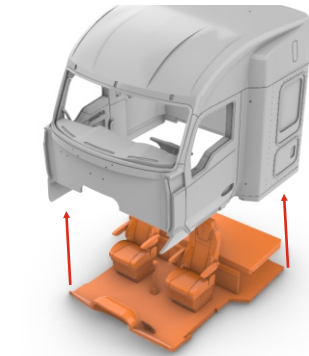


31. 

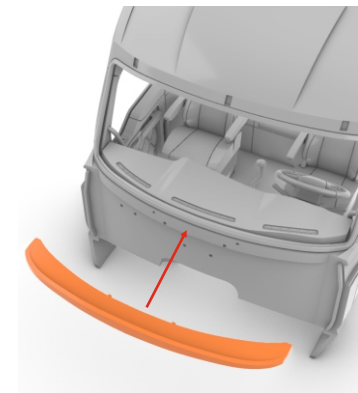

32. 

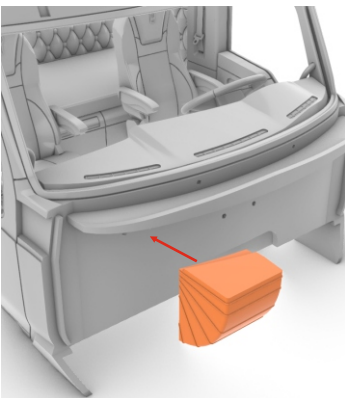


33. 

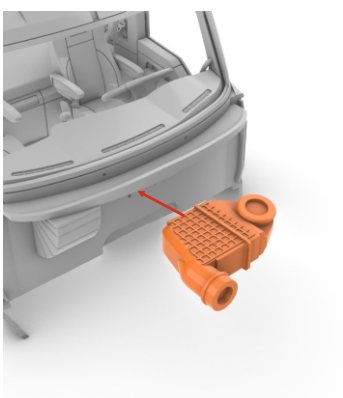


US W990 truck. Resin kit, 1/24


34.  x2

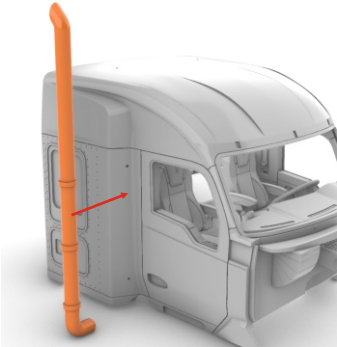


35.  x2

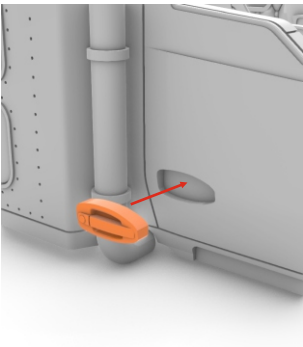



36.  x2

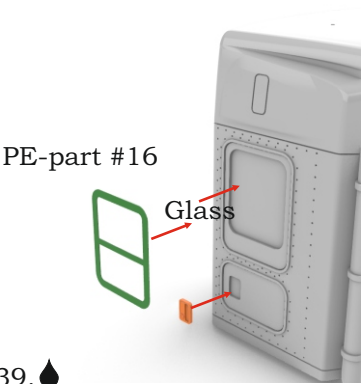


37.  x2

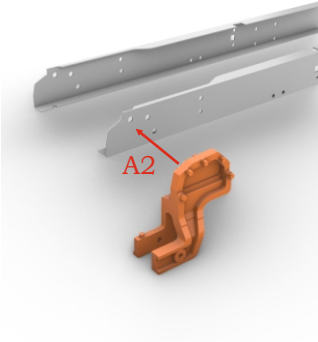


38. 

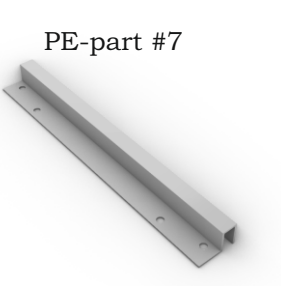


39. 

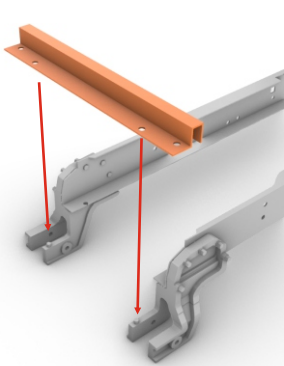


40.  x2

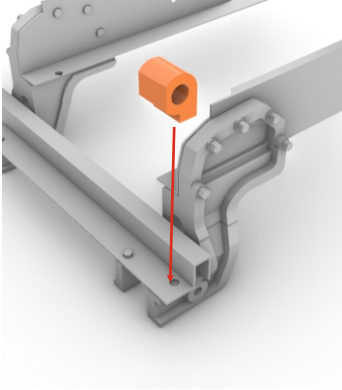


41.  x2

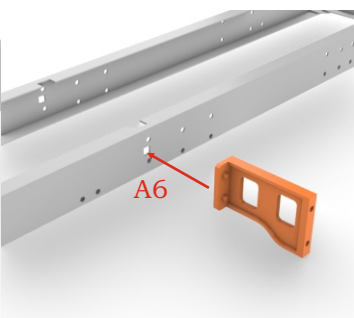



42.  x2

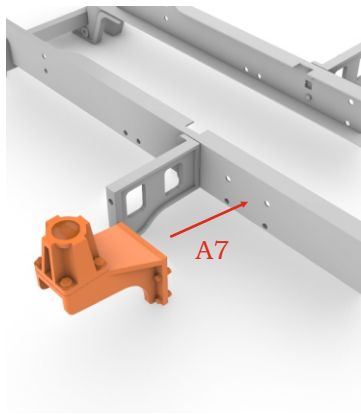


43.  x2

PE-part #21

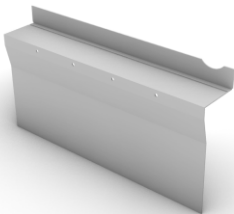



44.  x2

PE-part #3

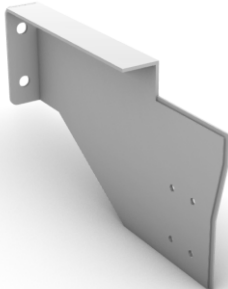

45.  x2

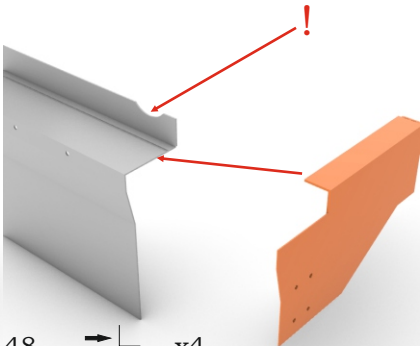



46.  x2

PE-part #4




47.  x2

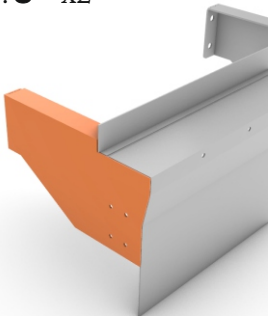

48.  x4


PE-part #1

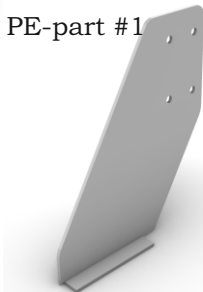


49.  x2


50.  x2

51.  x2

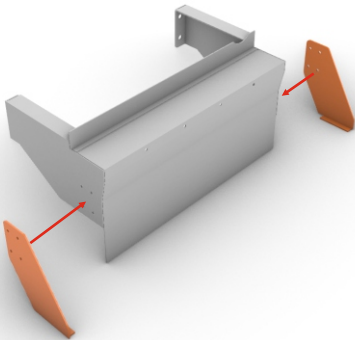


PE-part #22

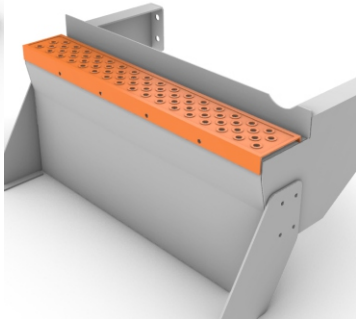


52.  x2


PE-part #19

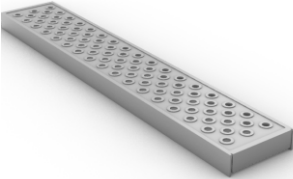


53.  x2

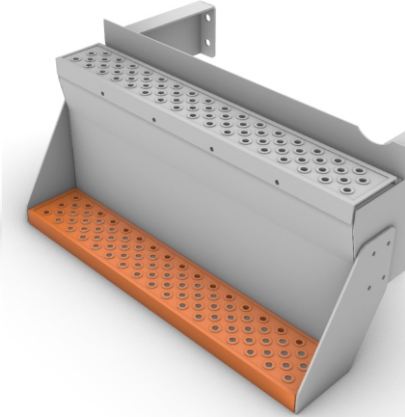


54.  x2

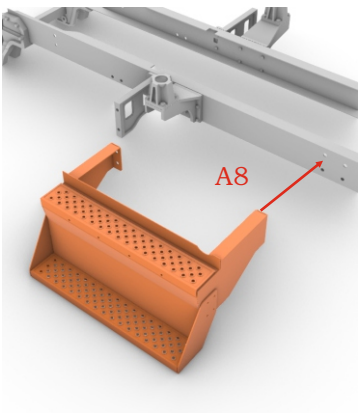


55. 

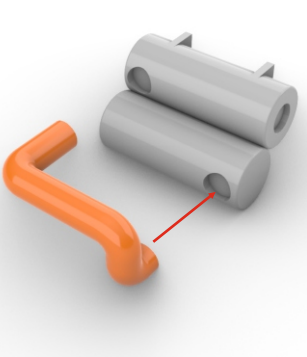

56. 

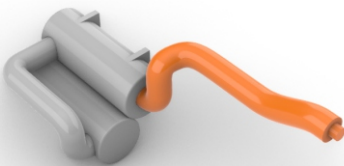

57. 

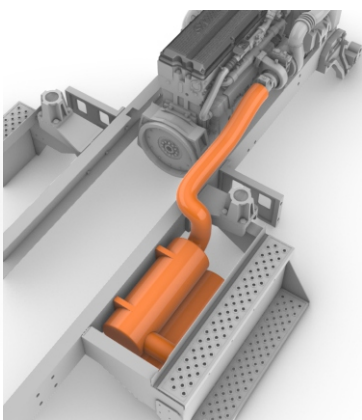

58.  x10




PE-part #13

59.  x5


PE-part #12



60.  x5

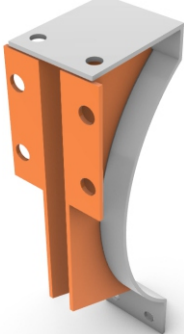


61. 

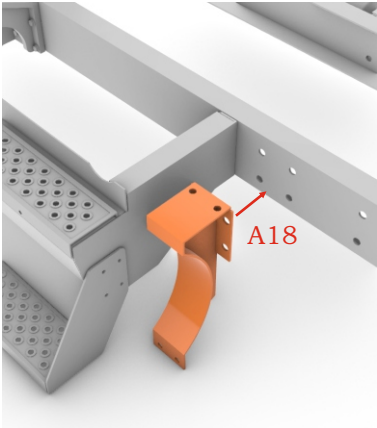


62. 




63. 

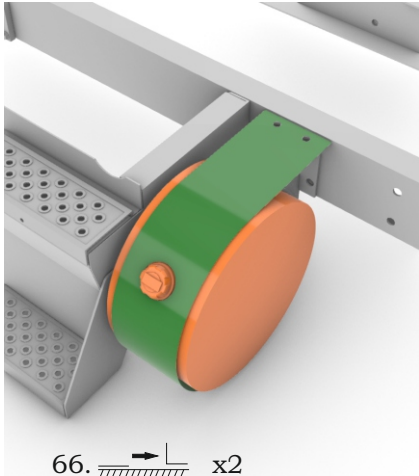



64. 

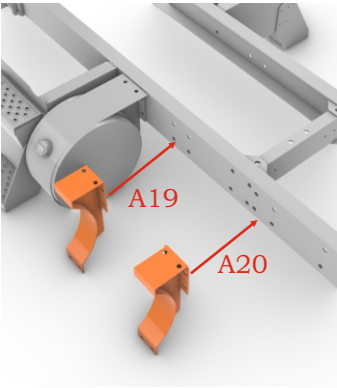


65. 

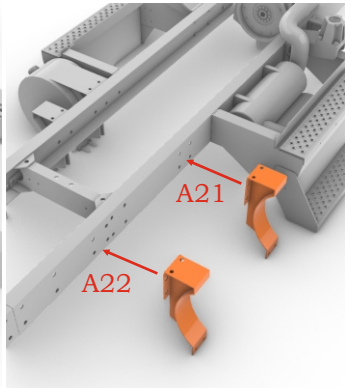


66.  x2

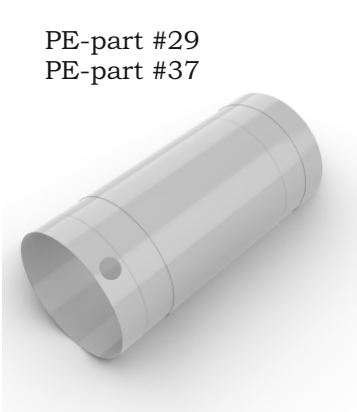


67.  x4

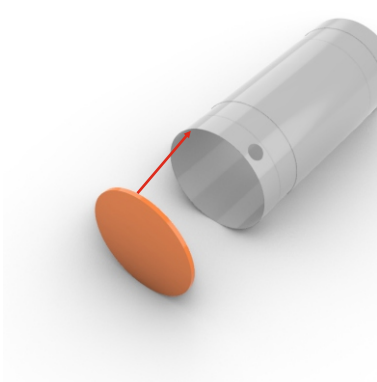


68.  x2

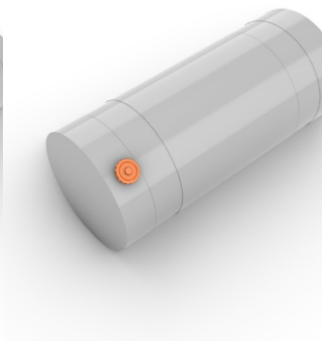

69.  x2


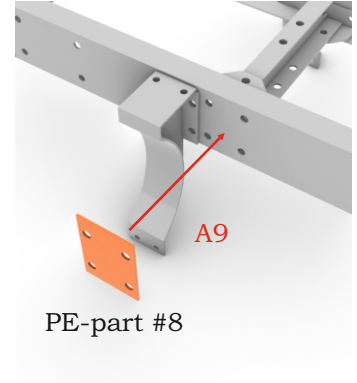



70.  x2


71.  x2

72.   right side

PE-part #2

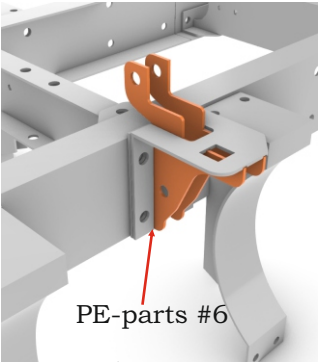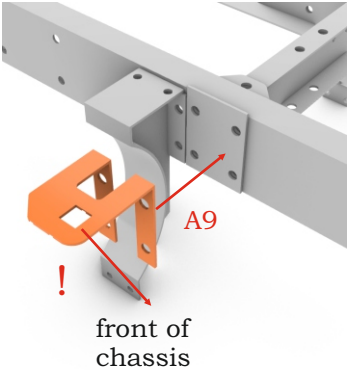

73.   left side

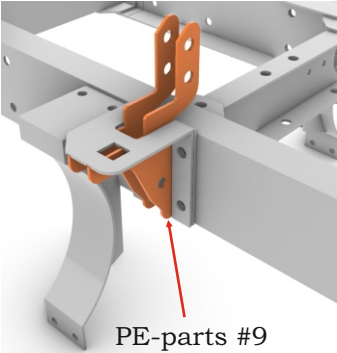


74.  x2

PE-part #10




Proceed to step # 78
if you use Italeri
chassis


75.  x2

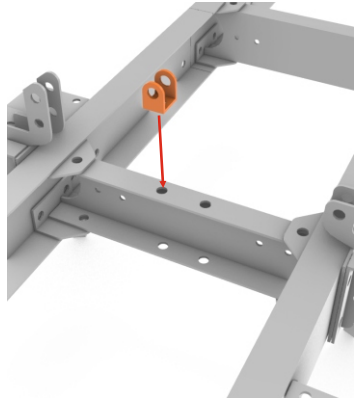


76.  x2

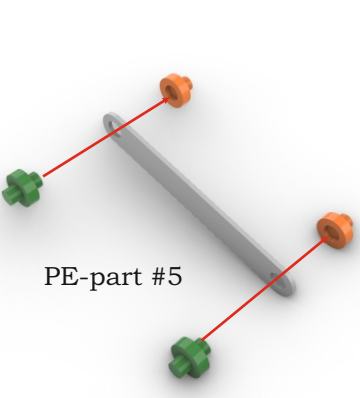


77. 

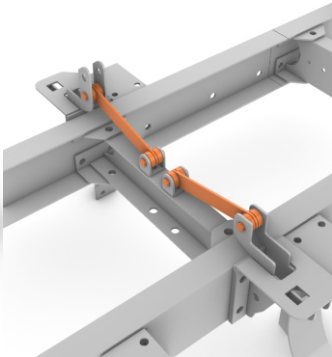


78.  x2

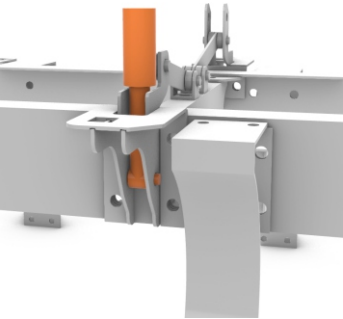


79.  x2

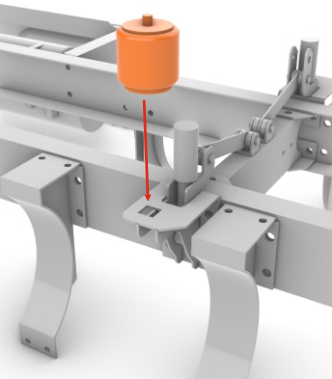

80. 

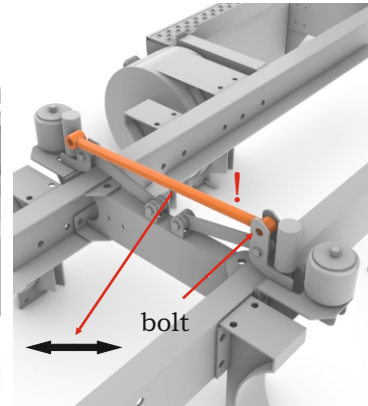


81.  x4


PE-part #27




82.  ! right side

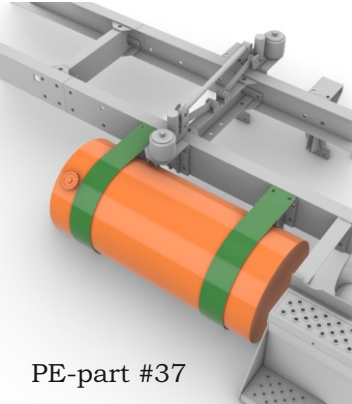


83.  ! left side

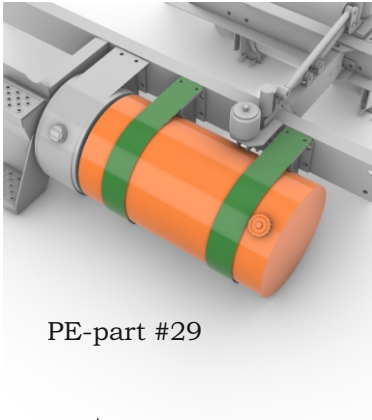

84. 

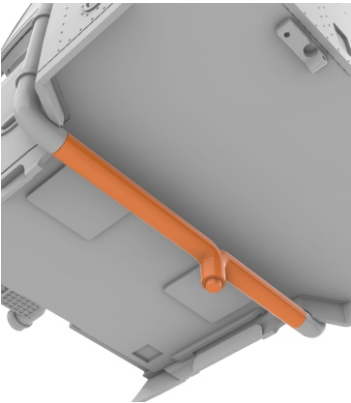

85. 

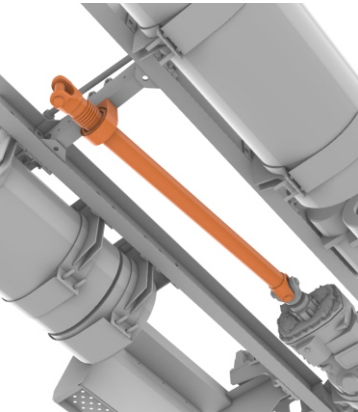


86. 




US W990 truck. Resin kit, 1/24


87. 

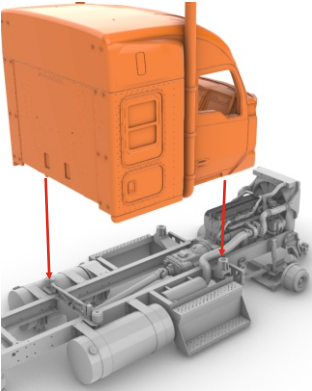


88. 

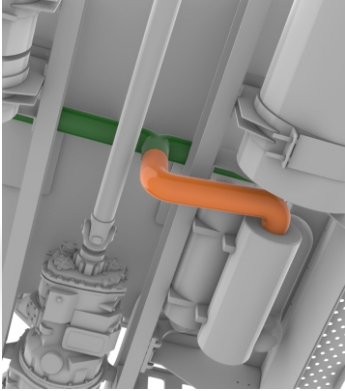

89. 

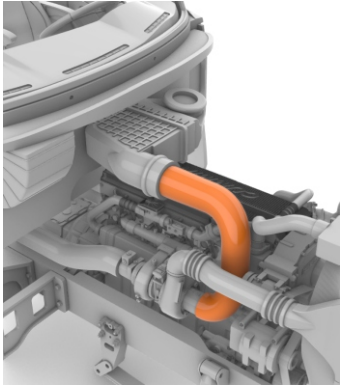


90.  x2

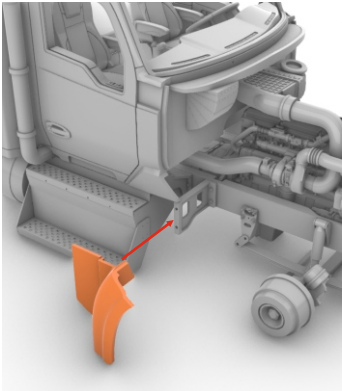


91. 

* A&N x15 engine and W990 chassis shown.

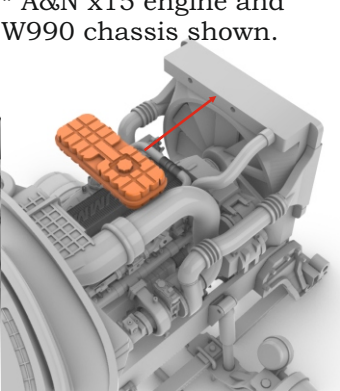


92. 

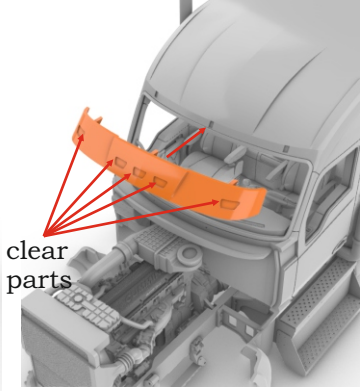


93.  x2


PE-part #26

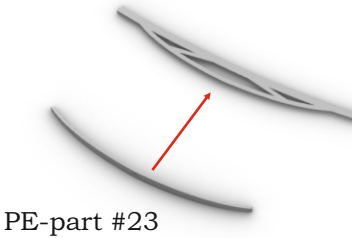


94.  x2

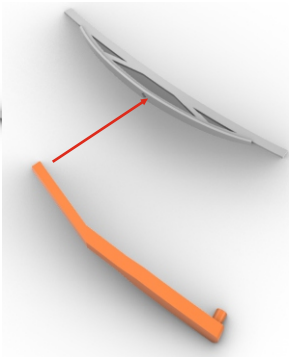

95. 

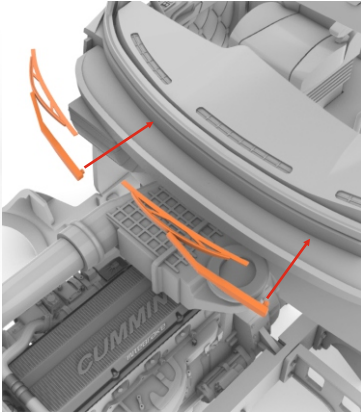

96.  x2

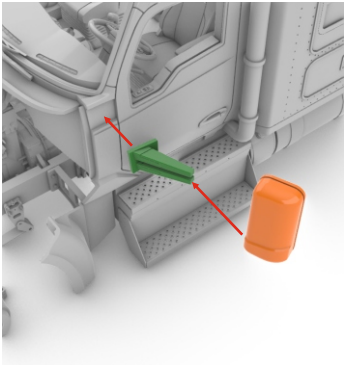


97.  x2




PE-part #20


98.  x2

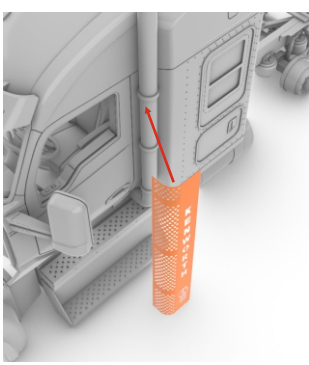


99. 

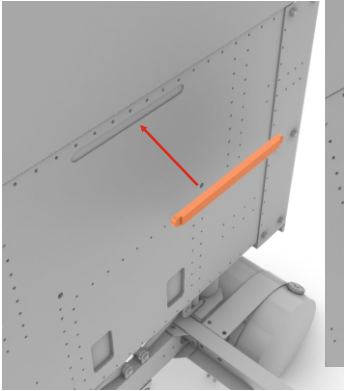


100. 

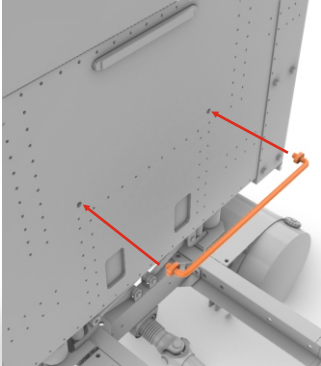

101. 

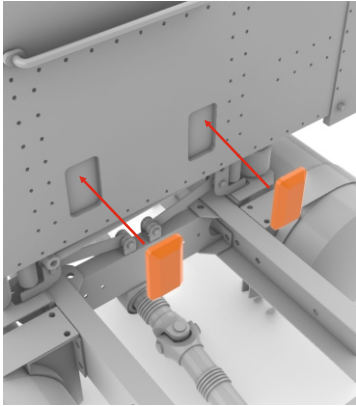



102.  PE-part #11

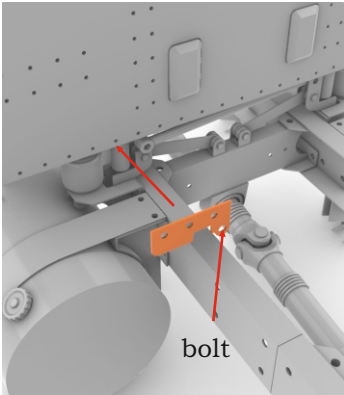


bolt

103.  PE-part #12

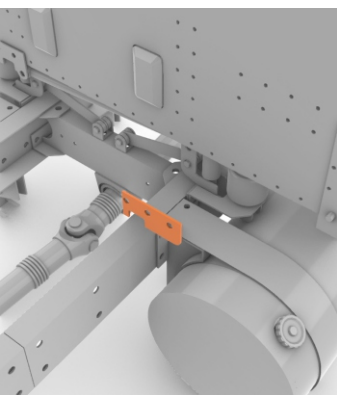


104.  x6


PE-part #24

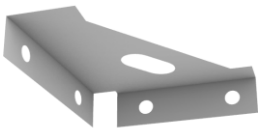


US W990 truck. Resin kit, 1/24

105.  x2

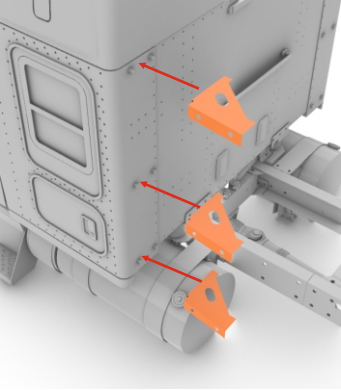



106.  x2

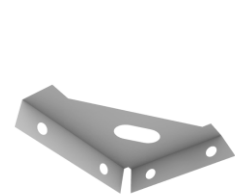


PE-part #25


107.  x2

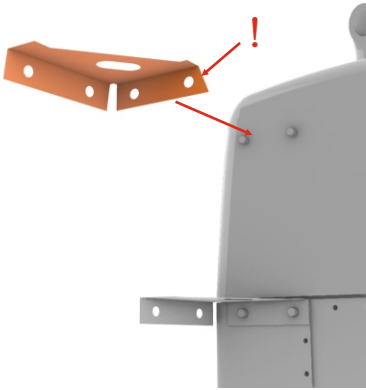


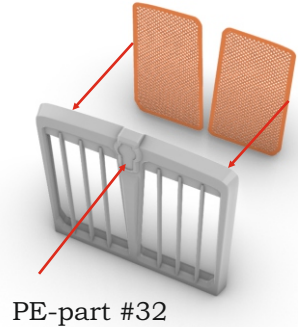
108.  PE-part #17

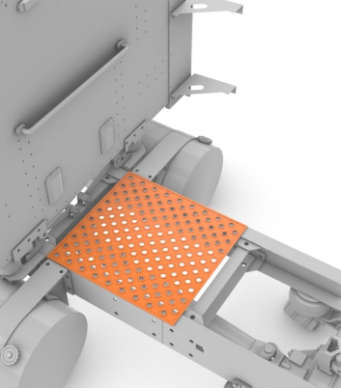


109.  x2

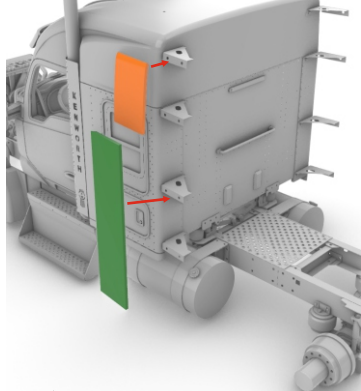


110.  PE-part #14




111.  x2

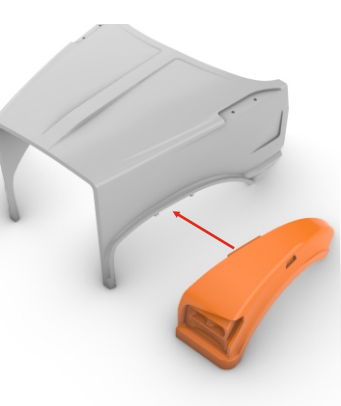

112. 

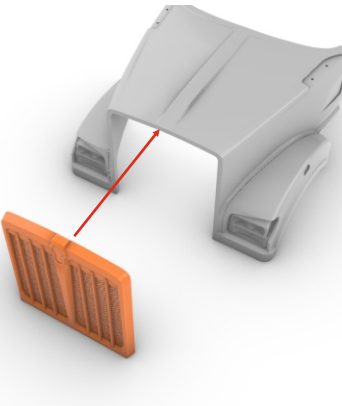


113.  x2

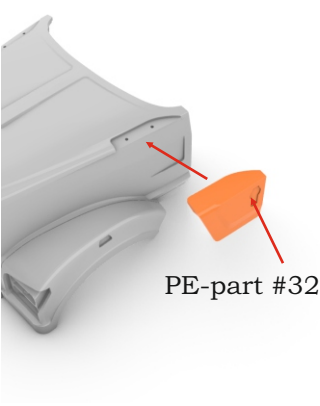


PE-part #32

US W990 truck. Resin kit, 1/24


114. x2

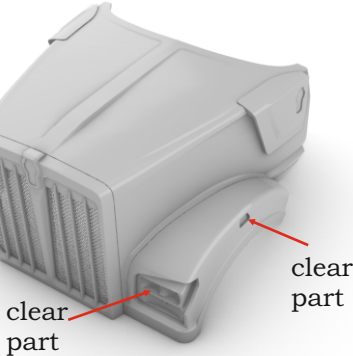


115.

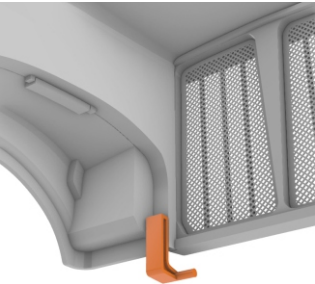


116.

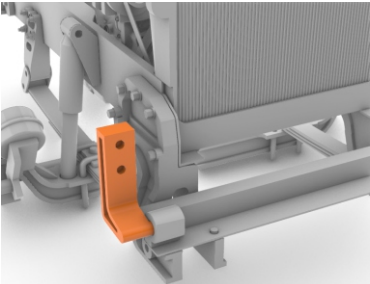


117.

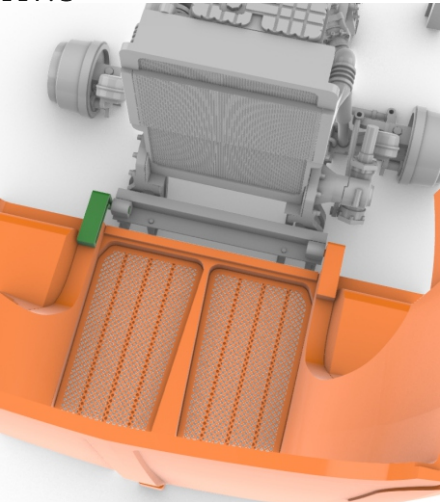

118.

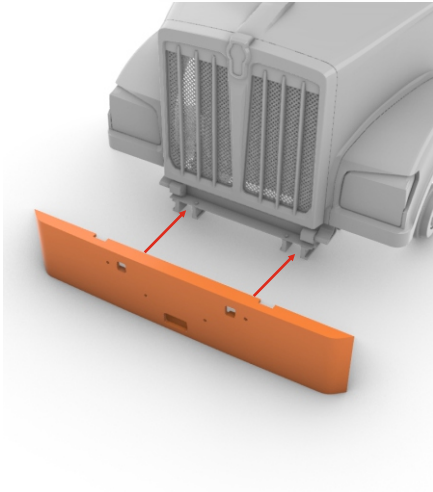


119. x2

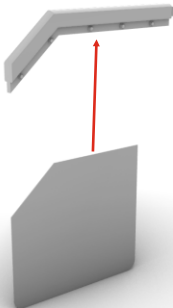

PE-part #30

120. x2

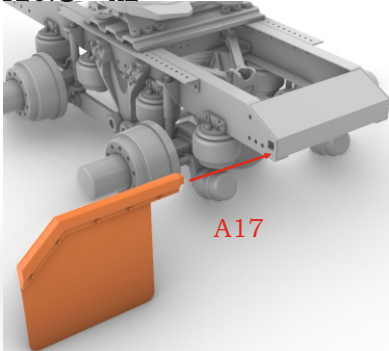

121. x2 PE-part #31

