

A&N Model Trucks



W990 US truck (day cab).
Resin kit, 1/24

Warning!

For the best results we highly suggest to use our photo-etched chassis for US W990 truck. But you still can use an Italeri's generic American chassis (except Volvo VN and Peterbilts).

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.


This model kit is for advanced modellers only!

You can download this instruction as PDF-file at the our site at «Instructions» section, or use QR-code on the last page.

Symbols:

 - glue parts;

 - do not glue parts;


 - bend parts;

 - attention;

 - moving parts;

 - your choice;

A1 - apertures' number;

 - cut;

! Basic guidelines for modification of Italeri's chassis


(skip this section and jump on page 6 if you use photo-etched chassis).

WARNING! We didn't test our cab kits with Italeri chassis, we can provide only basic dimensions for chassis.


1. Frame length.




2. Space between front end of the frame and center of second axle.

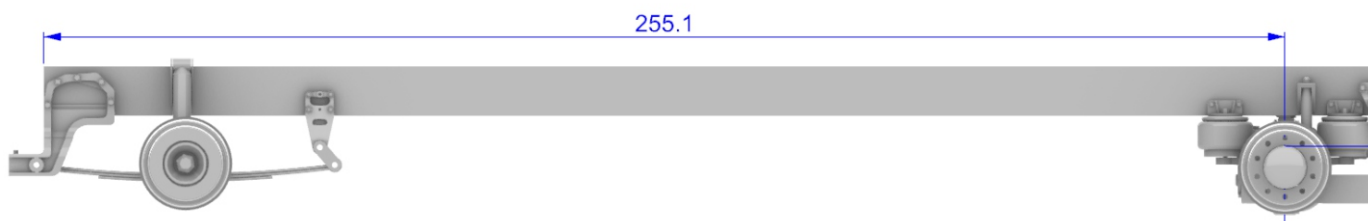

3. Dimensions for front suspension.

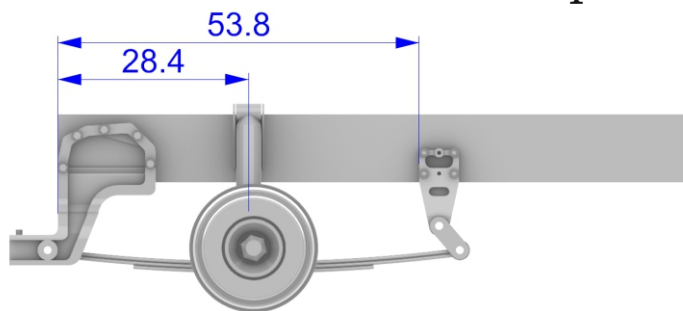

4. Dimensions for front fender's and cab's supports (from front end of frame).

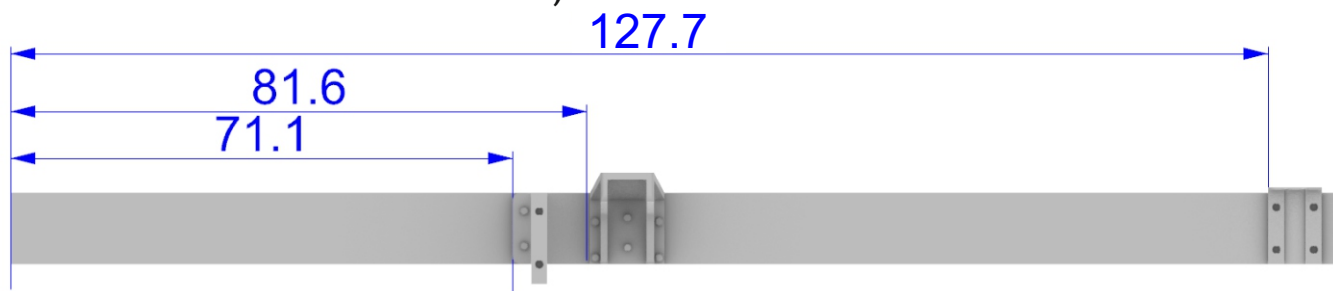


5. Max height of radiator.




7. Space from front end of frame and front ends of tanks:

Left side.

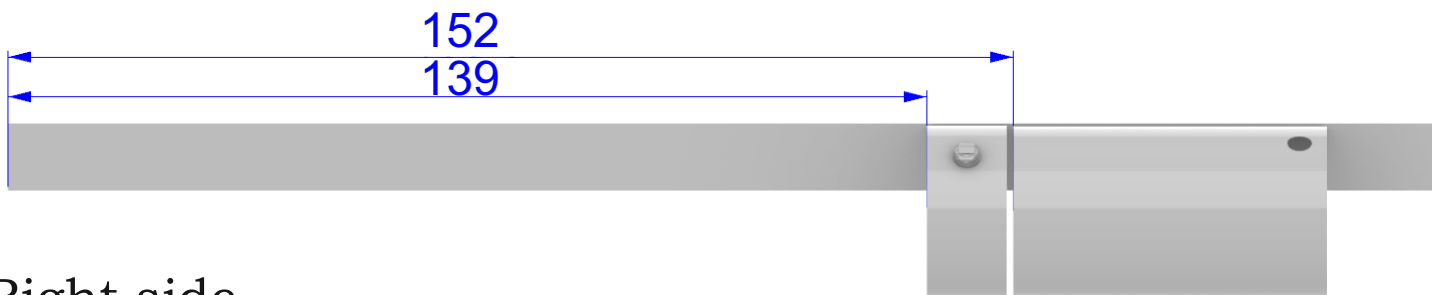


Right side.

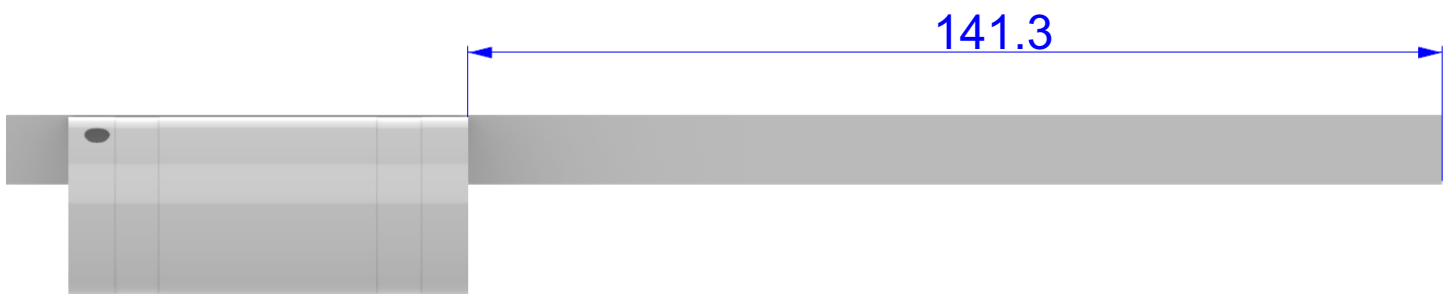

Apertures' numbers you can find in assembling instruction for our «Chassis for US W990 truck (day cab)» kit.


In case if you use Italeri chassis kit as donor, please refer previous section for dimensions.

Main section

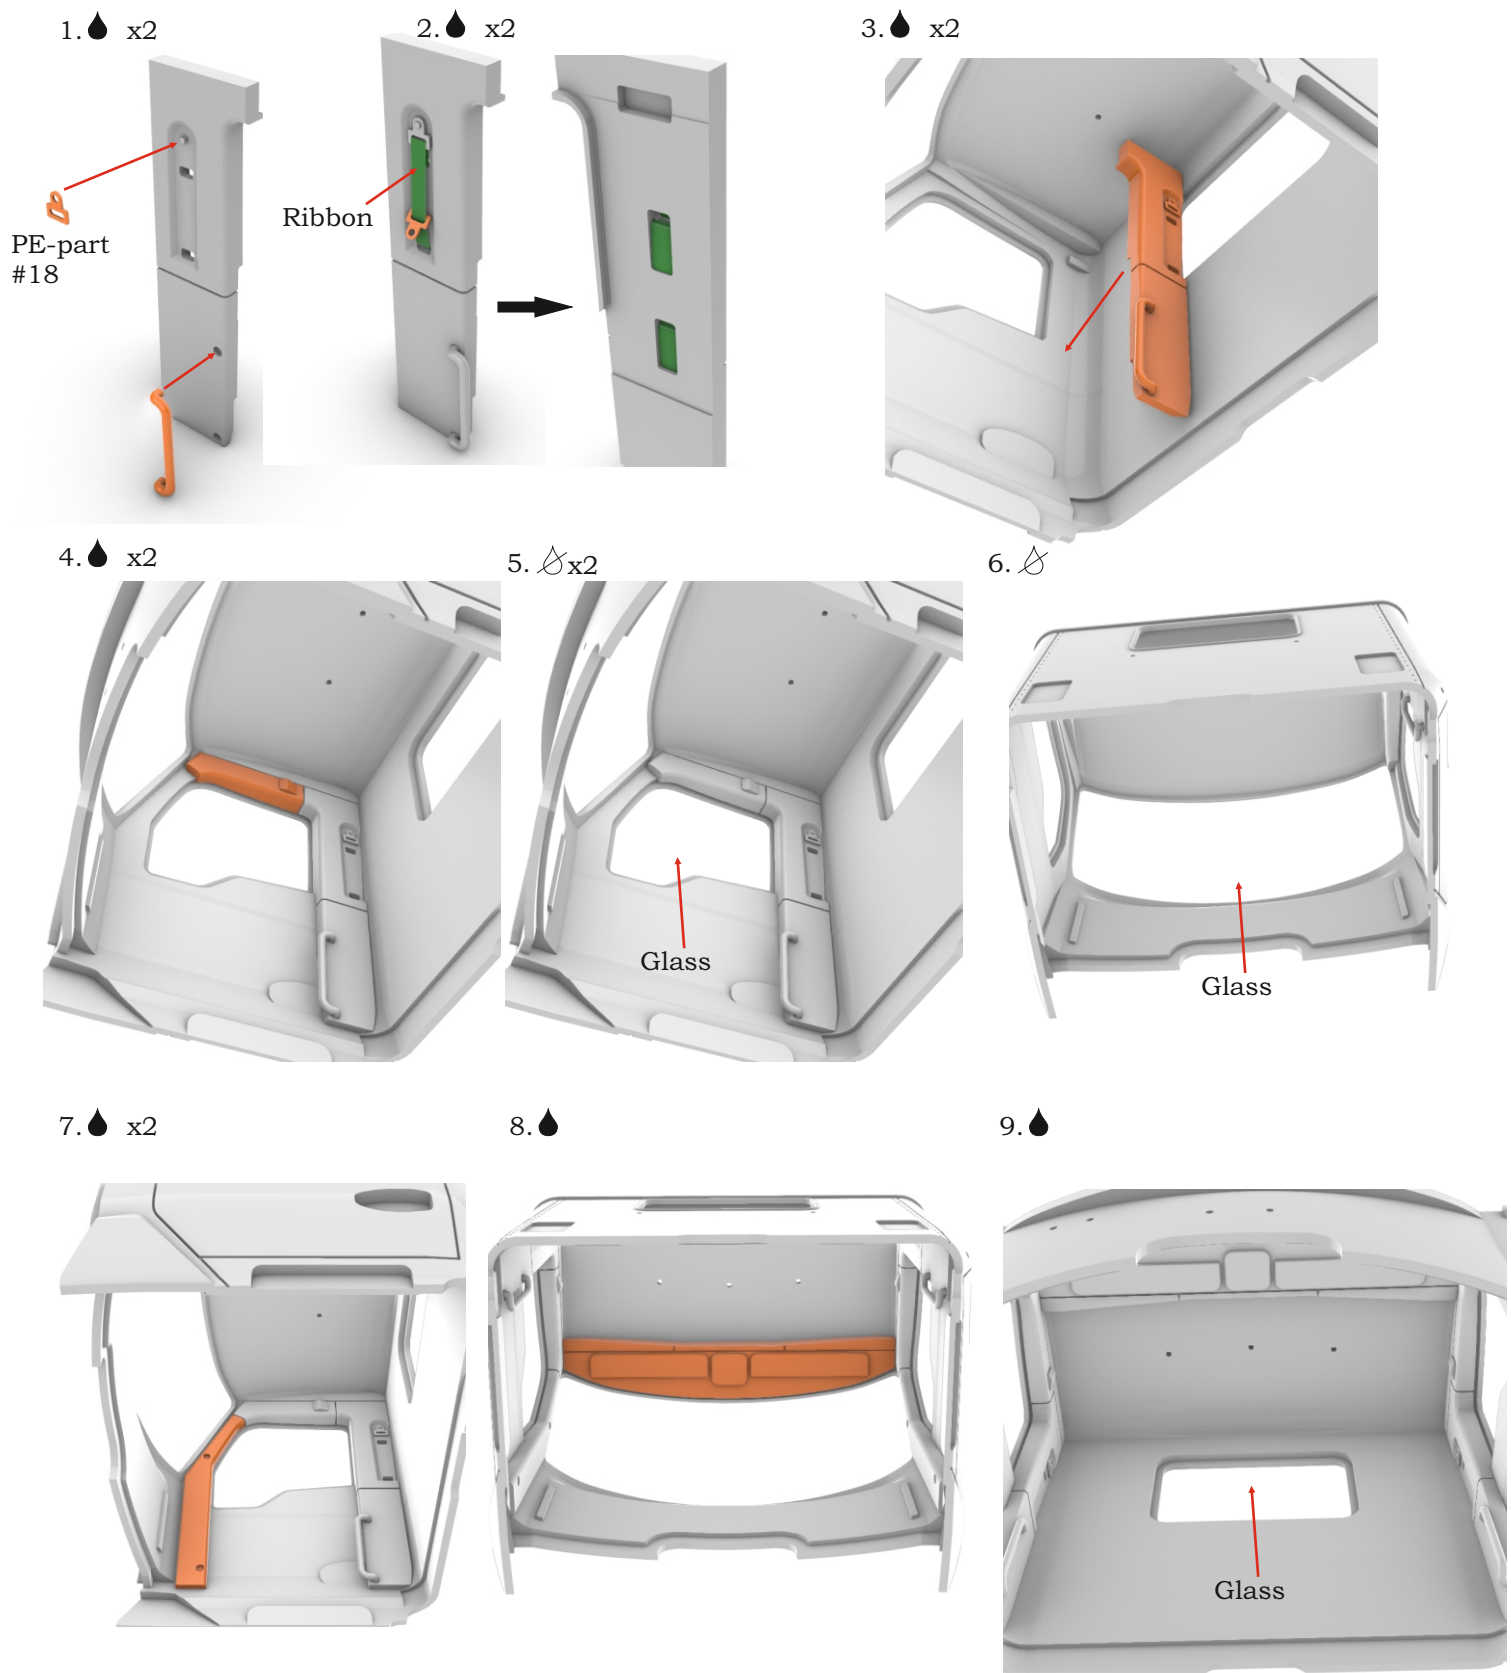


US W990 truck (day cab). Resin kit, 1/24


16. 

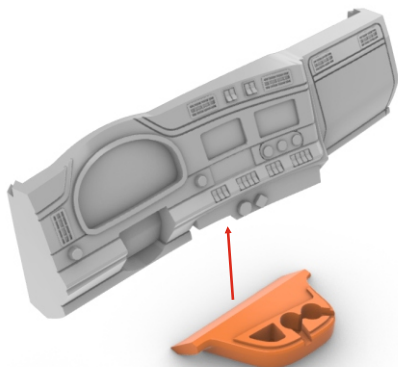


17. 

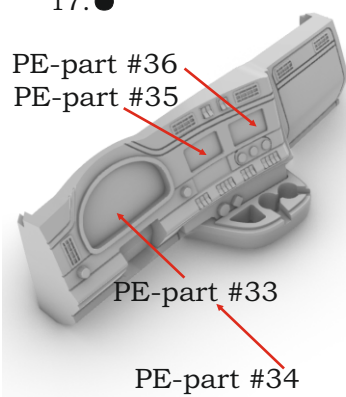


18. 

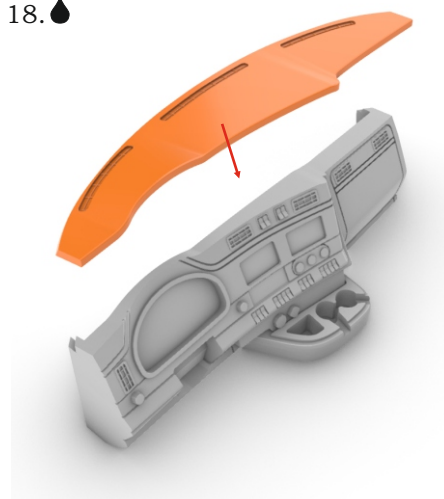


19. 

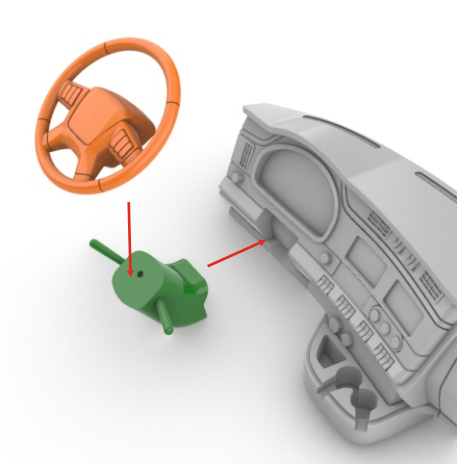


20. 

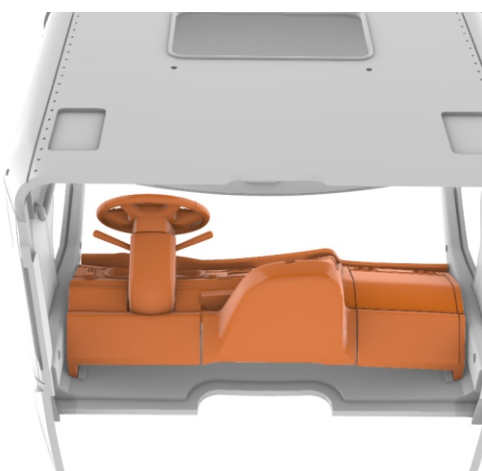

21. 

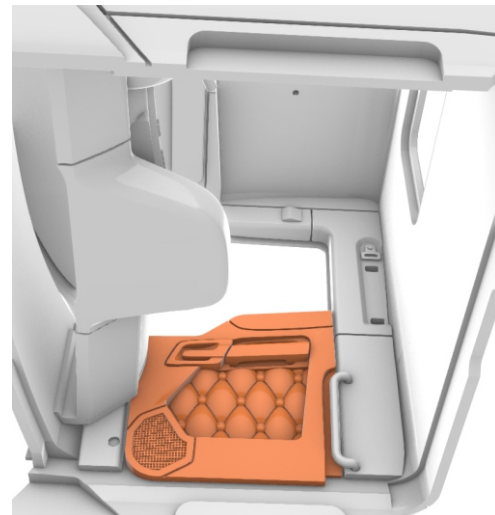


22.  x2

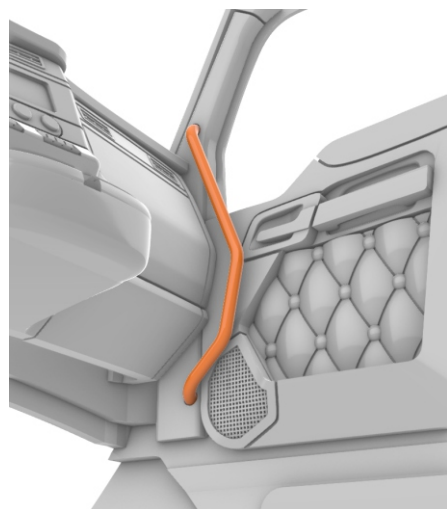

23. 

PE-parts #5

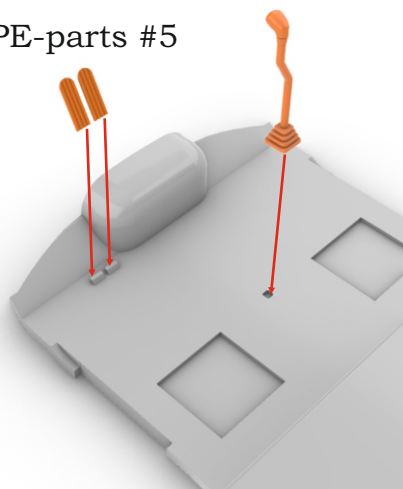

24.  x2




US W990 truck (day cab). Resin kit, 1/24


25. 




26. 

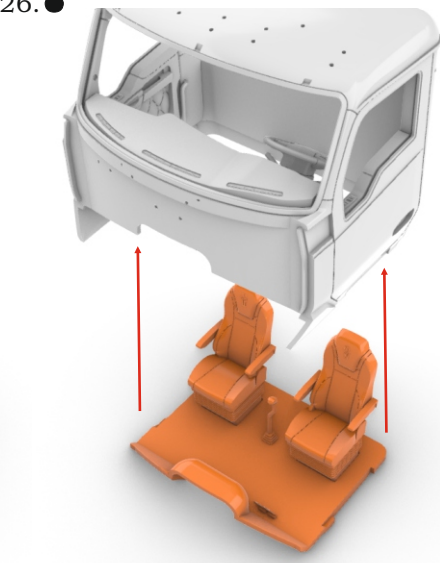


27. 

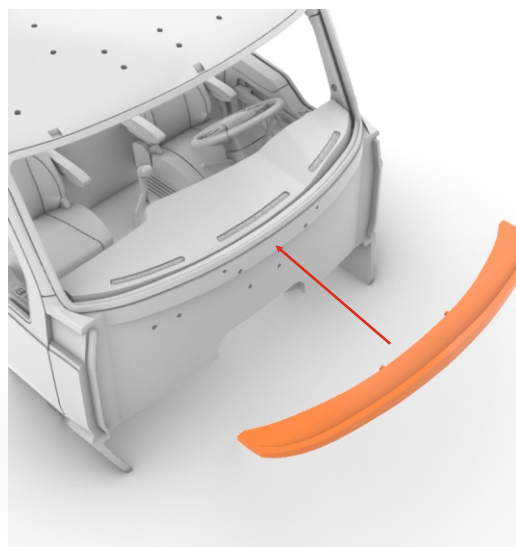


28. 

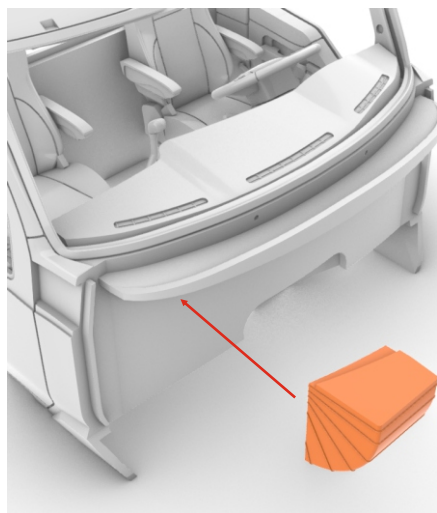


29. 

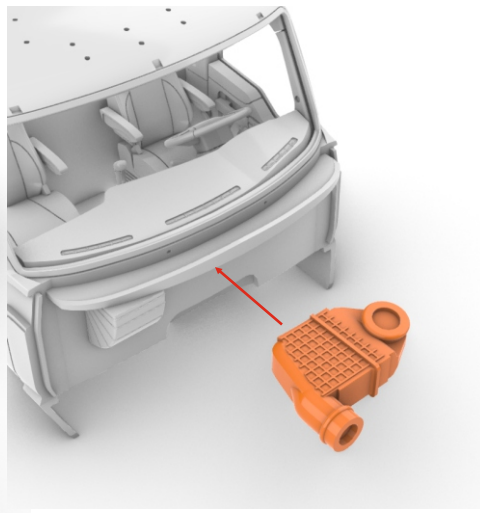

30.  x2

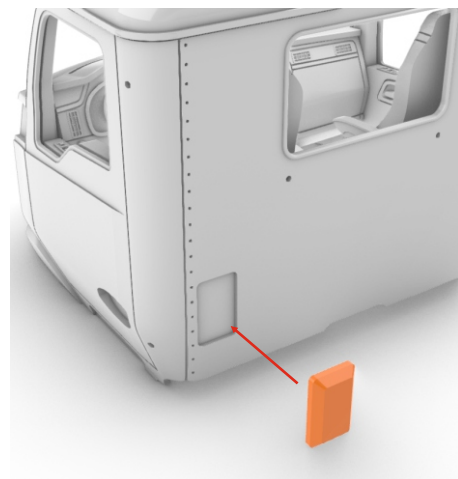


31. 

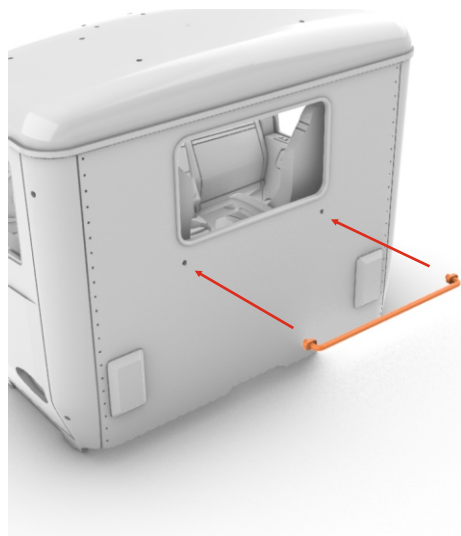

32.  x2




33.  x2

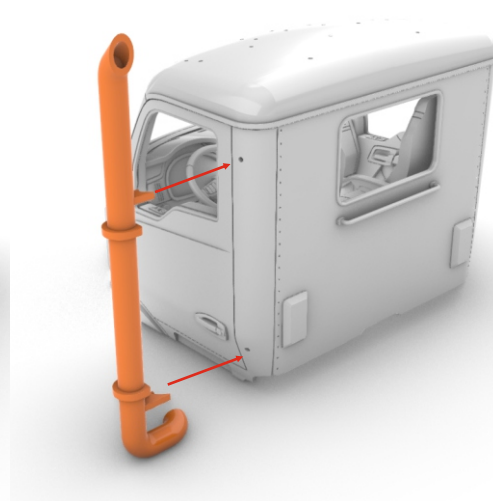

US W990 truck (day cab). Resin kit, 1/24

34.  x2

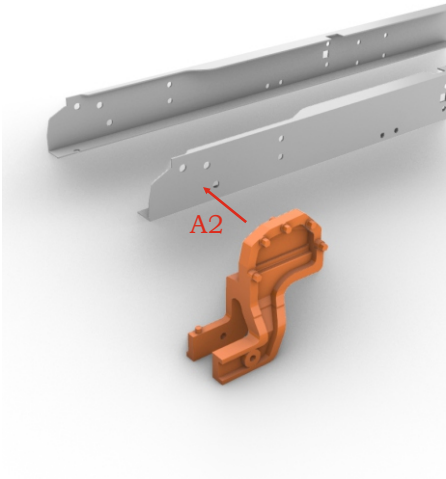


35. 


PE-part #7




36. 

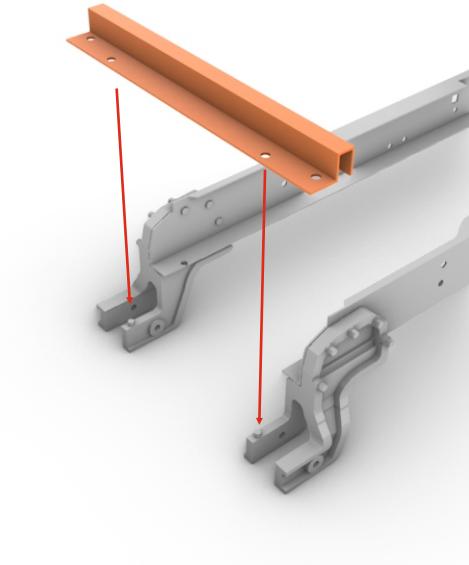


37.  x2

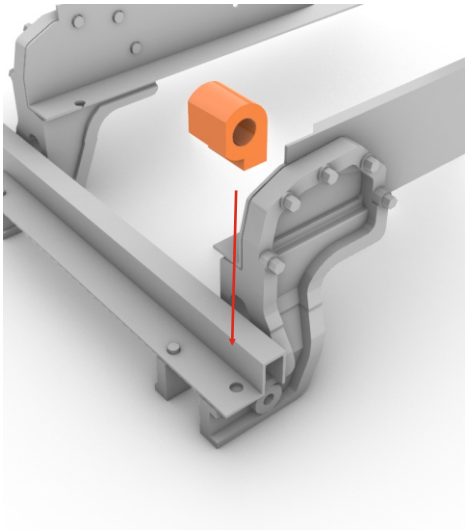

38.  x2

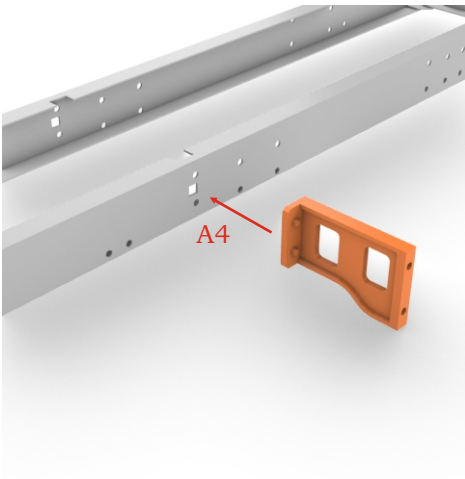


39.  x2

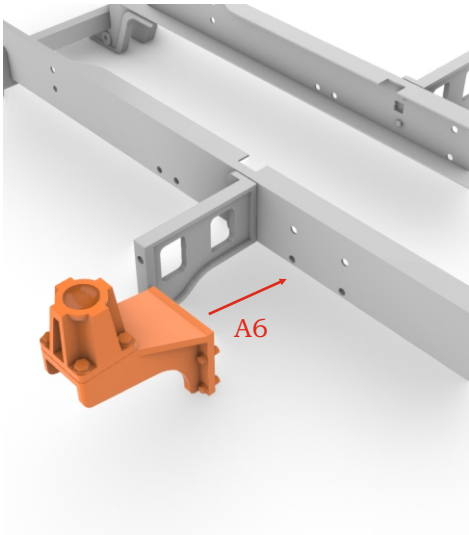


40.  x2

PE-part #21

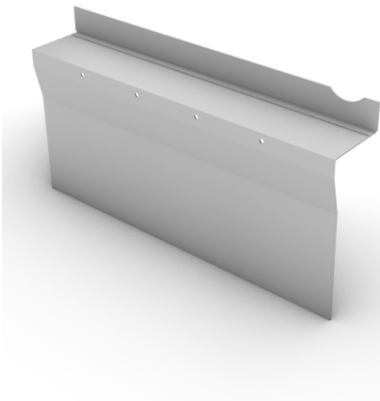


41.  x2


PE-part #3

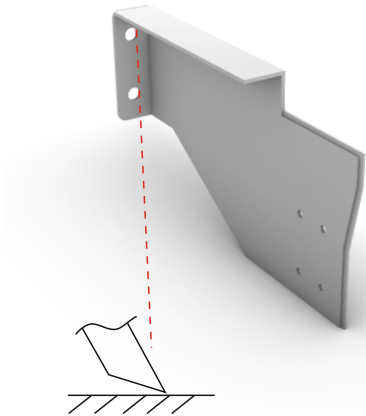



42.  x2

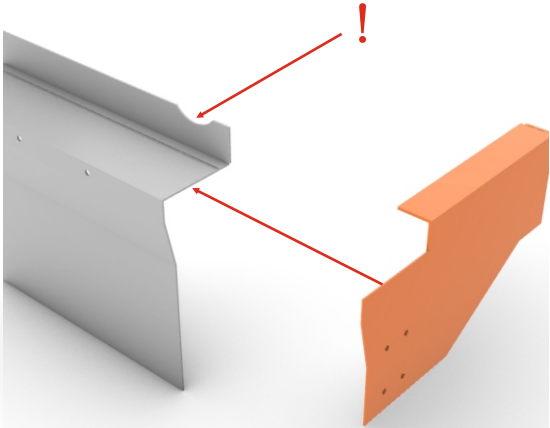



US W990 truck (day cab). Resin kit, 1/24


43.  x2
PE-part #4

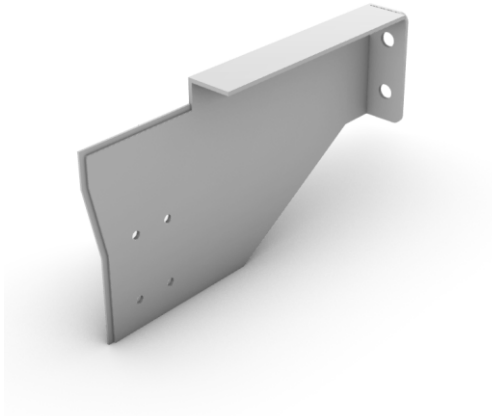


44.  x2

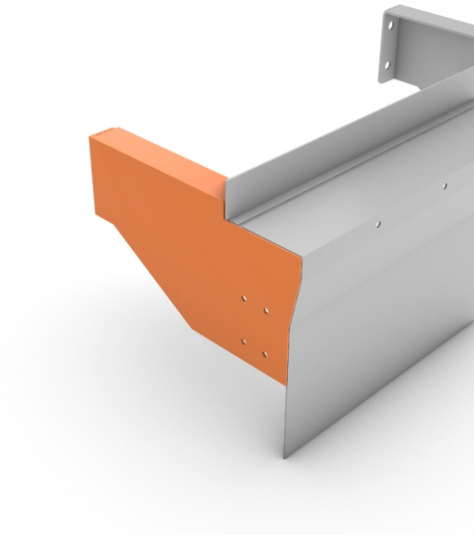


45.  x4
PE-part #1

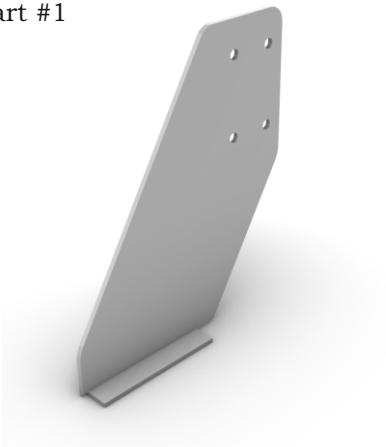

46.  x2

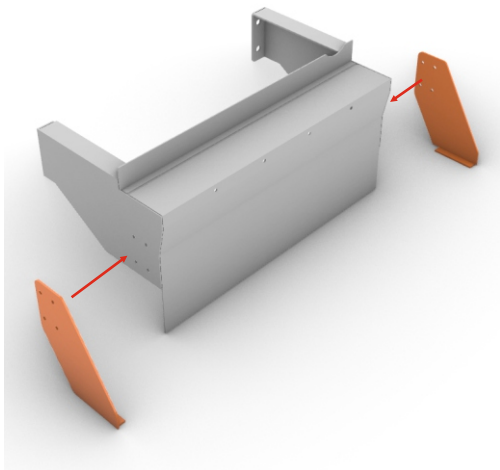



47.  x2


PE-part #22




48.  x2

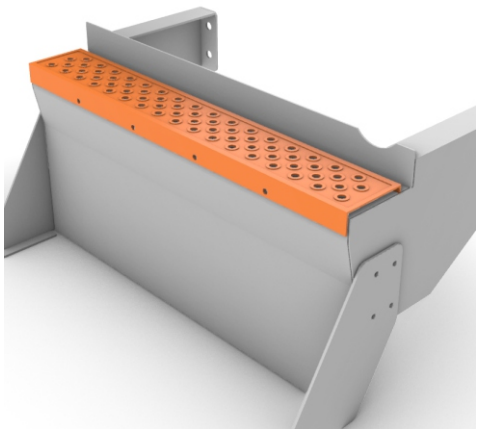


49.  x2
PE-part #19

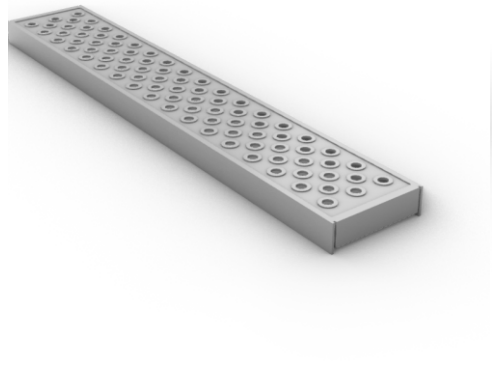

50.  x2

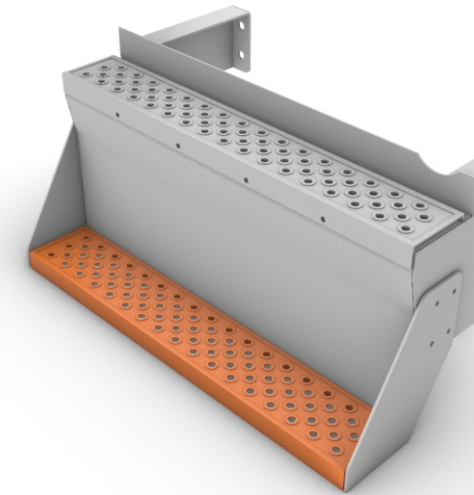


51.  x2

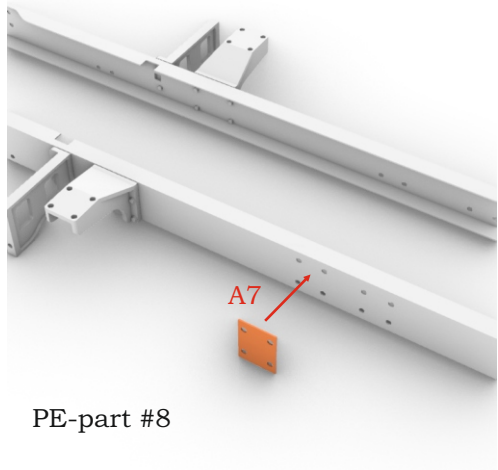


PE-part #8

US W990 truck (day cab). Resin kit, 1/24


52.  x2
PE-part #2




53.  x2

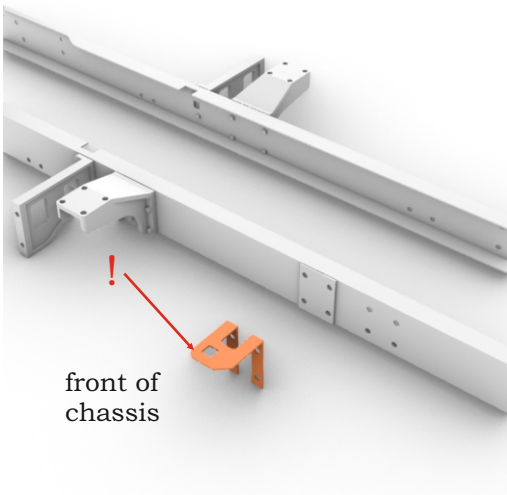


54.   x2
PE-part #9

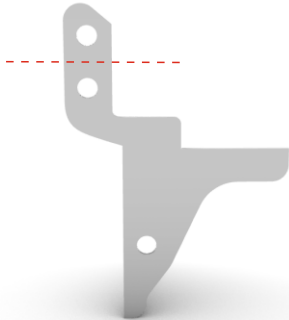


55.  x2

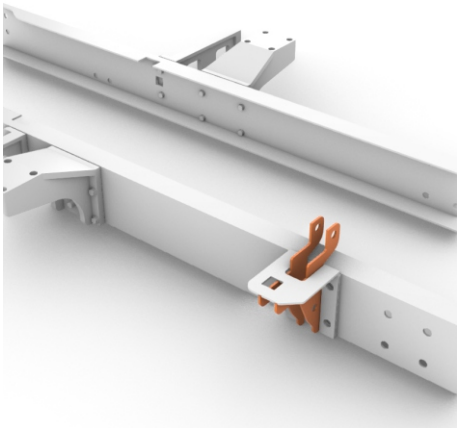


56.  x2

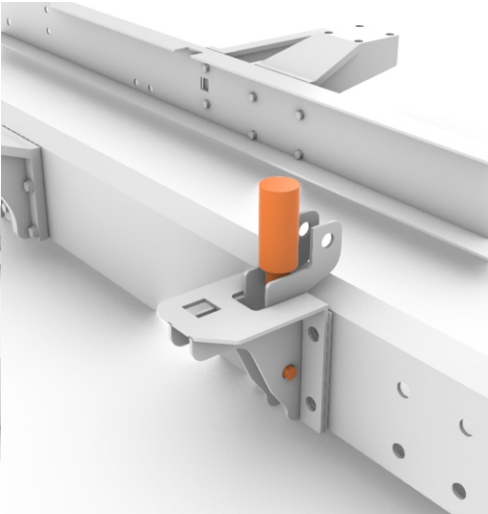


57.  x2

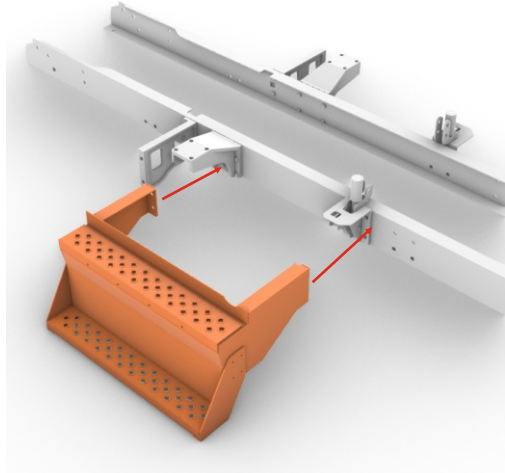


58. 

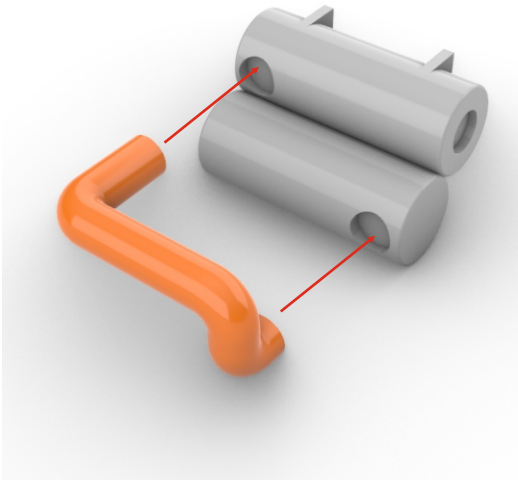


59. 

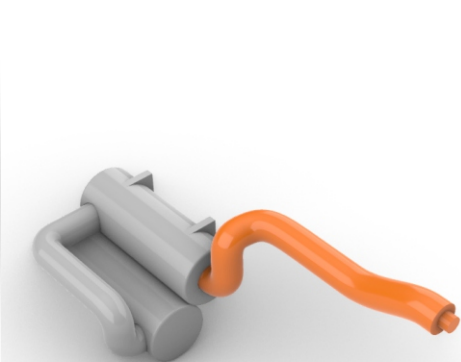



60. 

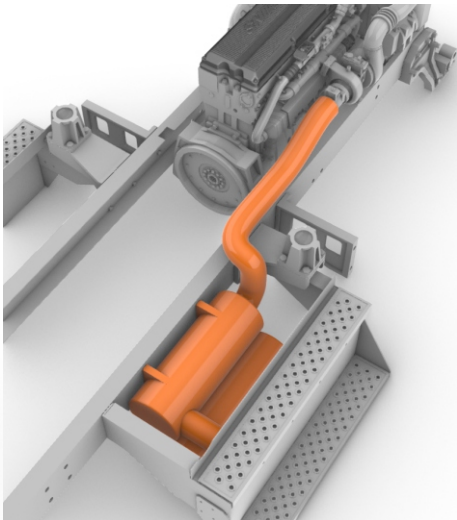

US W990 truck (day cab). Resin kit, 1/24

61.  x10
PE-part #13

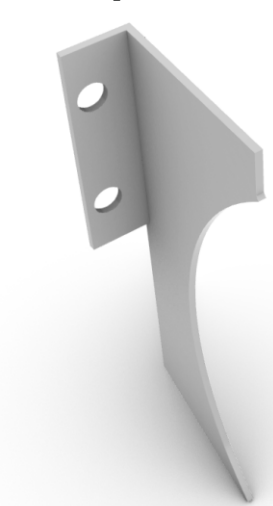


62.  x5




PE-part #12


63.  x5

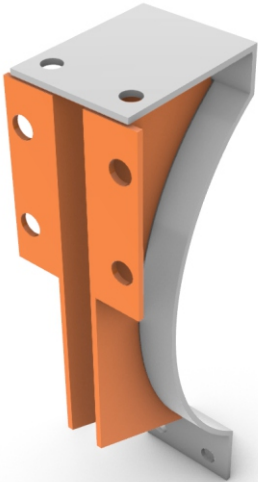


64. 

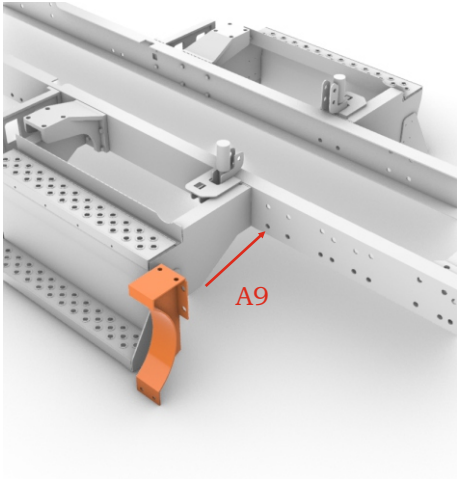


65. 

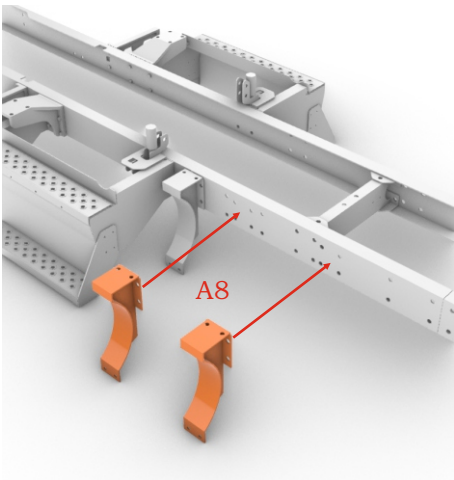


66. 

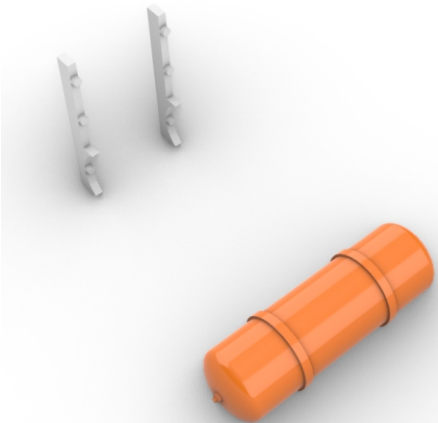


67. 

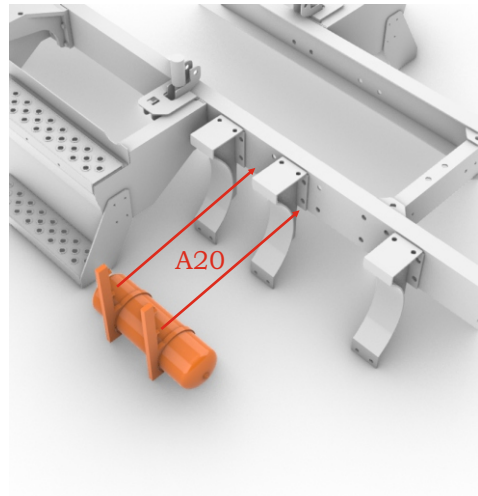

68. 

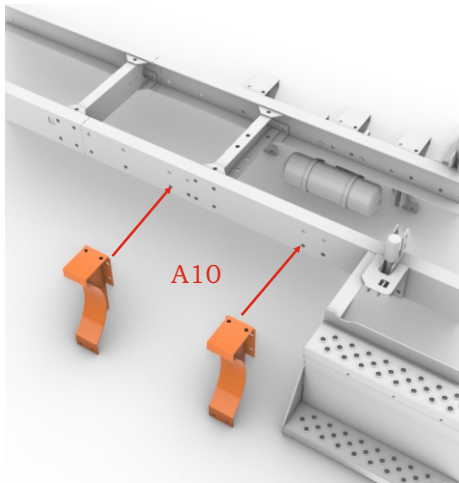


69. 

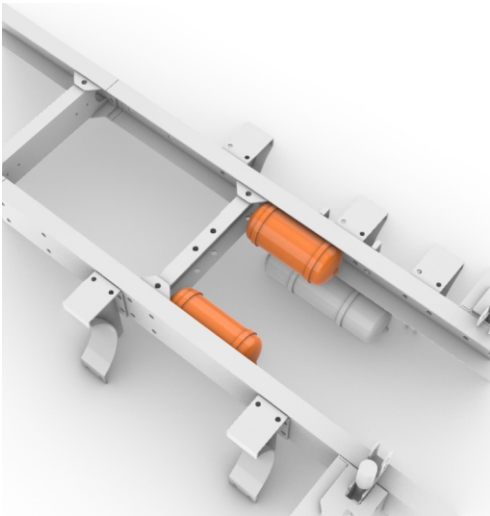


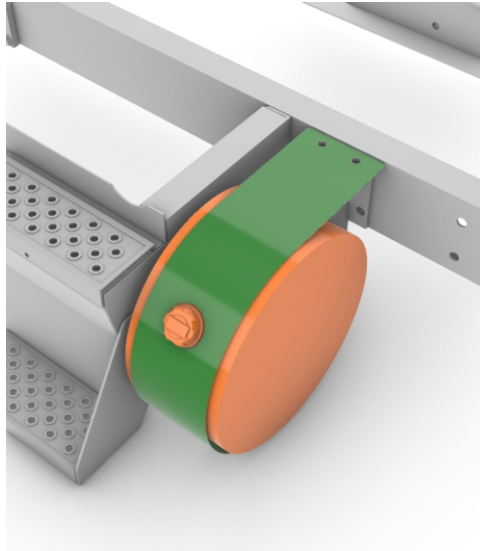
US W990 truck (day cab). Resin kit, 1/24

70.  

PE-part #28

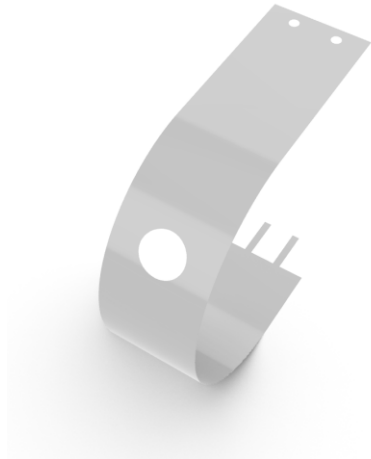

71.  ! left side




72.   x2


PE-part #29
PE-part #37





73.  x4

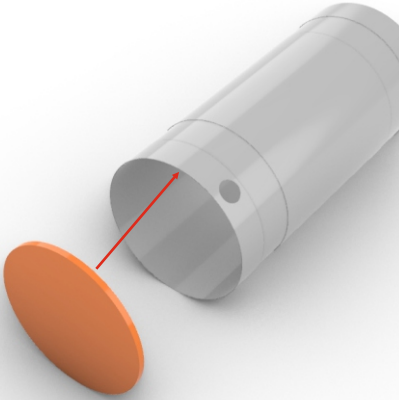


74.  x2

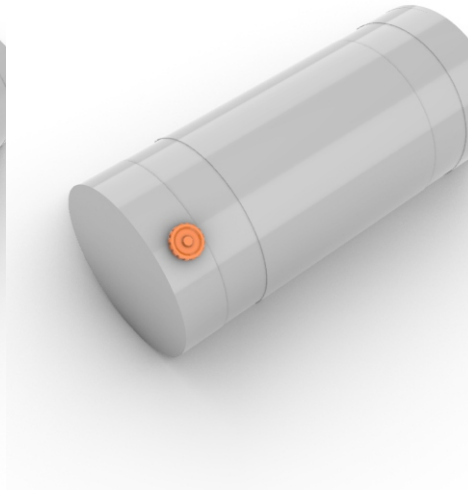


75.   x4

PE-part #27

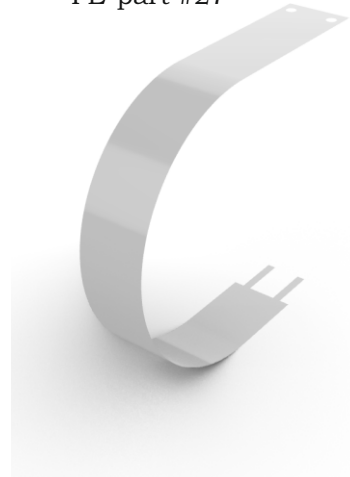


76.  ! right side

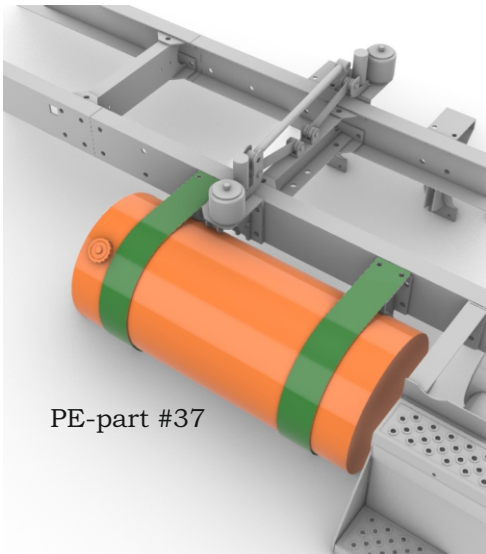


PE-part #37

77.  ! left side

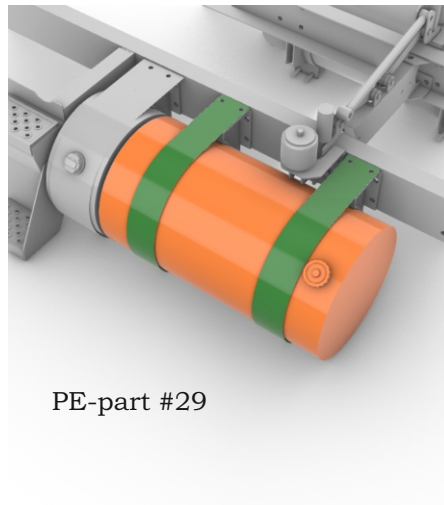


PE-part #29

78. 

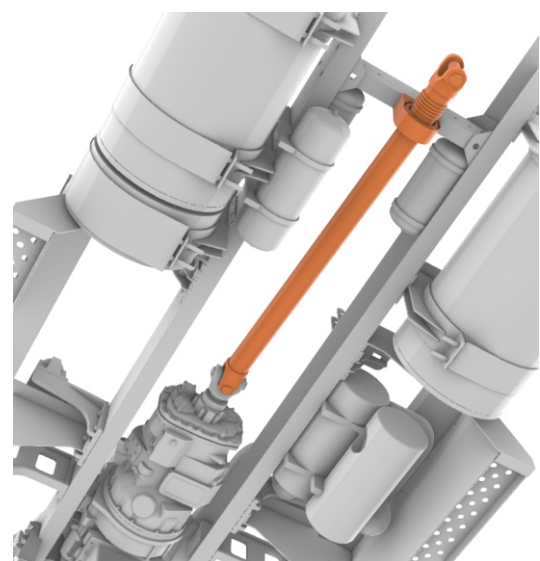


US W990 truck (day cab). Resin kit, 1/24


79. 

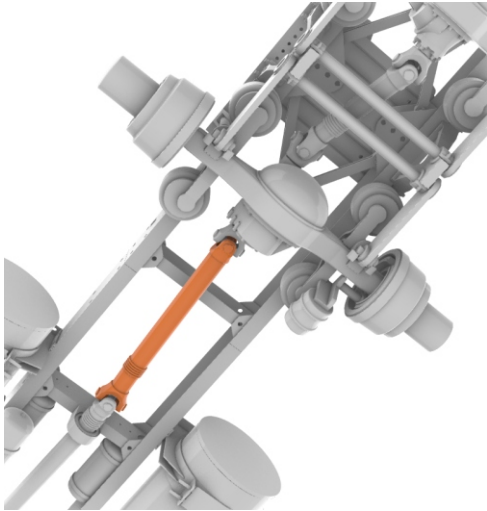


80. 

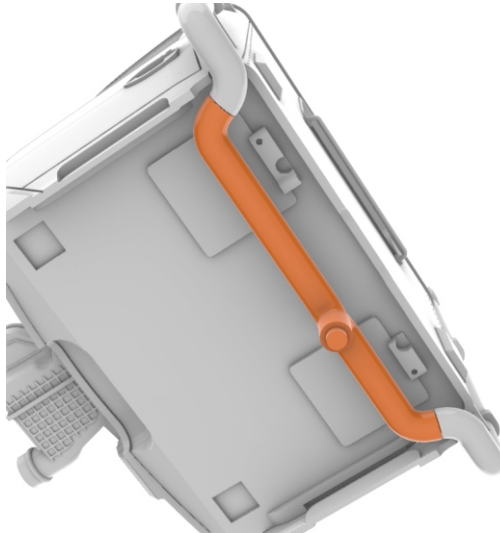


81. 

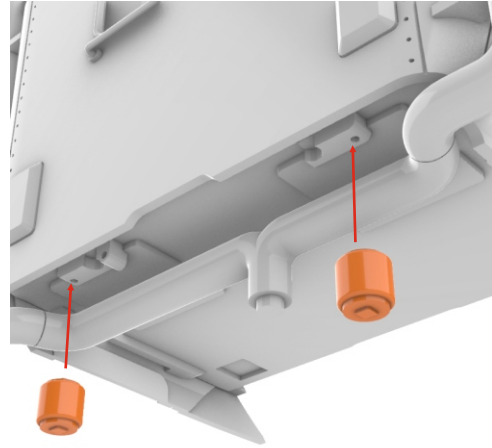


82. 

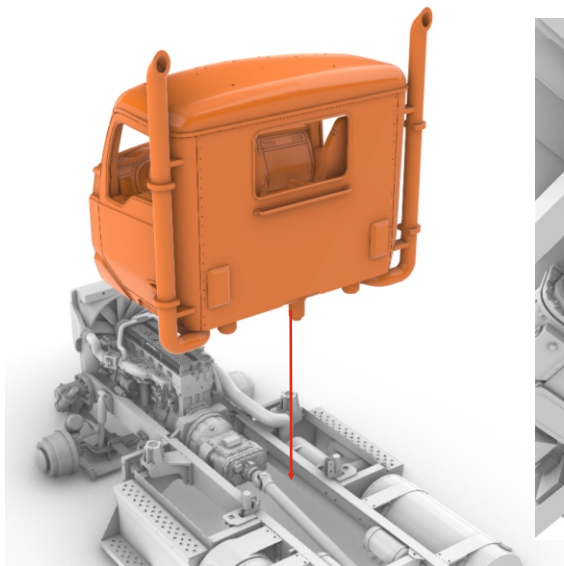


83. 

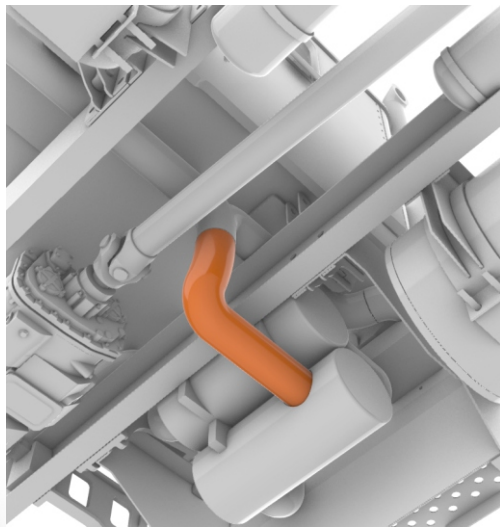


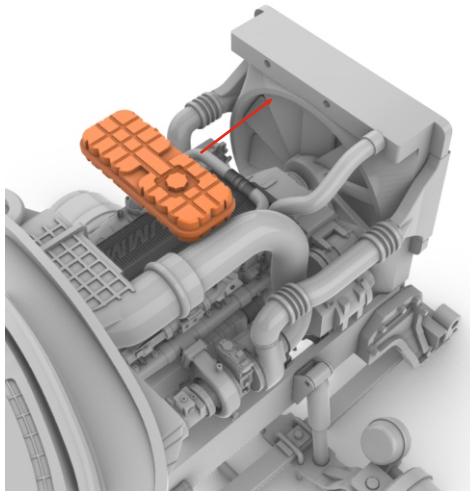
84. 

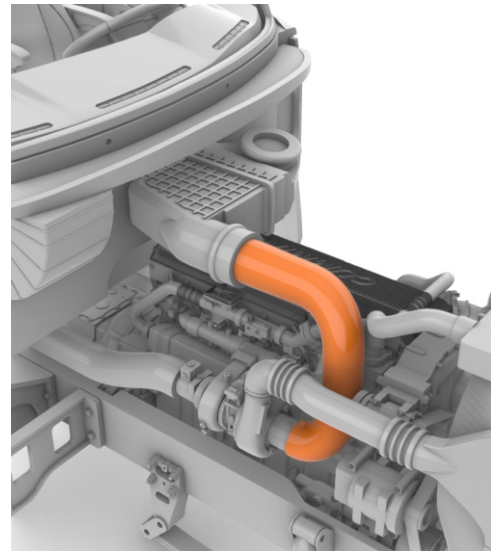


85.  x2

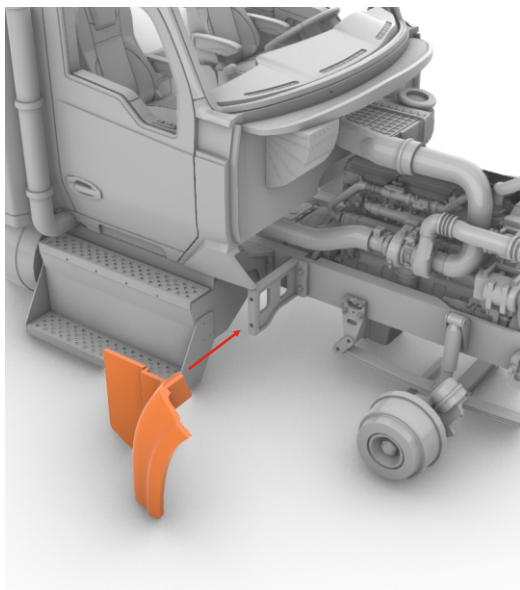

86. 
* A&N x15 engine and
W990 chassis shown.




87. 

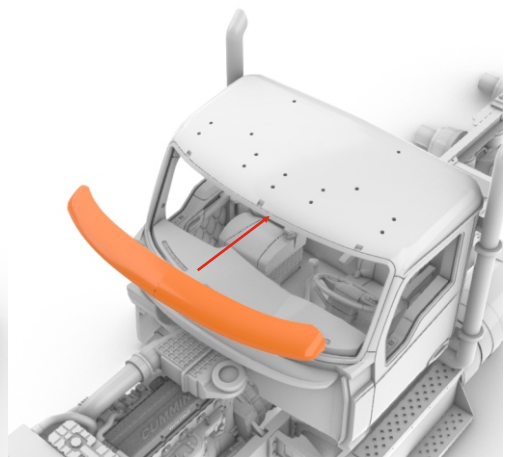


US W990 truck (day cab). Resin kit, 1/24

88.  x2
PE-part #26

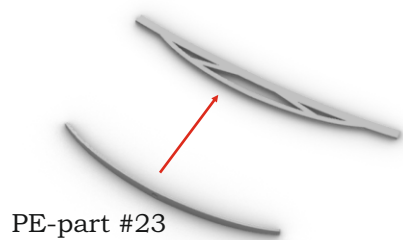


PE-part #23

89.  x2


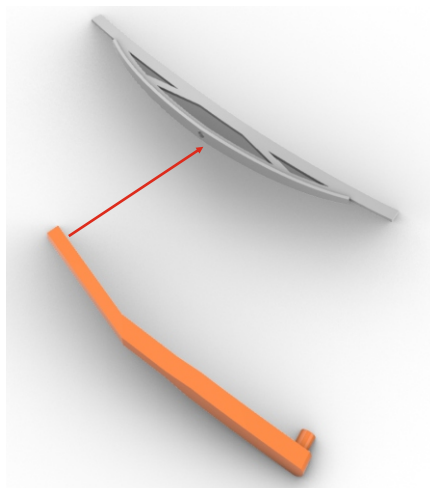


90. 

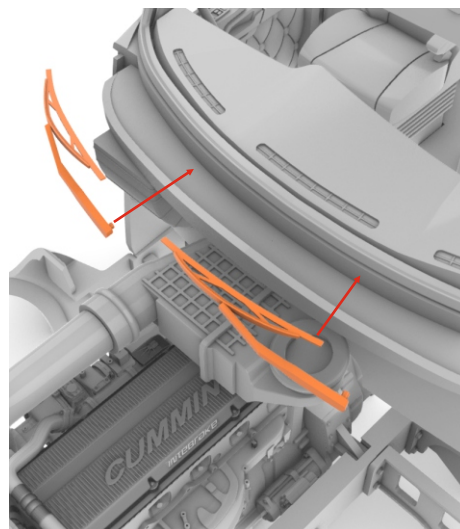


91. 


92.  x5

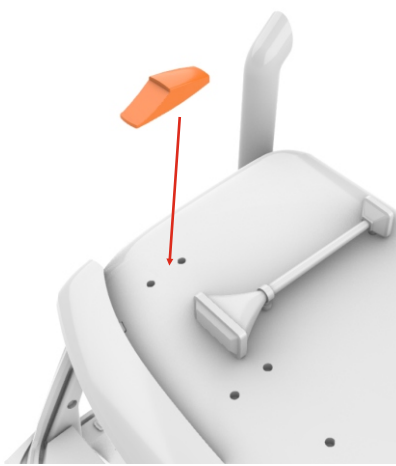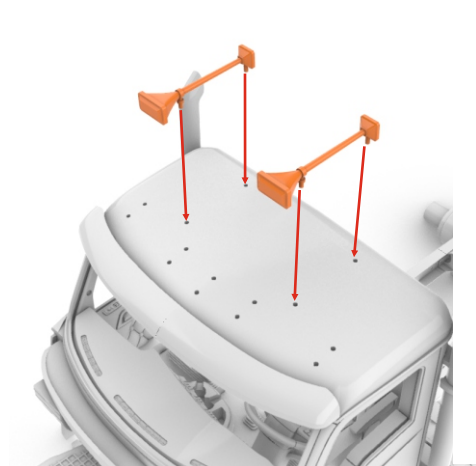


93. 

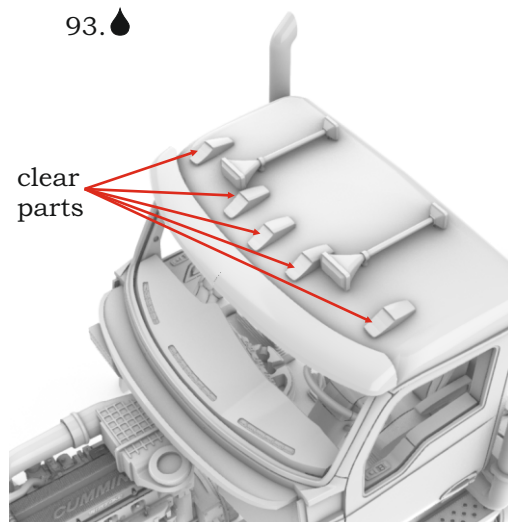


clear
parts

94.  x2
PE-part #20


95.  x2

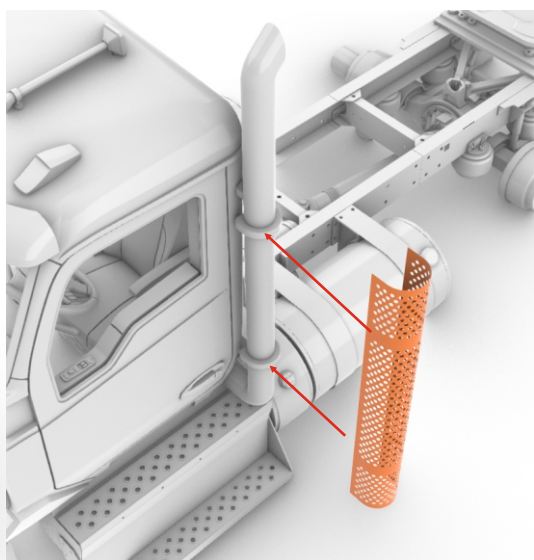


96.  x2

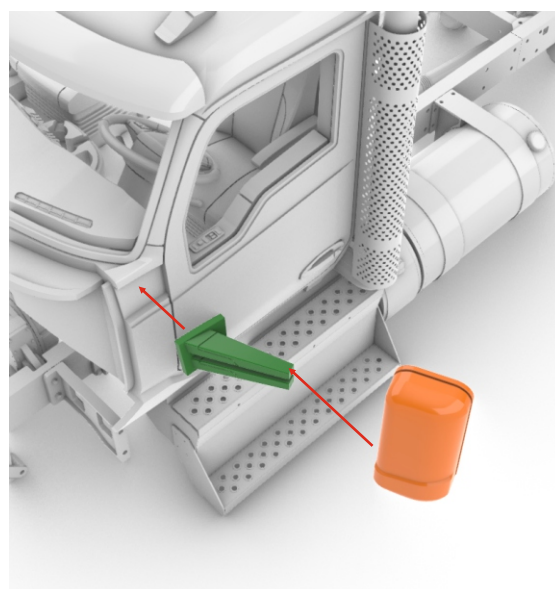


US W990 truck (day cab). Resin kit, 1/24


97.  PE-part #14

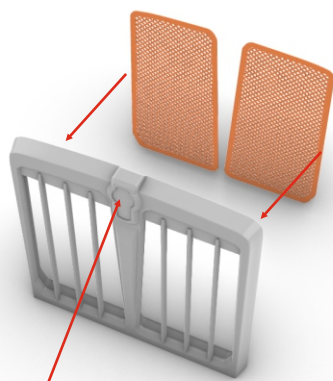


98.  x2

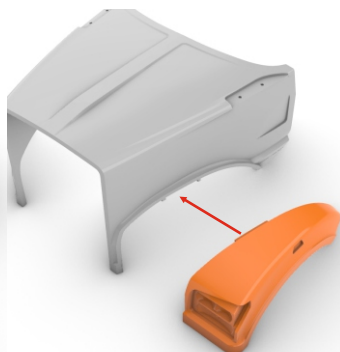

99. 

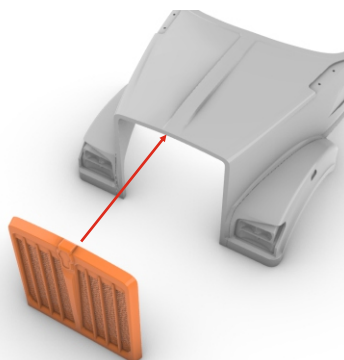


113.  x2

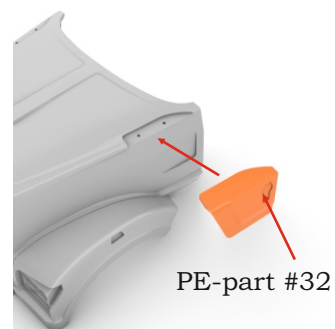



PE-part #32


100.  x2

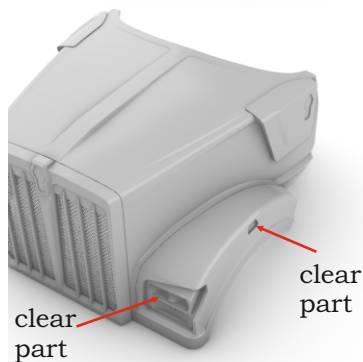


101. 

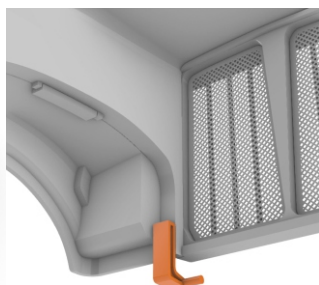


102. 

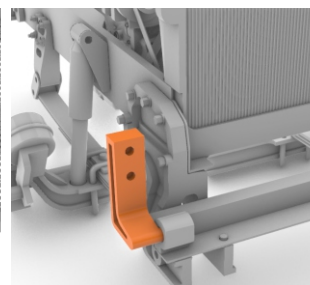


103. 

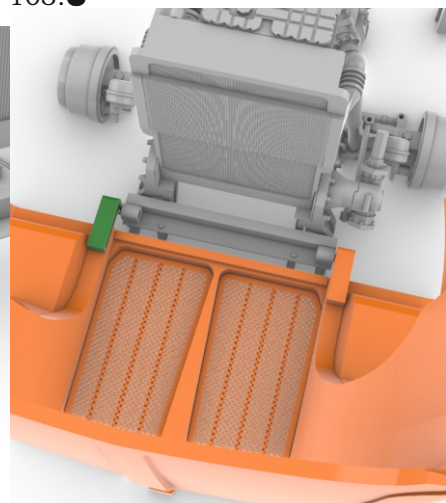

104. 

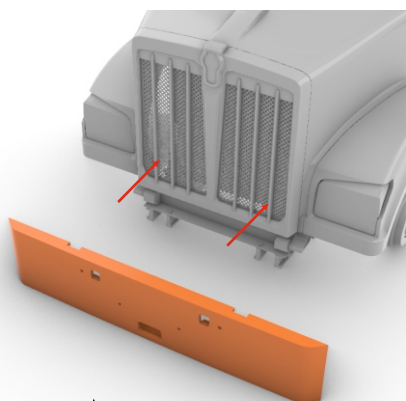


105.  x2

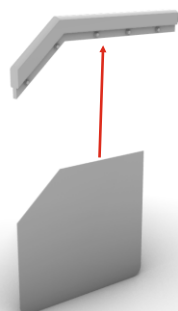

PE-part #30


106.  x2

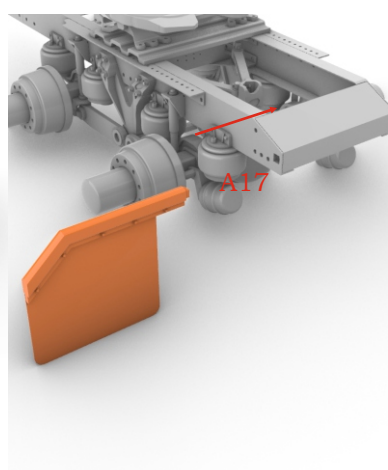

107.  x2 PE-part #31



108. 

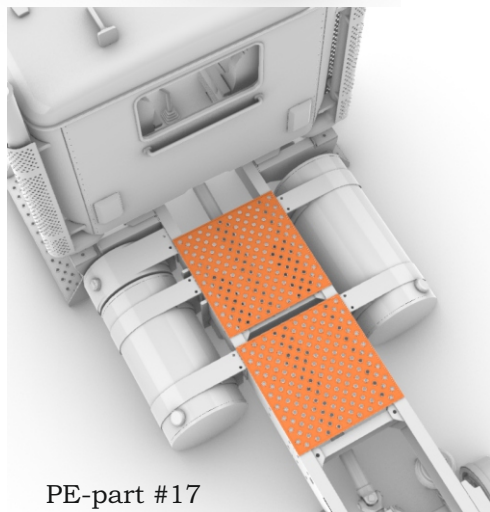

PE-part #17