


A&N Model Trucks

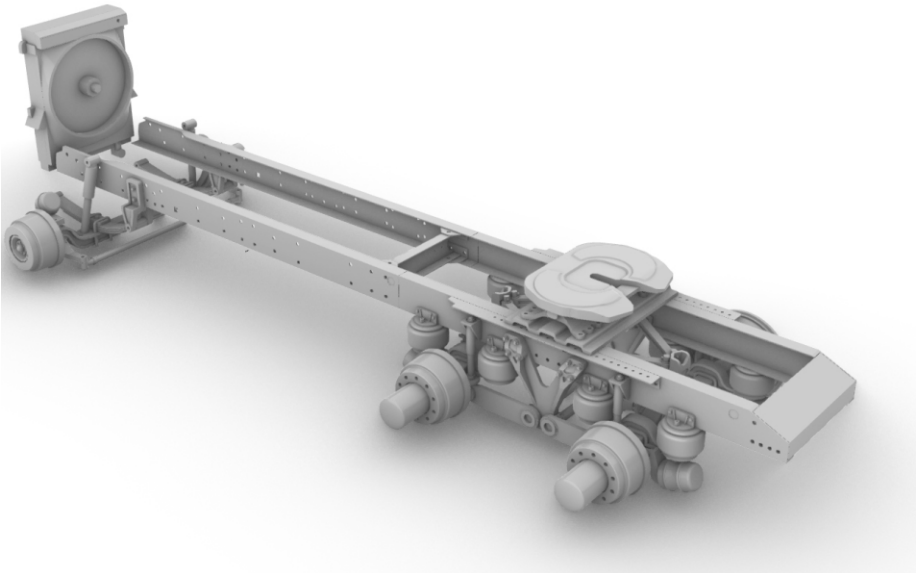

Chassis for Aussie
T610 SAR truck
(day cab).

Resin kit, 1/24

Warning!


Please follow this instruction while assembling, otherwise you could face problems with assembling the model.


Photo-etched parts have sharp edges, please be careful.


This model kit contains small parts and is not suitable for children.

This model is for advanced modellers only.

Symbols:


 - glue parts;


 - do not glue parts;

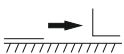 - bend parts;


 - attention;

 - moving parts;


 - your choice;





 - frame rails holes' numbers;

Chassis for Aussie T610 SAR (dav cab) truck. Resin kit, 1/24

1. 



2. 

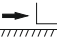
3.  x4

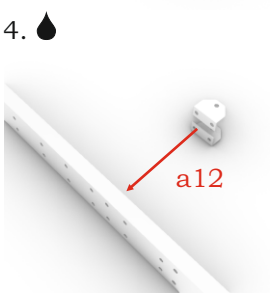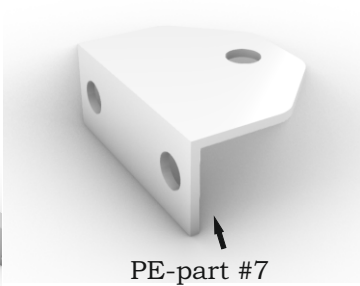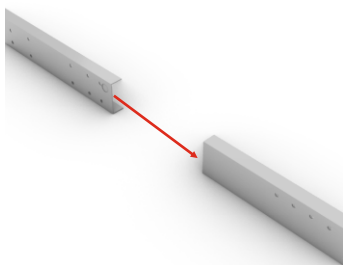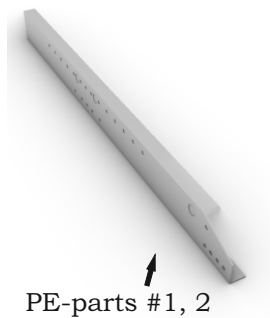

5.  x4




6. 

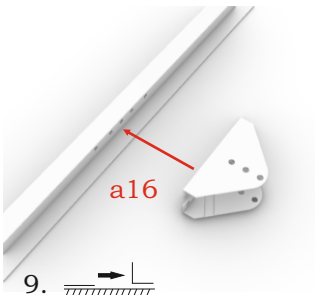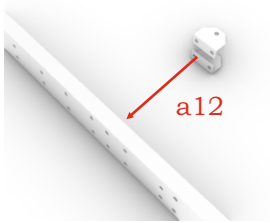

7. 

8. 


9. 

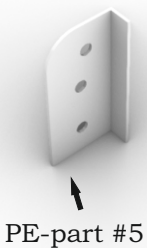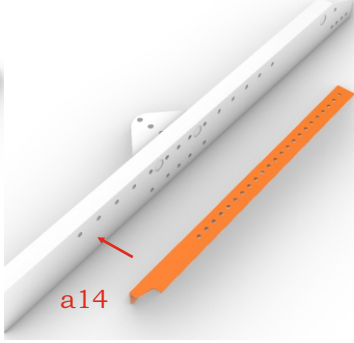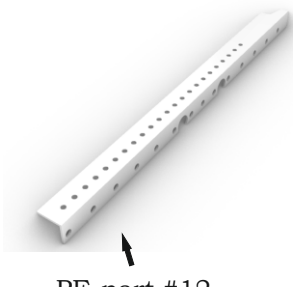


10. 

11.

12. 

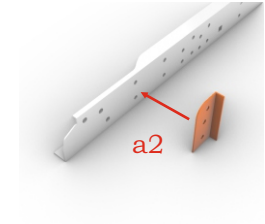


Repeat steps
1-10 for right
side

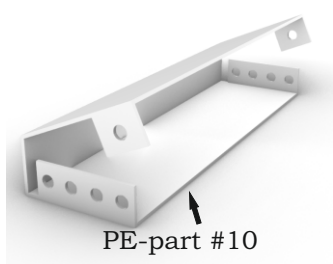


Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24


13. 

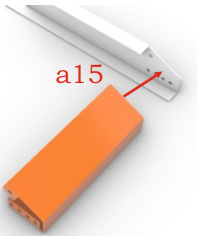



14. 

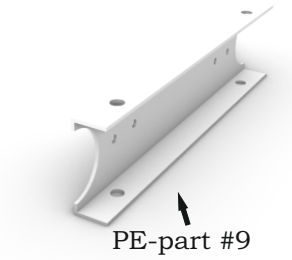


15. 

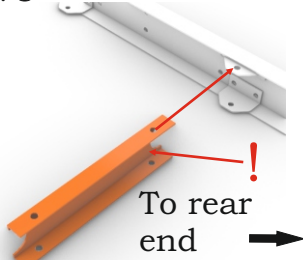


16. 

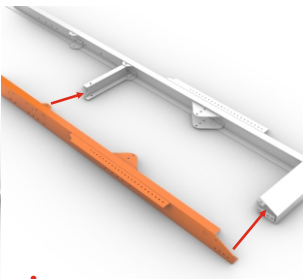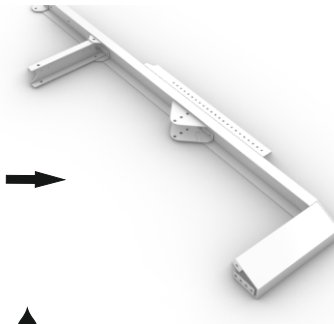

17. 

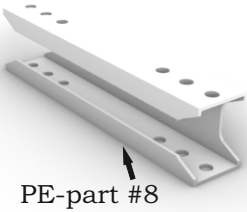


18. 

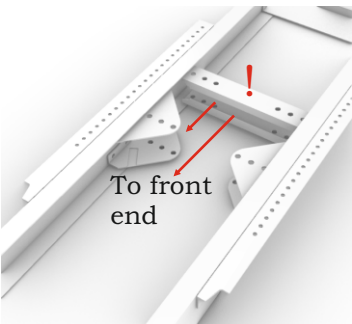


!

Green parts in this instruction are from T610 cab kit.


19.  x2

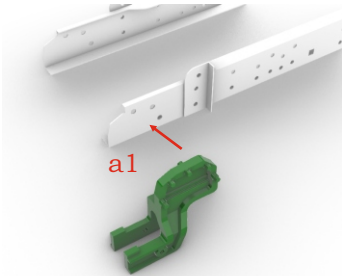


20. 

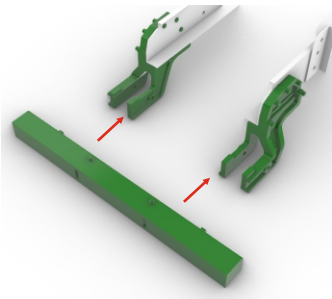

21.  x2

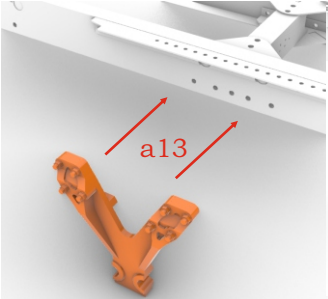


22.  x2

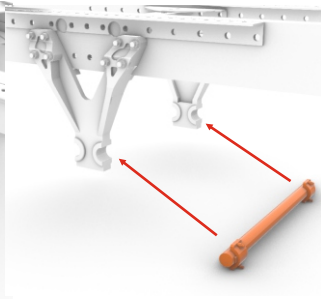


Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24

23. 1 x2

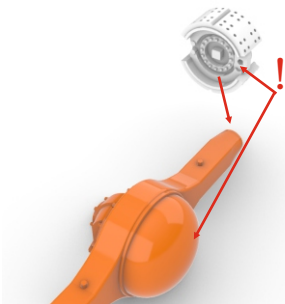


! Find this mark

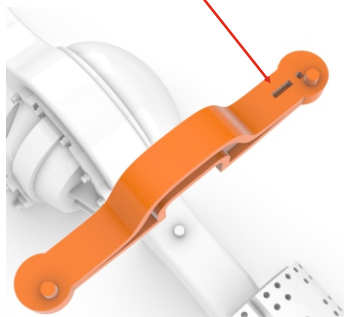


24. 1


To rear end;
! left side

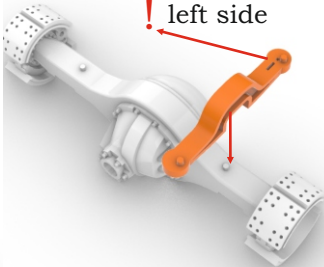


25. 1

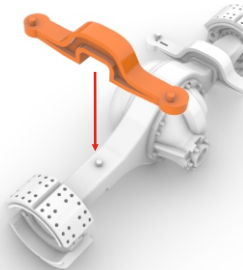


26. 1 x2

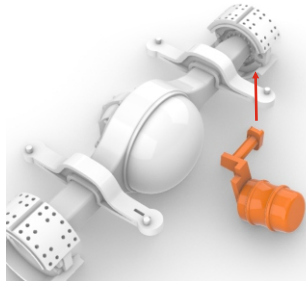


27. 1 x2

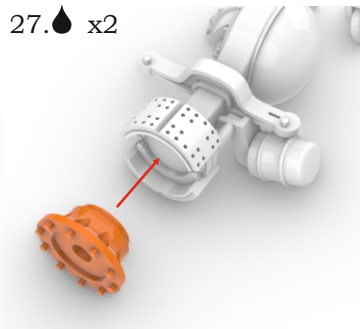


28. 1 x2

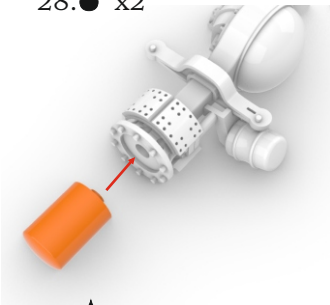


29. 1 x2

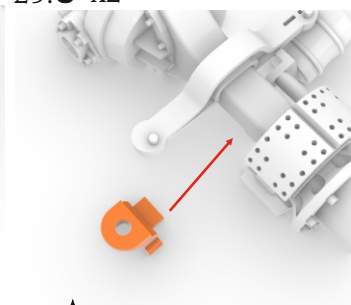


30. 1

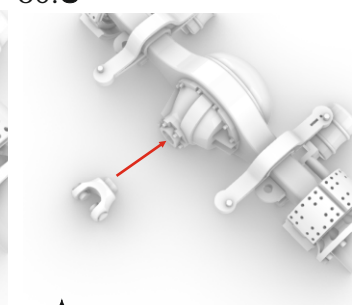


31. 1 x4

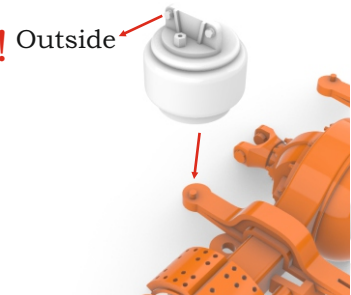

32. 1

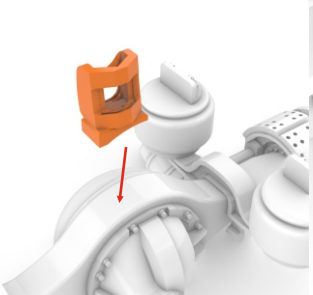


33. 1 x2

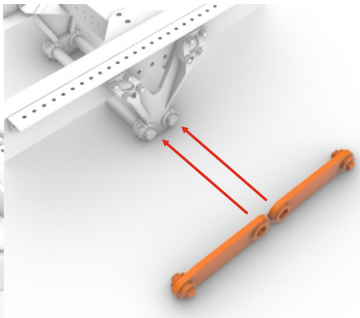


Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24


34.●

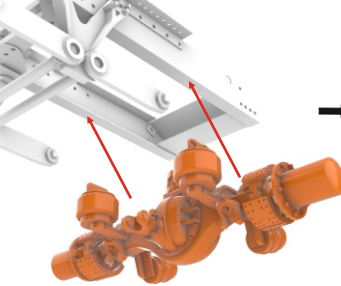


35.●

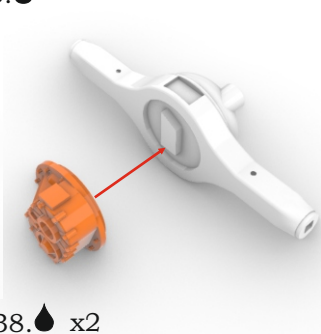


36.● x2

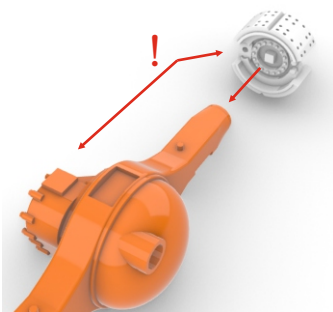


37.● x2

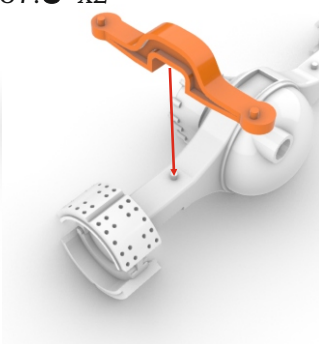


38.● x2

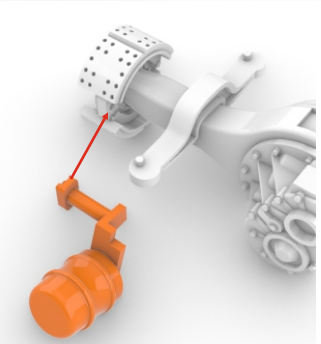


39.● x2

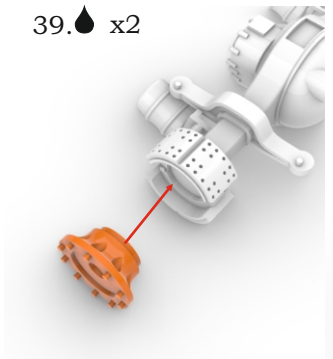


40.● x2

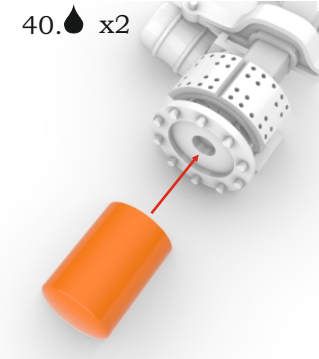


41.● x2

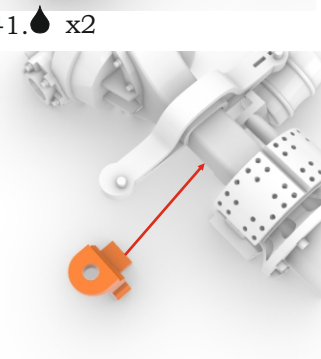


42.●

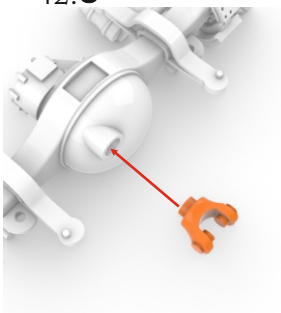

43.●

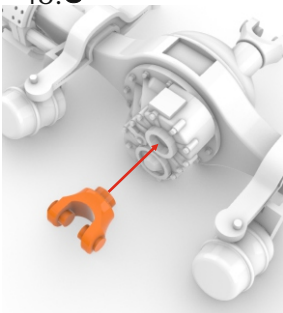


44.● x4

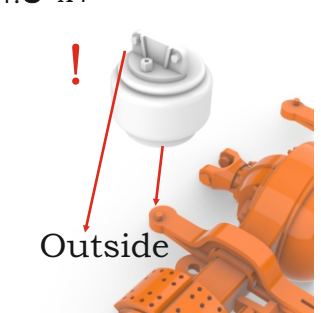


Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24


45.🔹

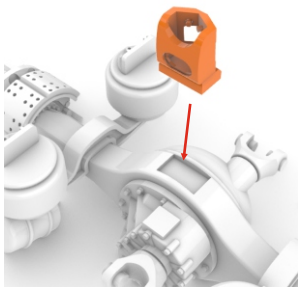


46.🔹

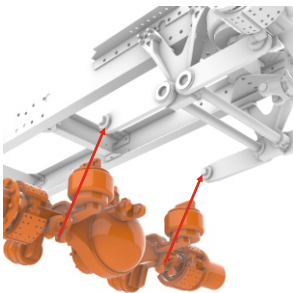


47.🔹 x4

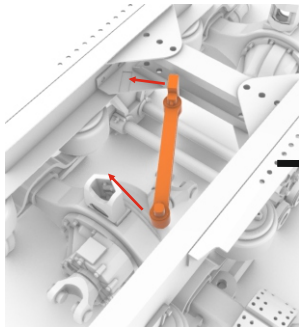


48.🔹

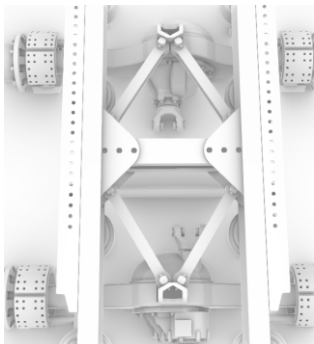


49.🔹 x4

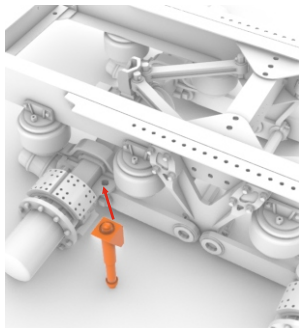


50.🔹 x4

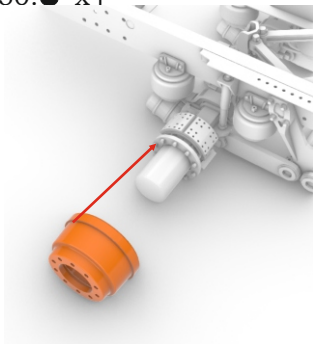


51.🔹

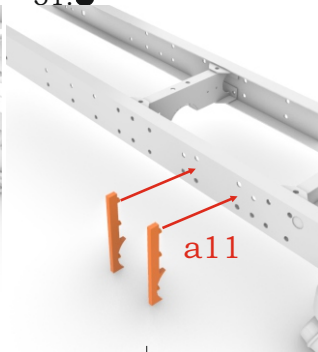


52.🔹

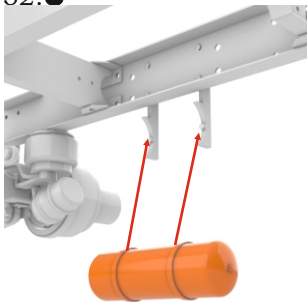


53.🔹

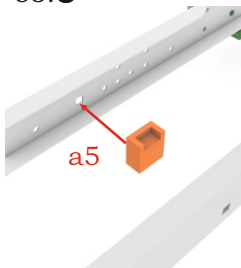














54.🔹

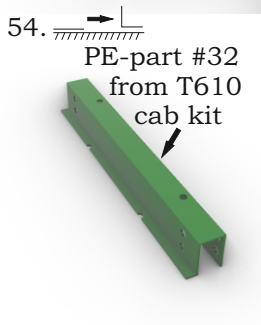

55.🔹

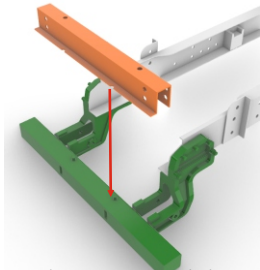

Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24

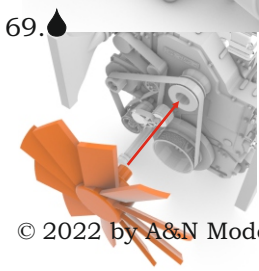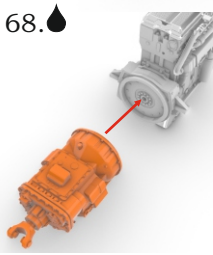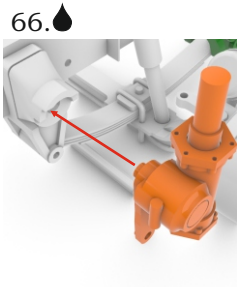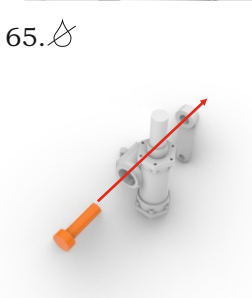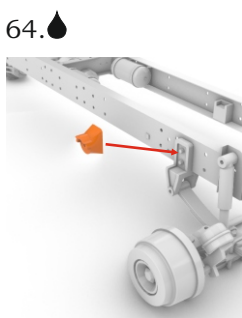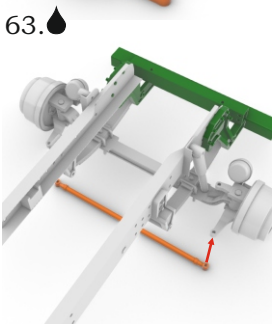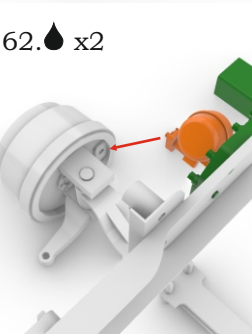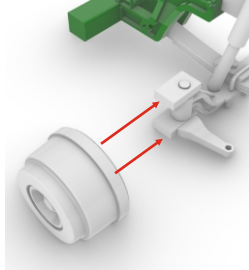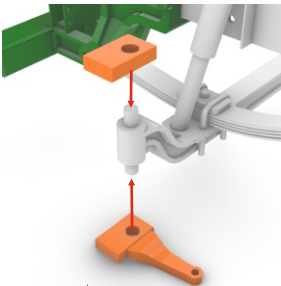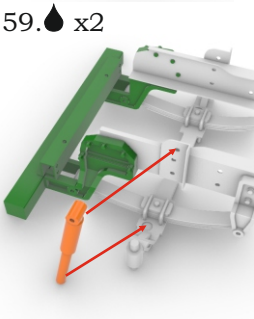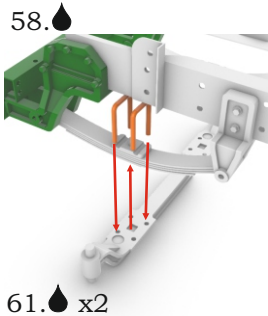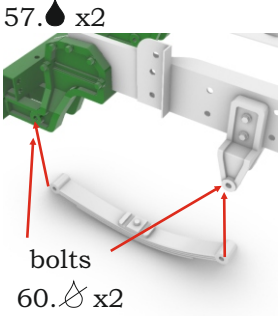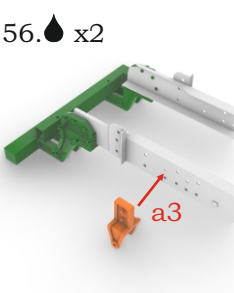

!

The engine in
this instruction -
X15 engine by
A&N Model Trucks

Chassis for Aussie T610 SAR (day cab) truck. Resin kit, 1/24

