

# A&N Model Trucks



Italian truck  
(Economy Line)

Made in Latvia

## Warning!

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.


This model kit requires donor chassis - Italeri Iveco Stralis.

---

## Symbols:

 - glue parts;


 - do not glue parts;

 - bend parts;

 - attention;

 - moving parts;


 - your choice;

 - cut;


 - drill;

# Italian truck (Economy Line)


1. 

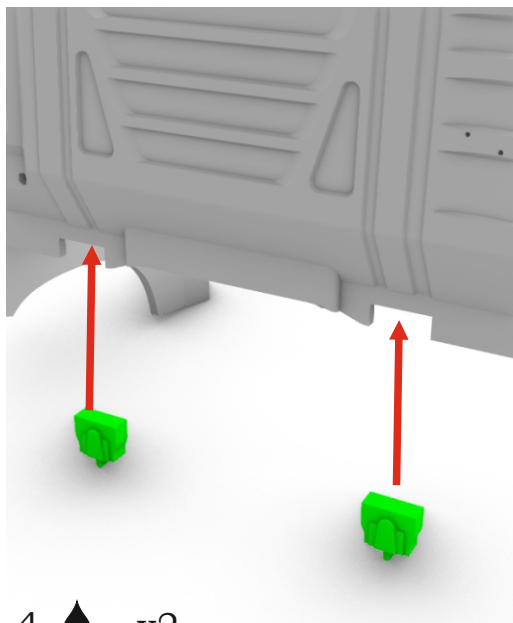


2.  x2

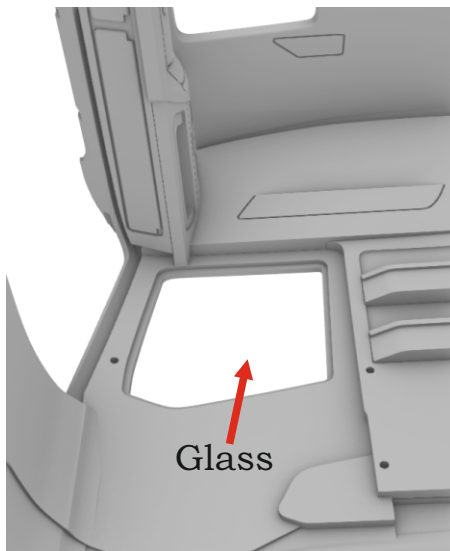

3.  x2

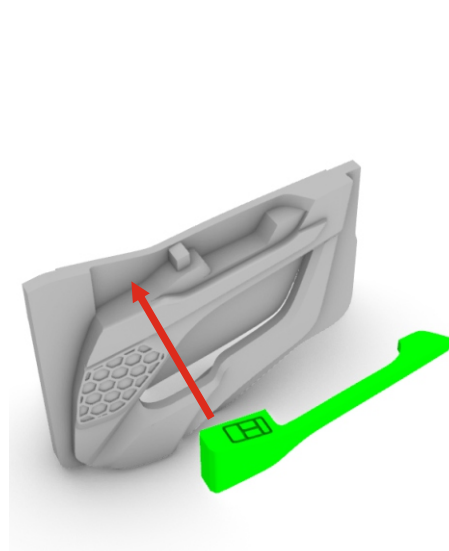


4.  x2

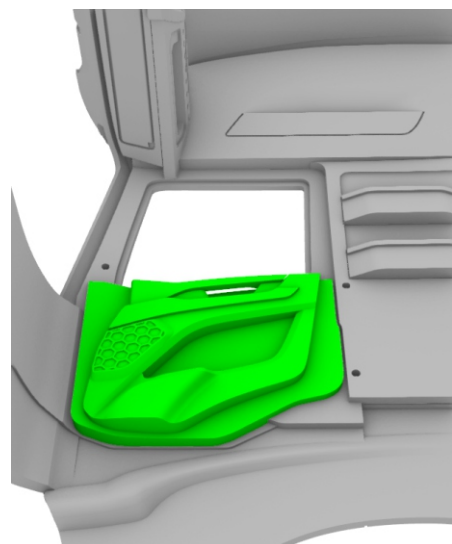


5. 

PE-part #16

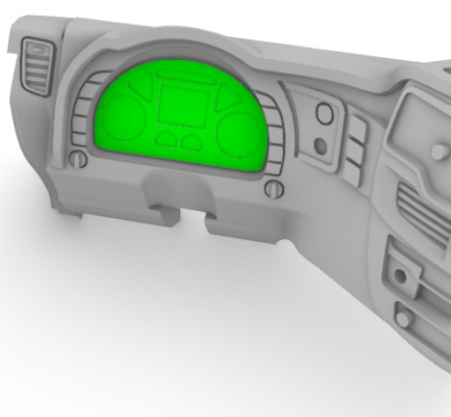

6. 

PE-part #17

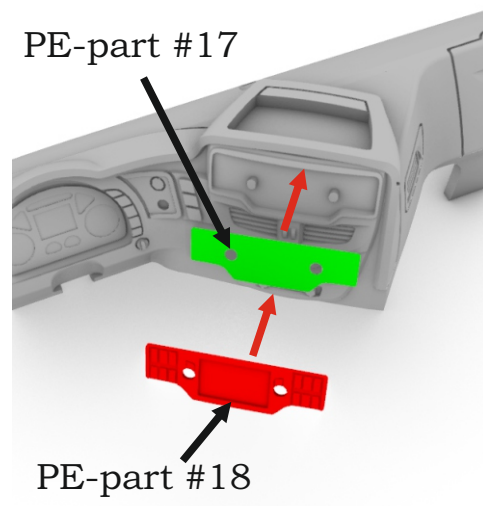

PE-part #18


7. 

PE-part #21




8. 

PE-part #19

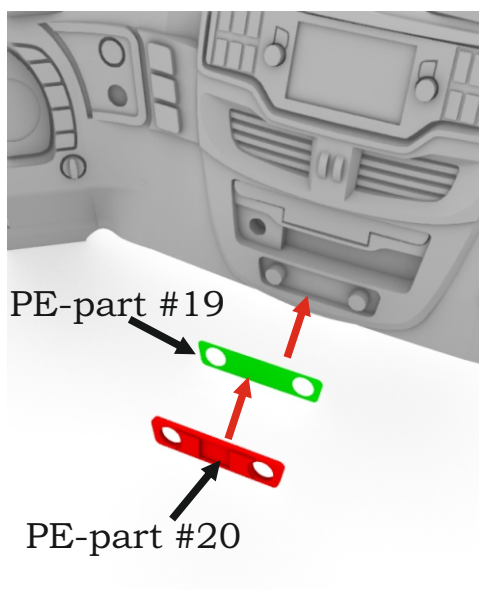


PE-part #20


9. 

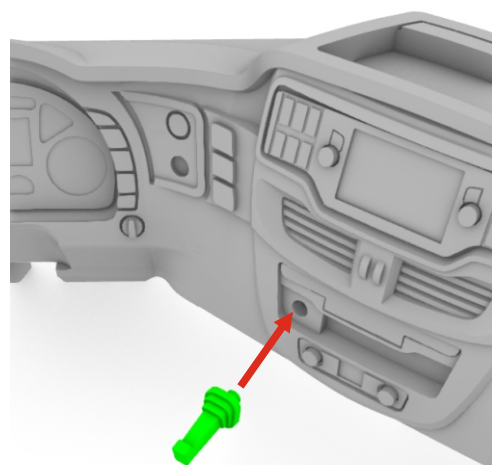



Italian truck (Economy Line)


10. 

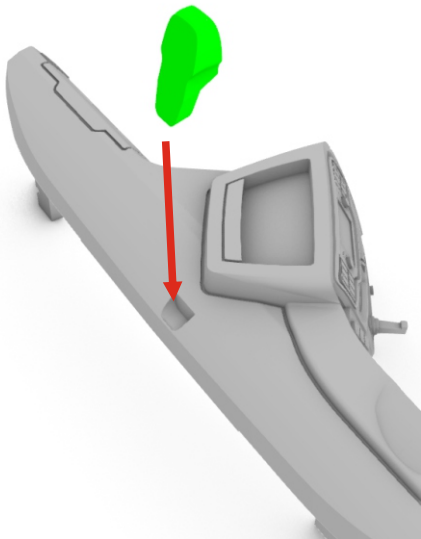


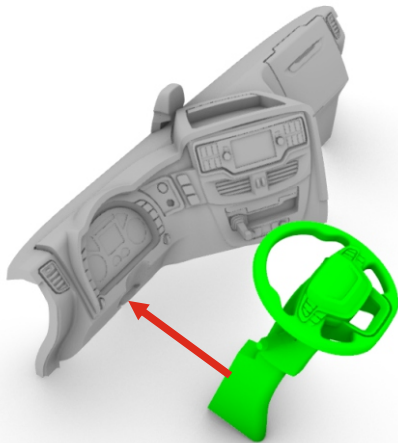
11. 

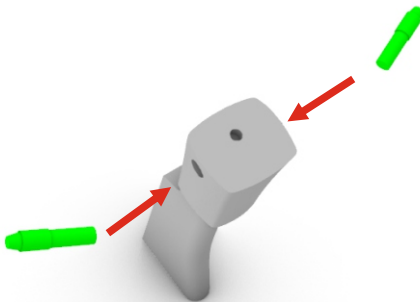


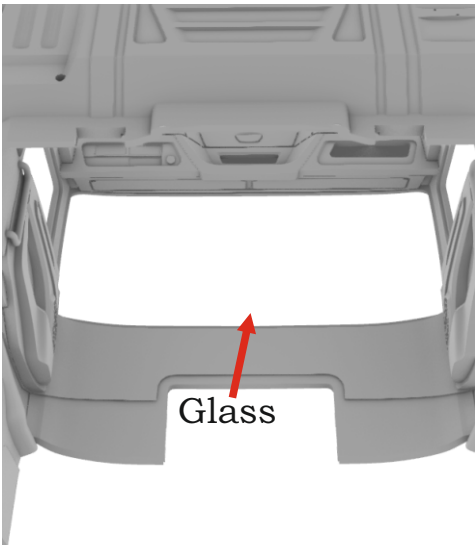
12. 

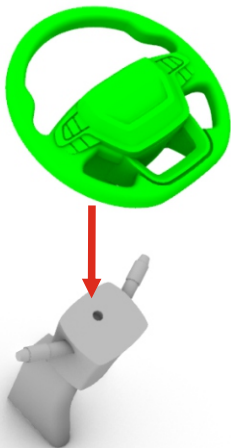


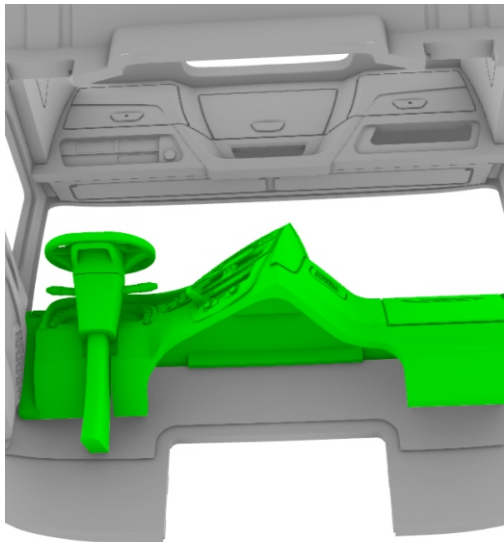
13. 




14. 




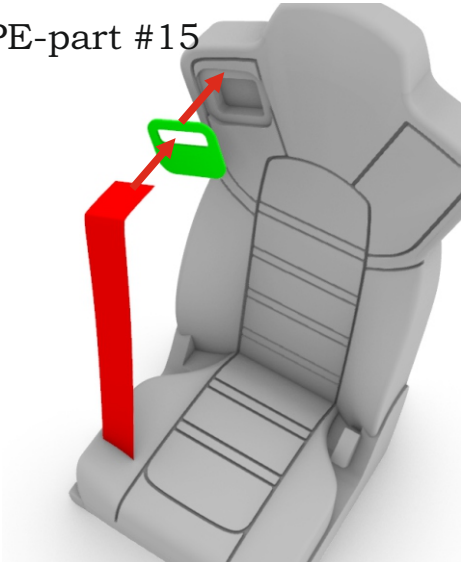
15. 




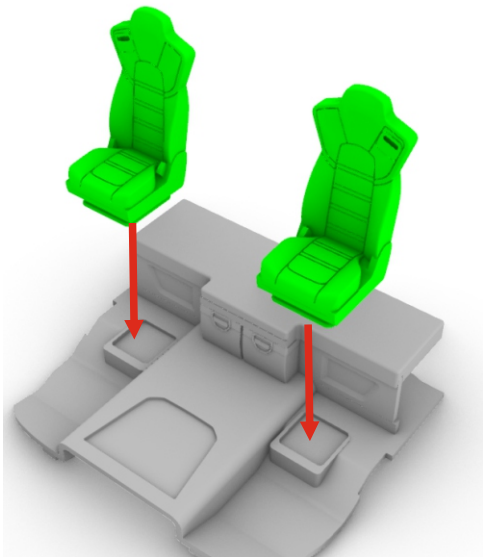
16.  x2

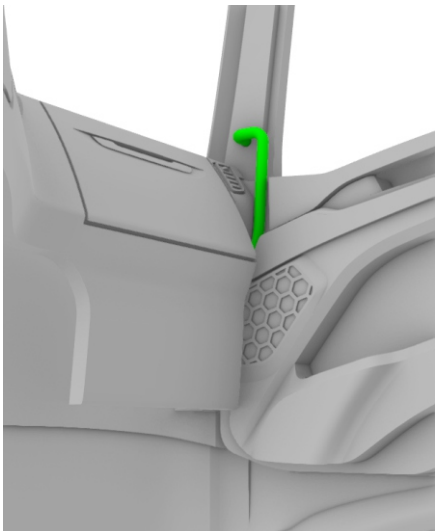

17.  x2  
PE-part #15




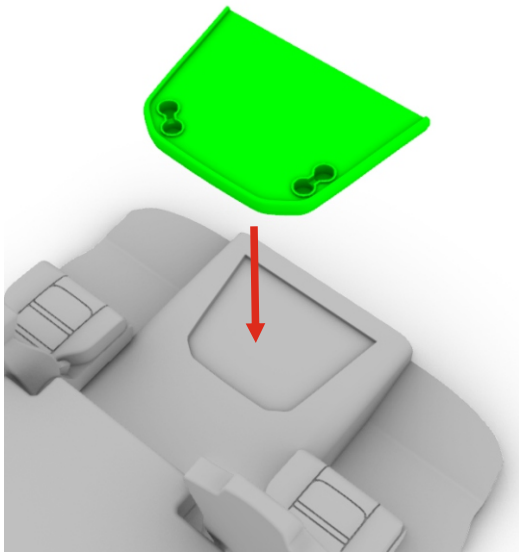
18. 




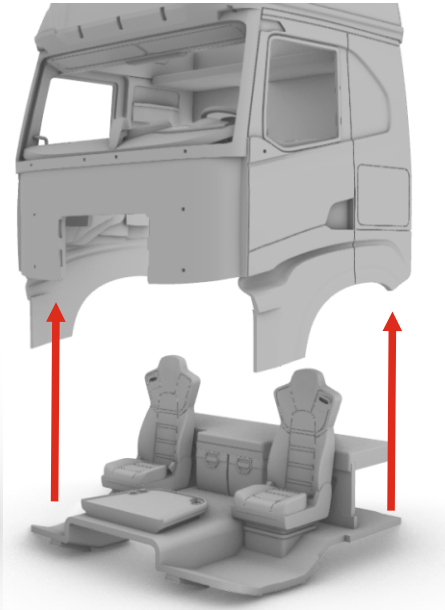


Italian truck (Economy Line)


19. 




20. 




21.  x2

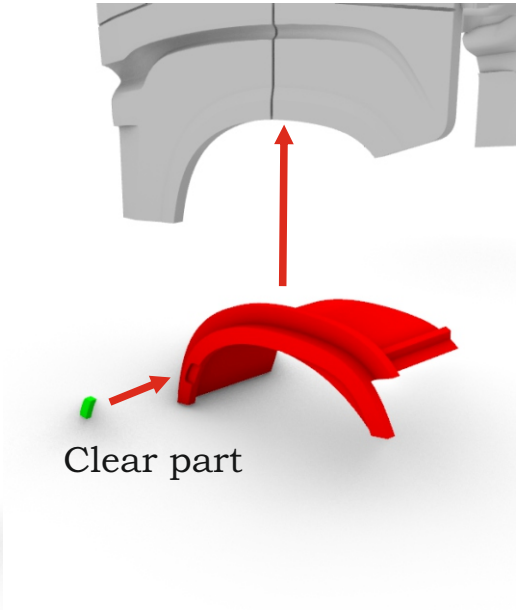


22.  x2

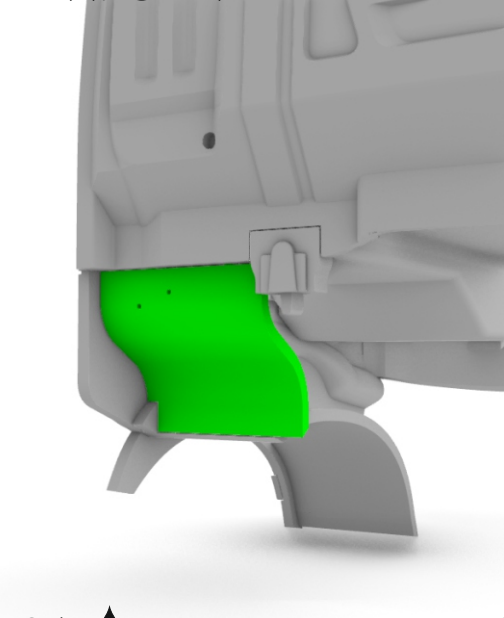


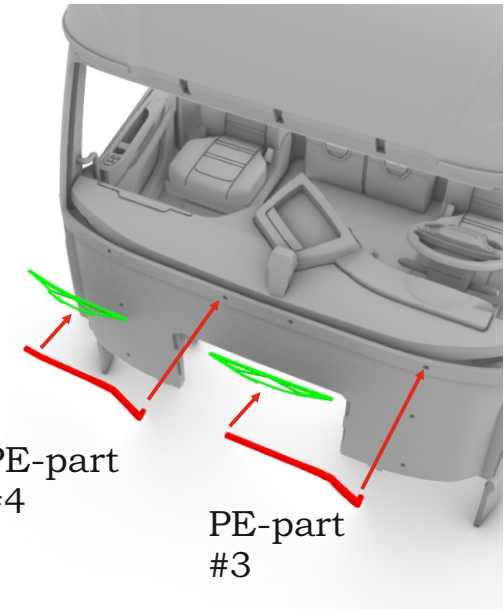
23.  x2

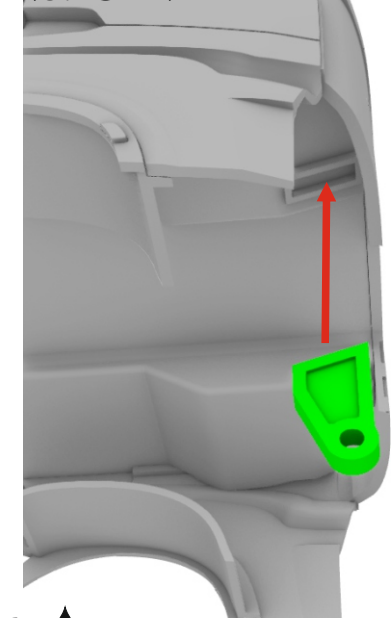


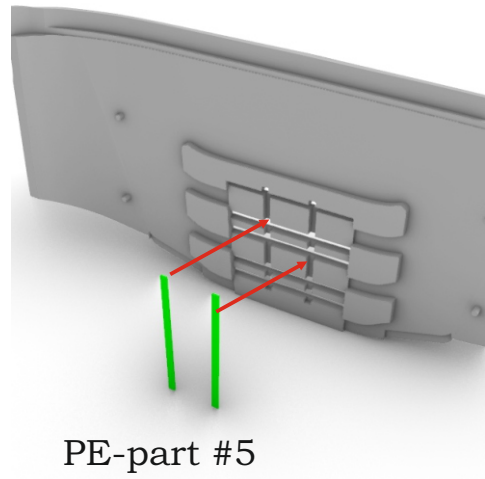
24.  x2

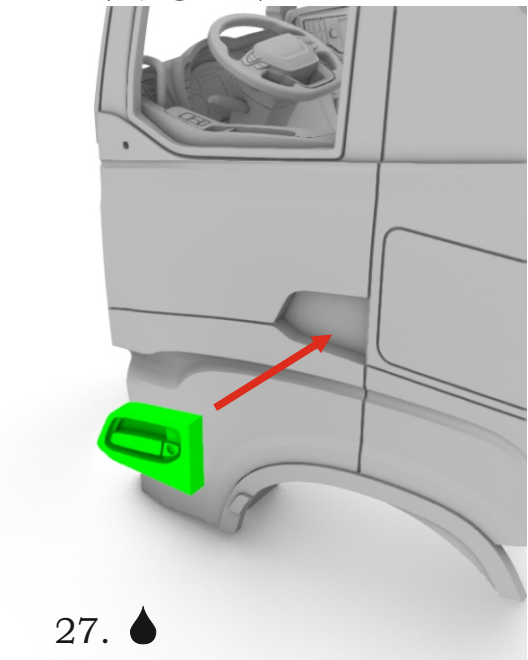

25. 




26. 



27. 




# Italian truck (Economy Line)


28.  x2


PE-part #1




29.  x2

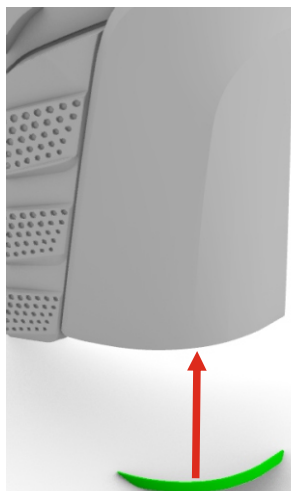



30. 

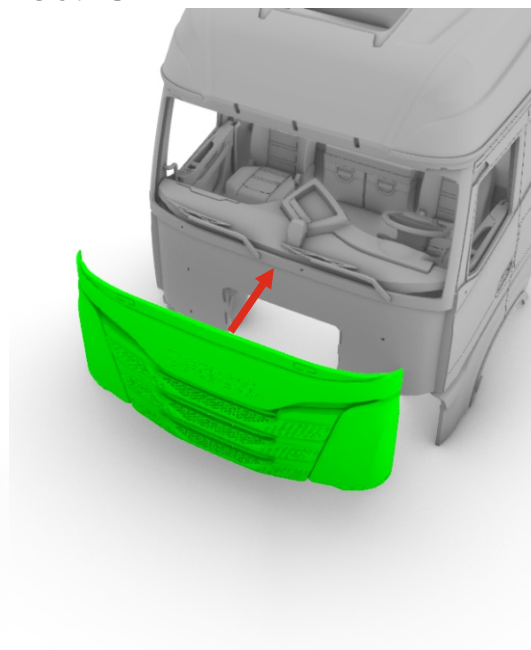


31. x8  
PE-parts #6a-11a

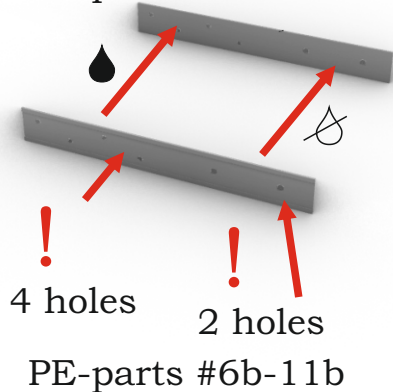


32.  x8

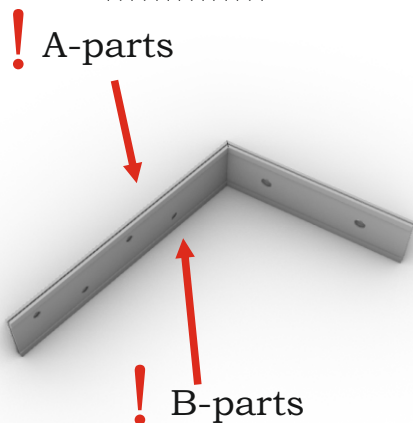


 33. x16


Diameter - 0.8

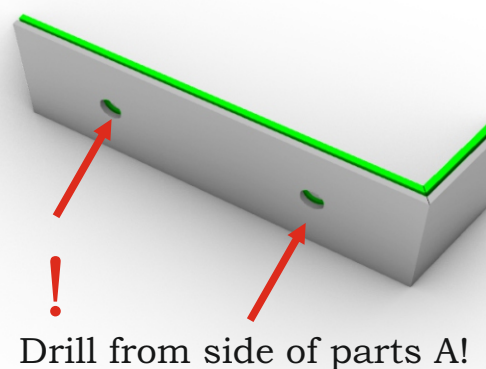


34. 

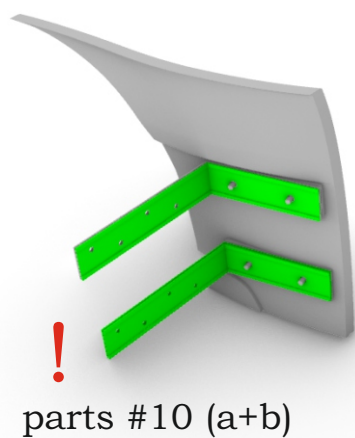


35. 

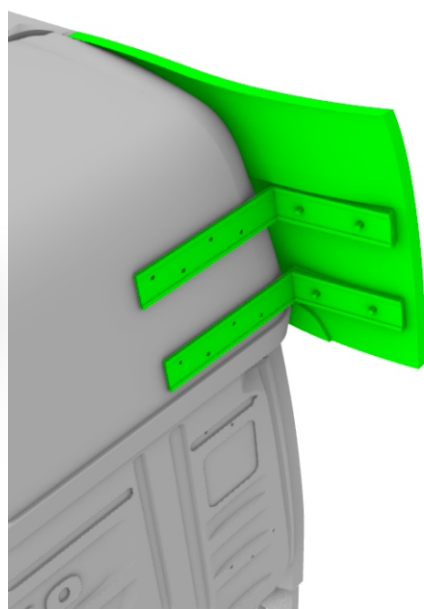


36. 


! parts #8, 11 (a+b)

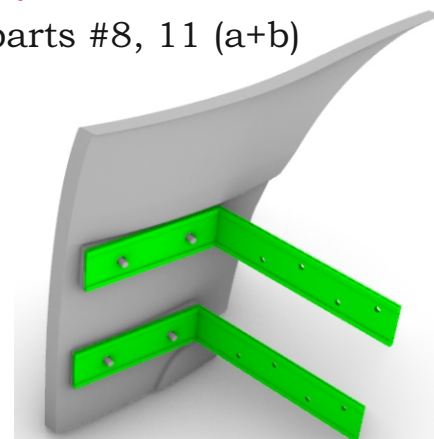



Italian truck (Economy Line)


37. 

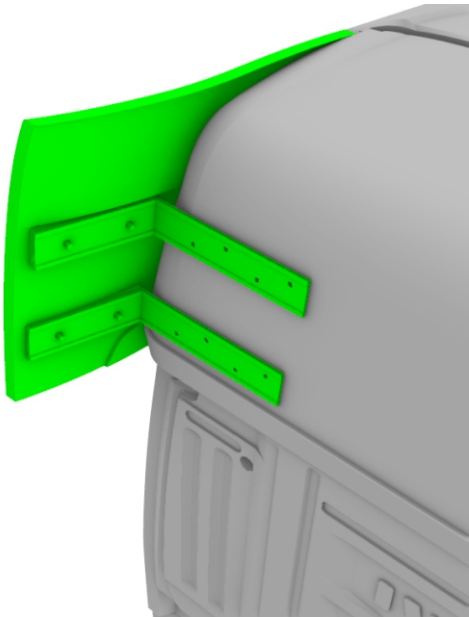


38. 

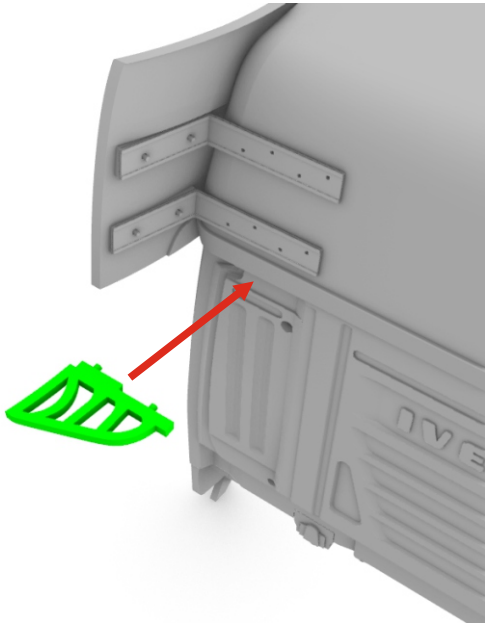


39. 

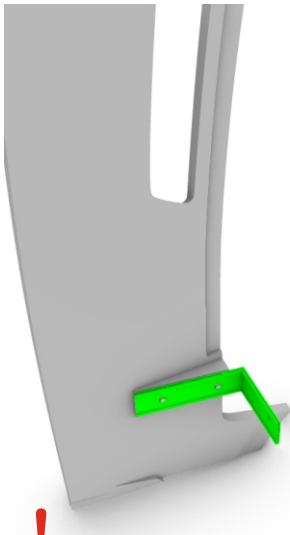


! parts #6 (a+b)

40. 




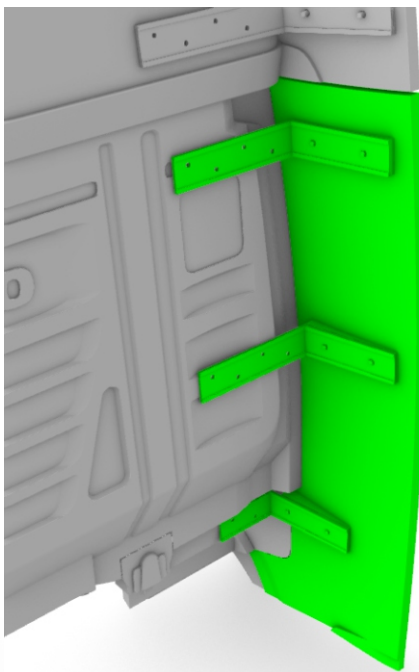
41. 

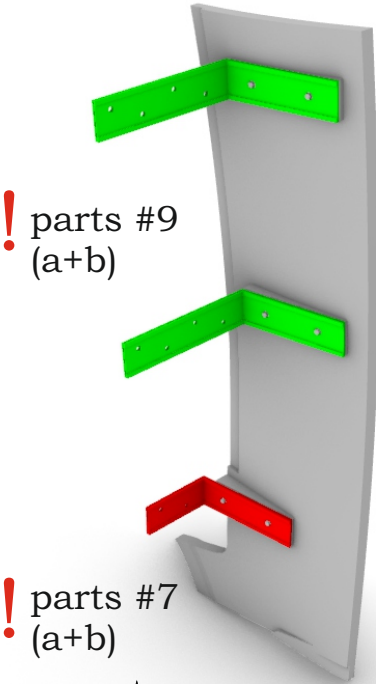


! parts #9 (a+b)


! parts #7 (a+b)

42. 




 43. x26

Diameter - 0.8

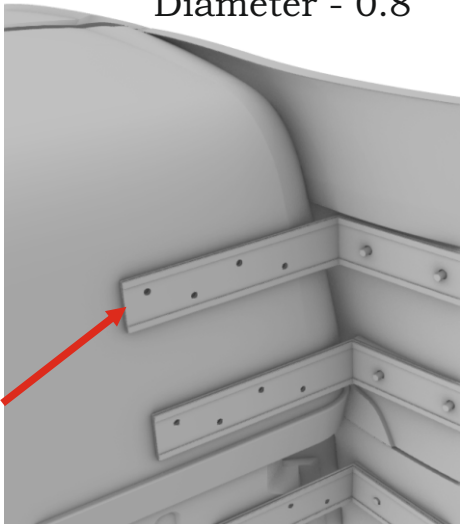


44.  x26

Rivets

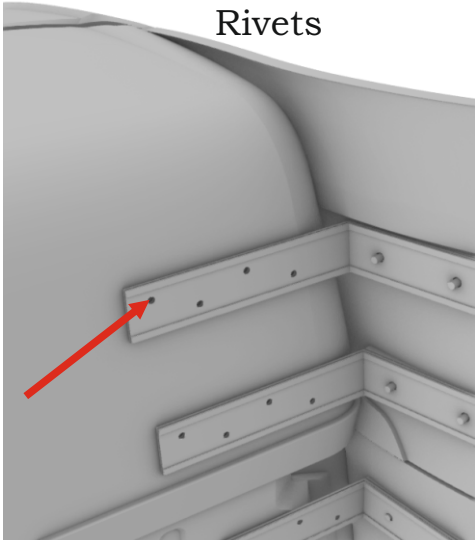

45.  x2

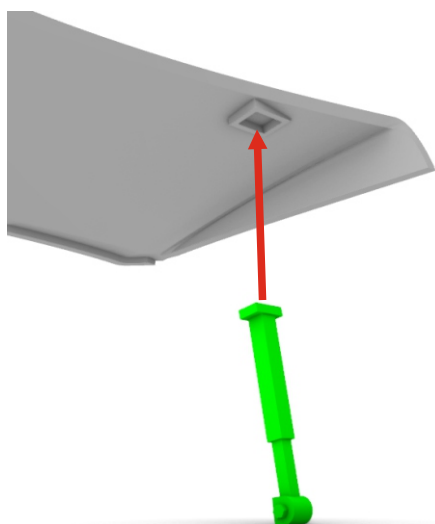




## Italian truck (Economy Line)


46. 




47. 


PE-part #12

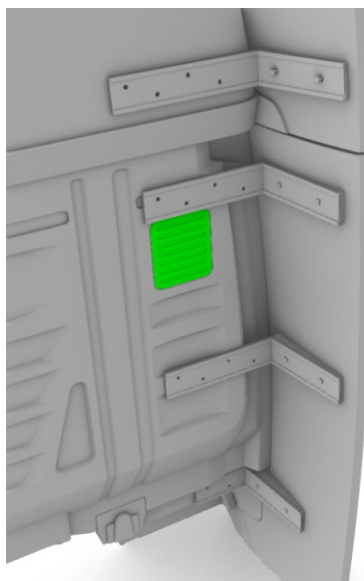


48. 


Glass

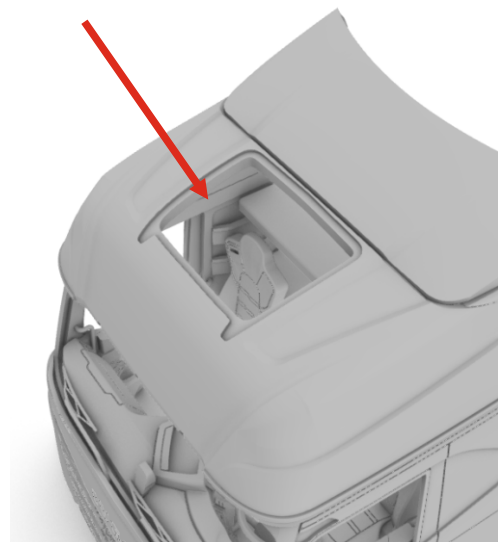


49. 

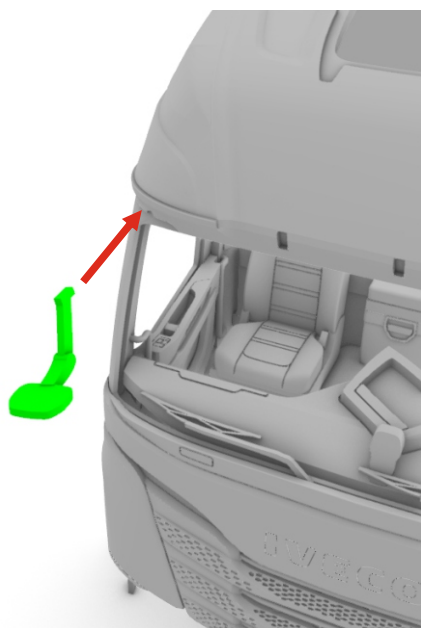


50. 

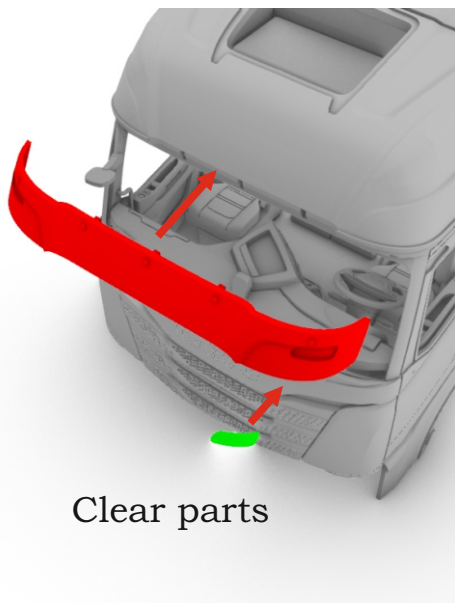

Clear parts

51. 


Proceed to instruction of  
Italeri donor chassis.  
Stop at step #12.

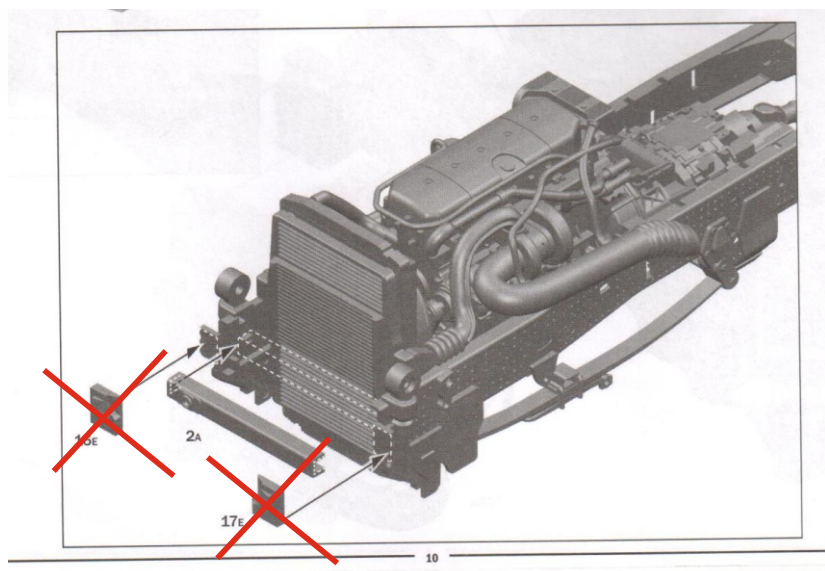

Proceed to instruction of  
Italeri donor chassis.  
Stop at step #17. Look at  
next page of this instruction.




17

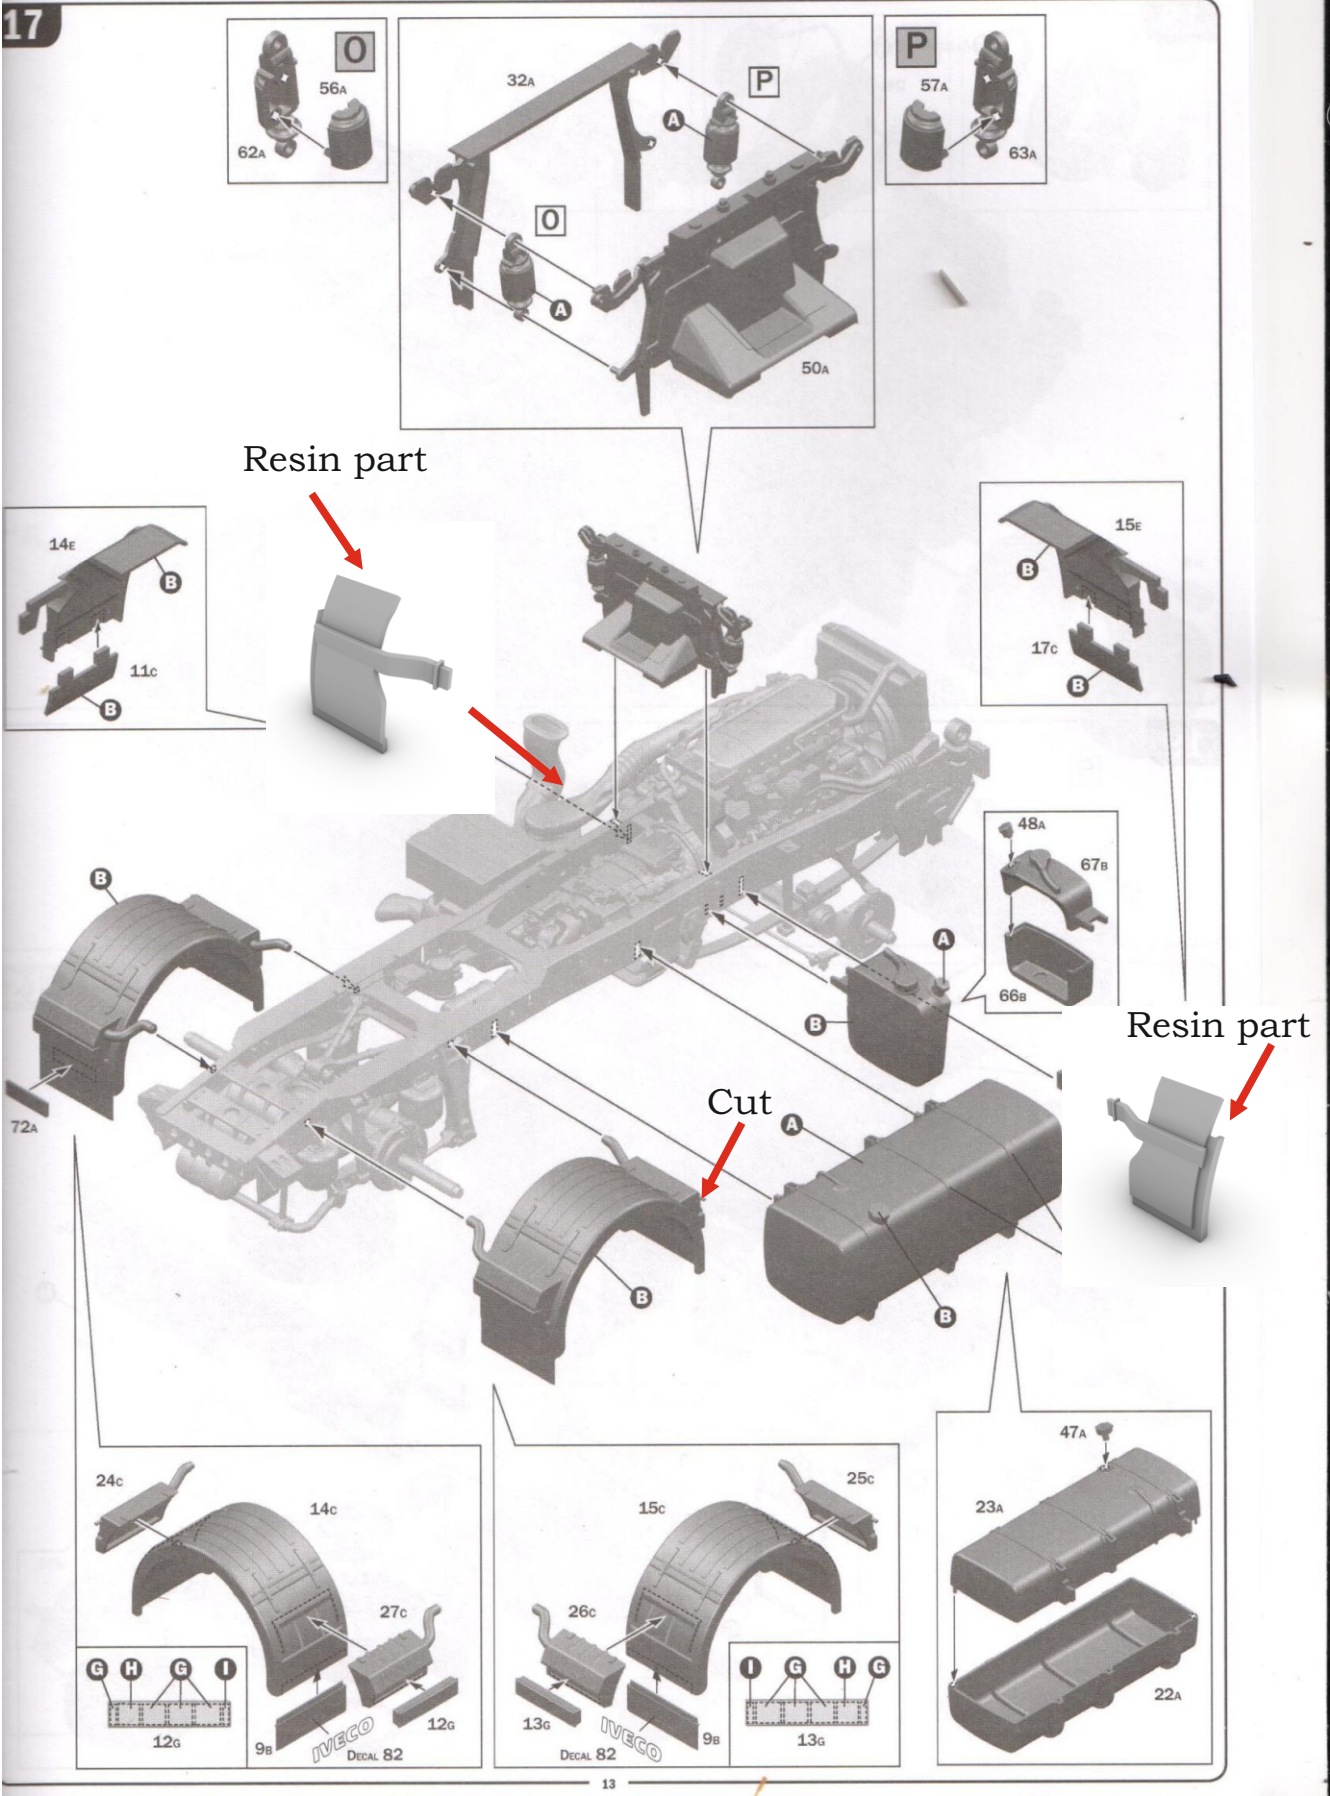

# Italian truck (Economy Line)


52. 


Put the cabin on chassis.

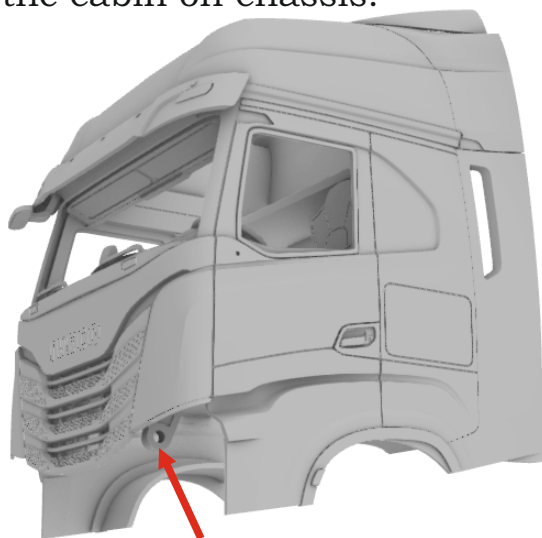

Use resin pins

53.  x2

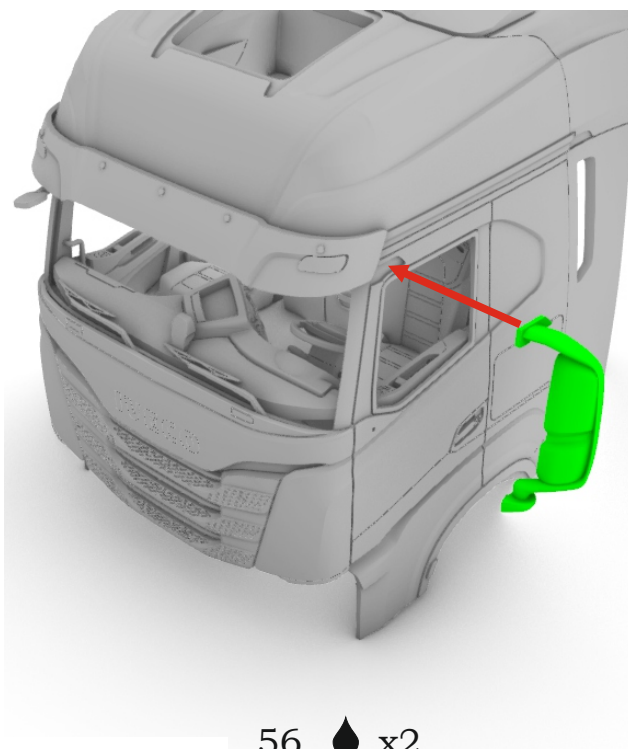


54.  x2


PE-part #13




55.  x2

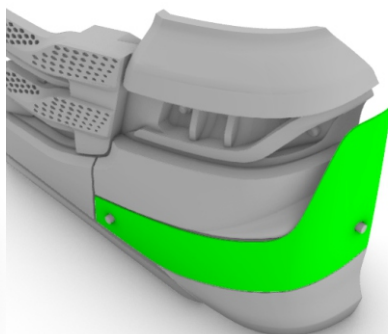


56.  x2

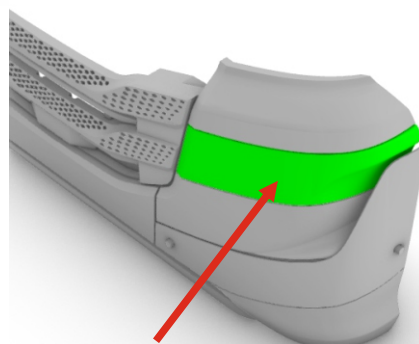


Clear parts

57. 

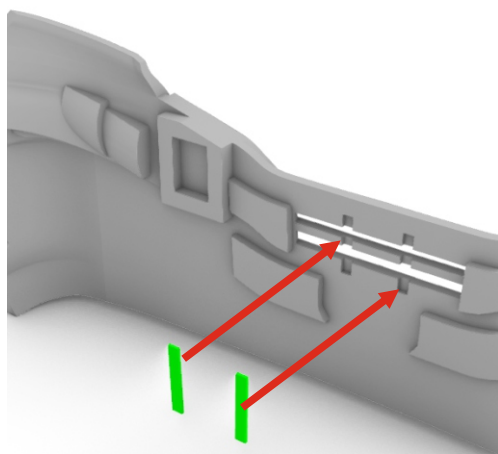


PE-part #14

58.  x2

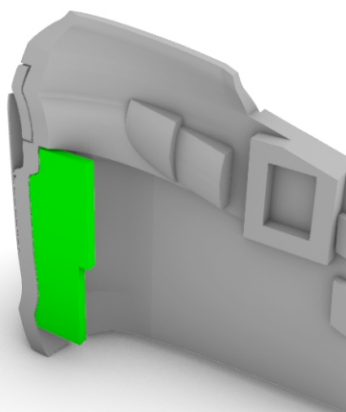


59.  x2

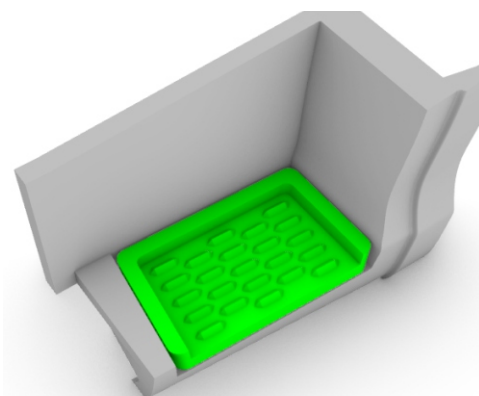

# Italian truck (Economy Line)

60. 🖤 x2

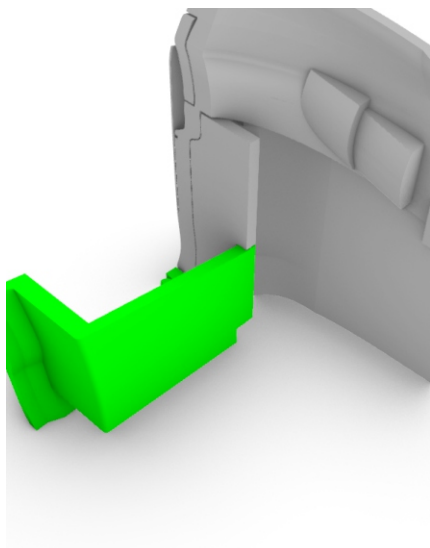

61. 🖤

