

A&N Model Trucks



Italian truck
(conversion kit)

Made in Latvia

Warning!

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.

This model kit requires donor chassis - Italeri Iveco Stralis.

Symbols:

 - glue parts;

 - do not glue parts;

 - bend parts;

 - attention;

 - moving parts;


 - your choice;

 - cut;


 - drill;

Italian truck (conversion kit)


1. 

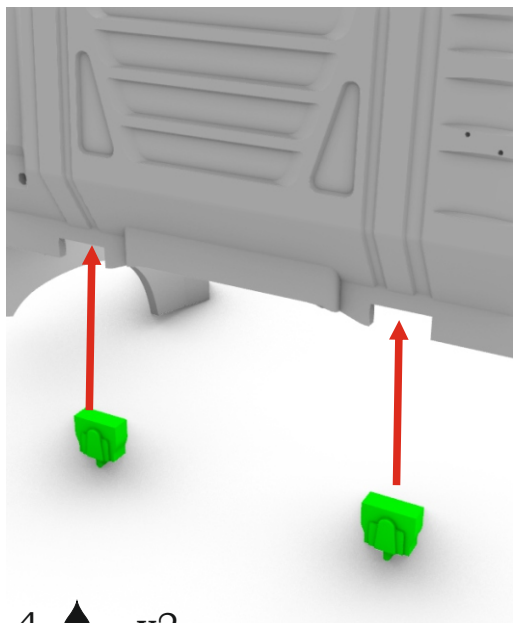


2.  x2

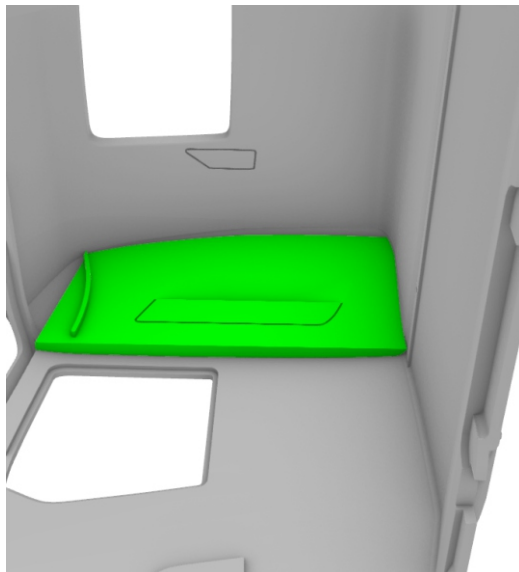


3.  x2

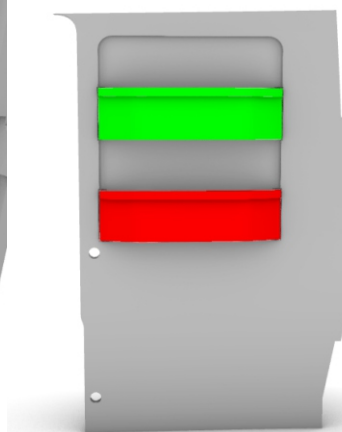


4.  x2

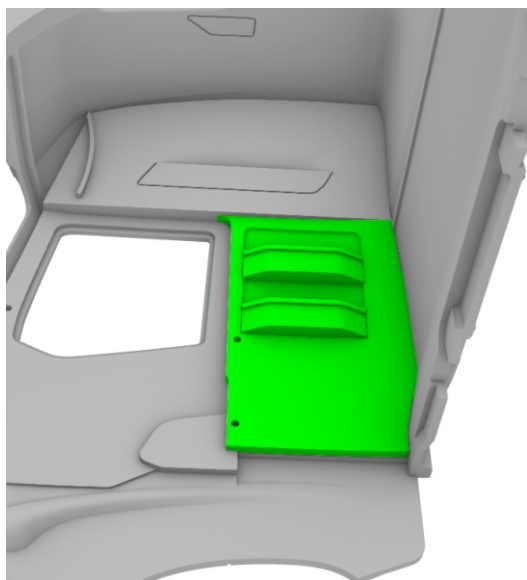


5. 

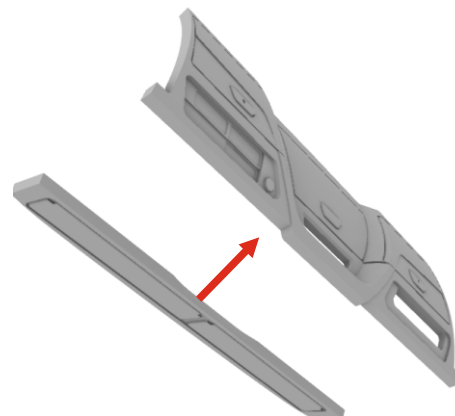


6. 

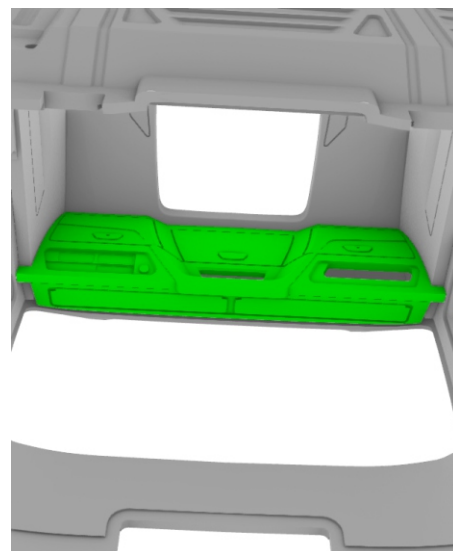


7.  x2

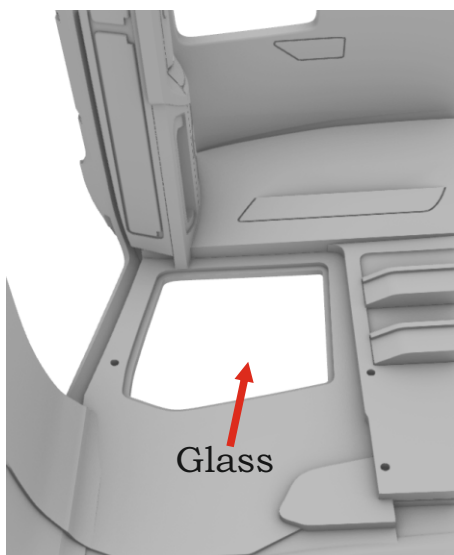

8.  x2

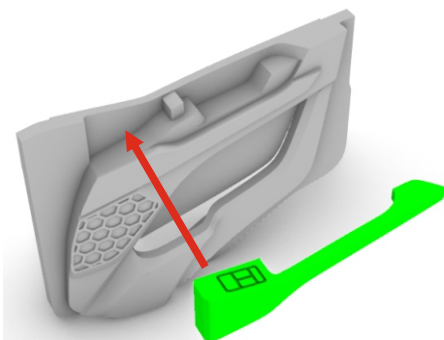


9.  x2

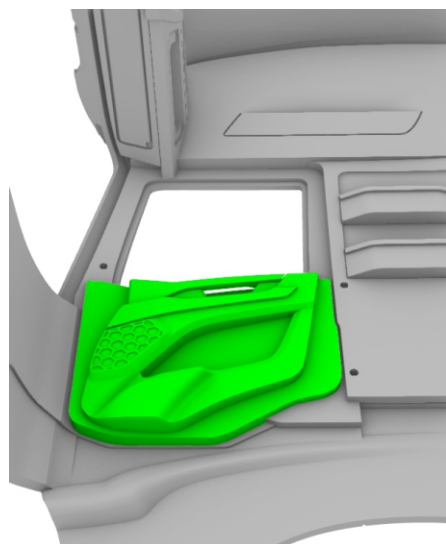


Italian truck (conversion kit)

10.  x2

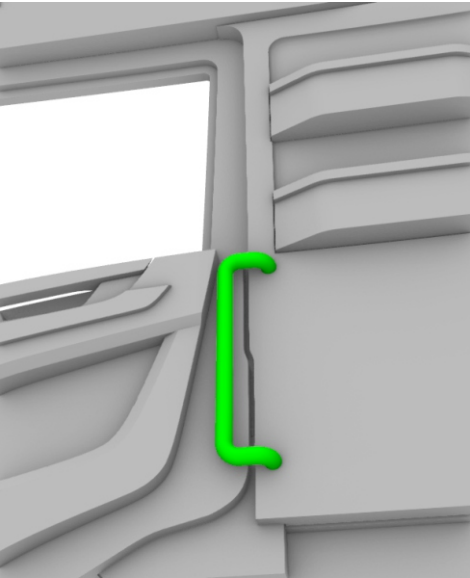


11. 

PE-part #16

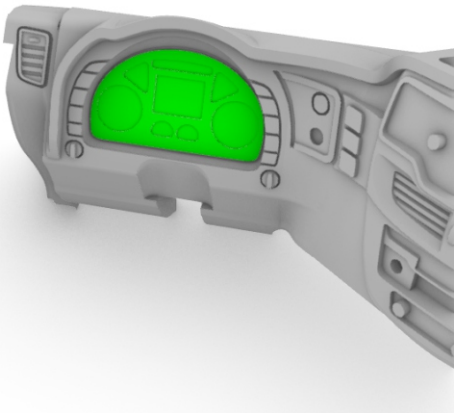


12. 

PE-part #17

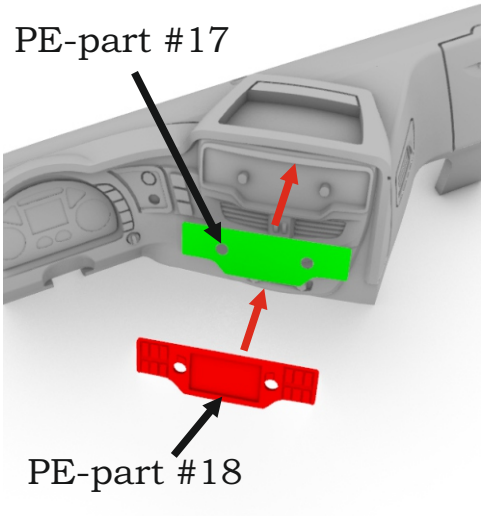


13. 


PE-part #21

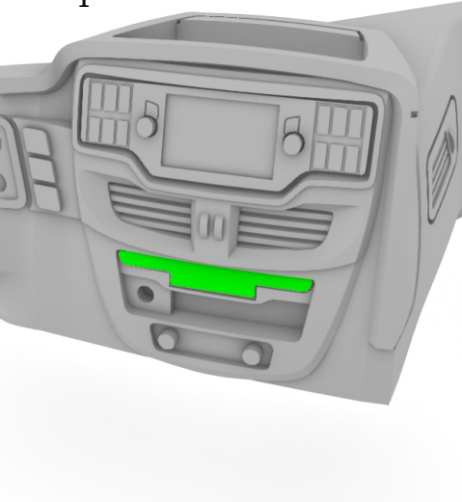


14. 

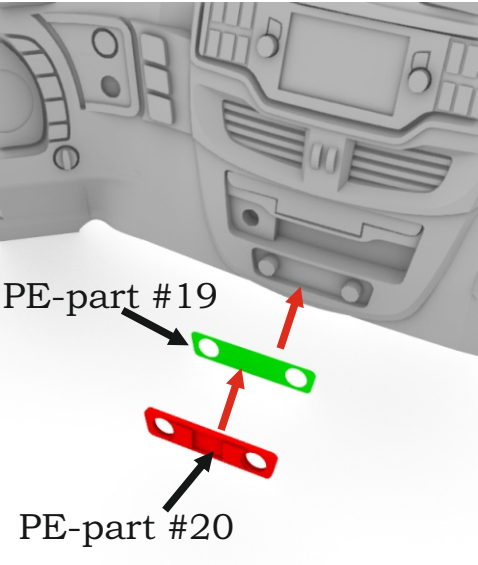


15. 

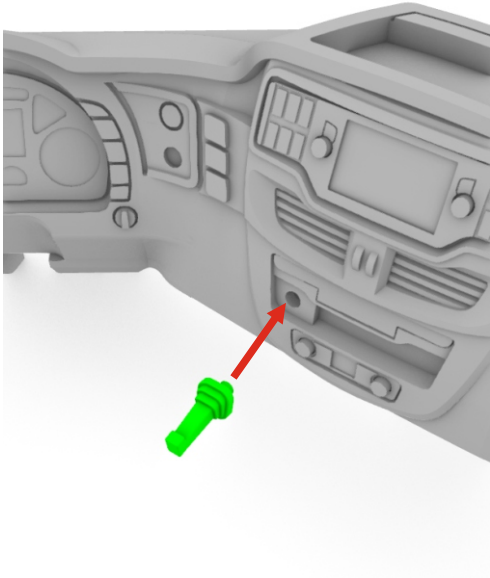


16. 

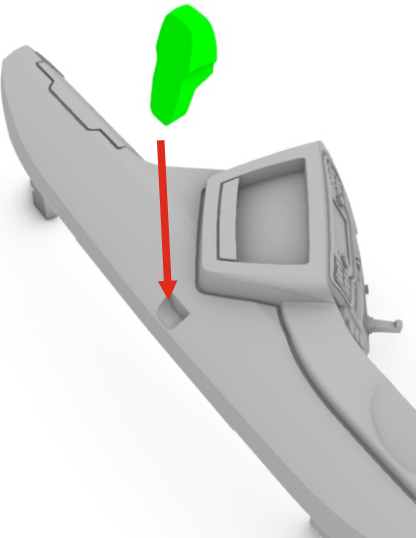

17. 

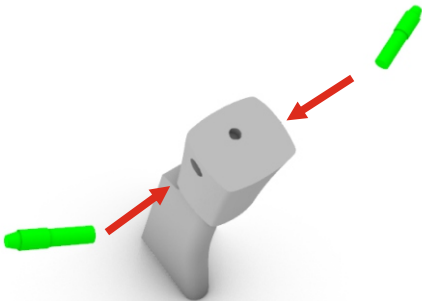


18. 

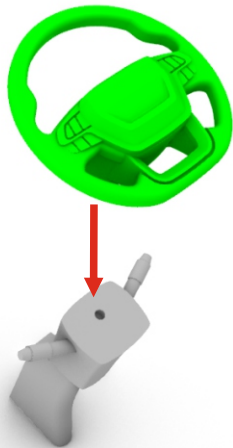


Italian truck (conversion kit)


19. 

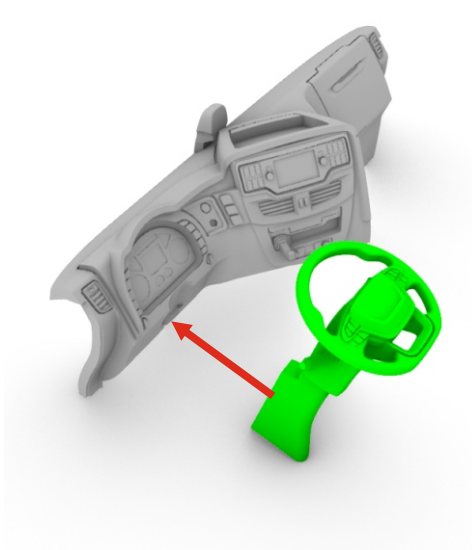


20. 

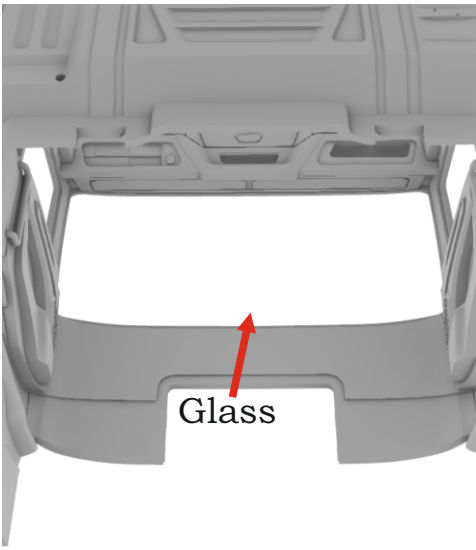


21. 

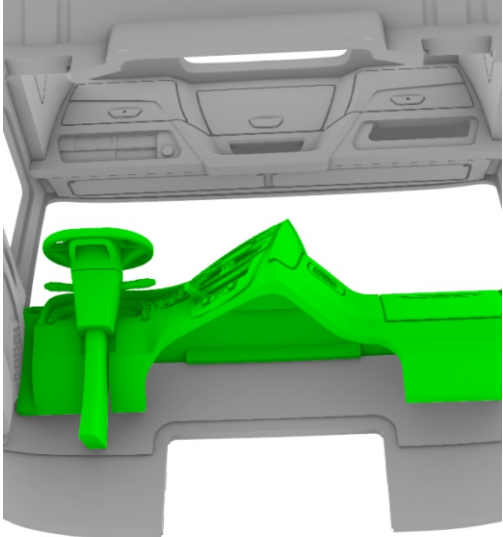

22.  x2

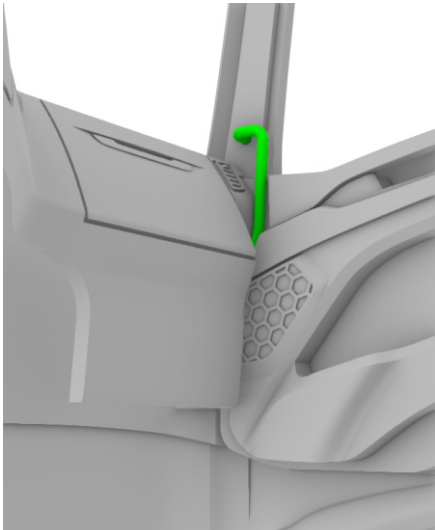


23. 

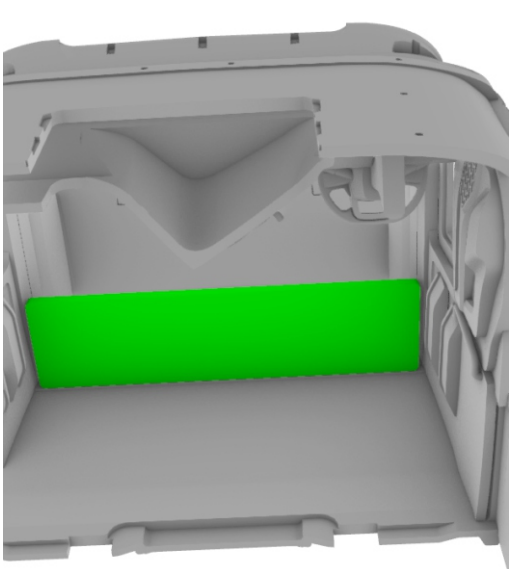


24.  x2


PE-part #15

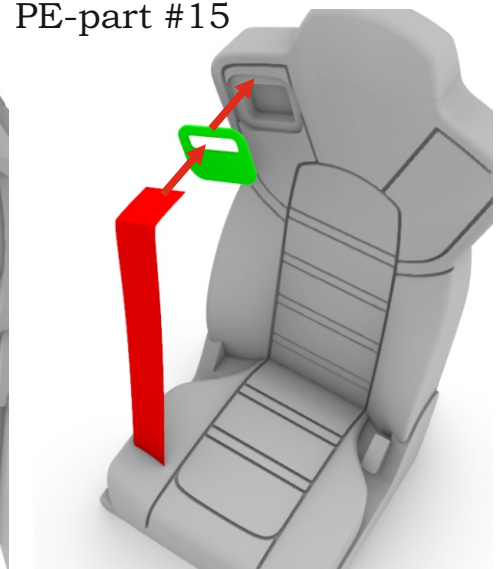


25. 

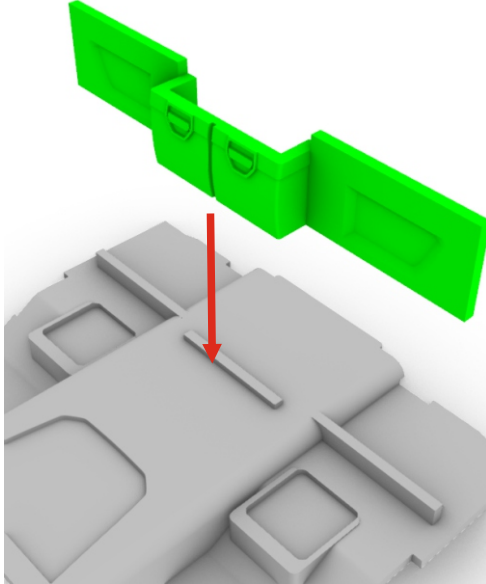

26. 

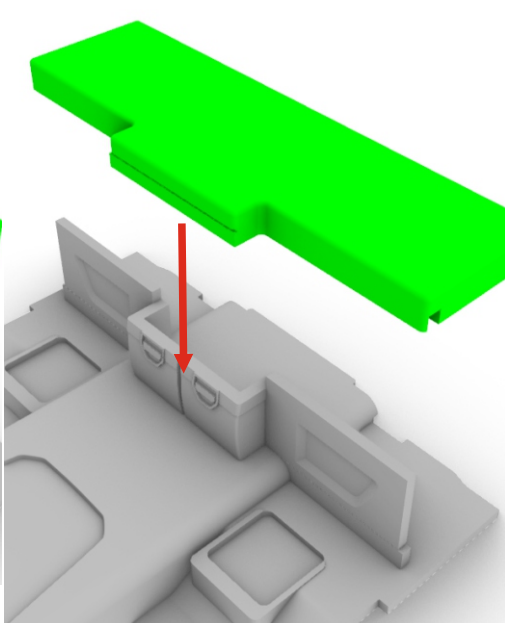


27. 

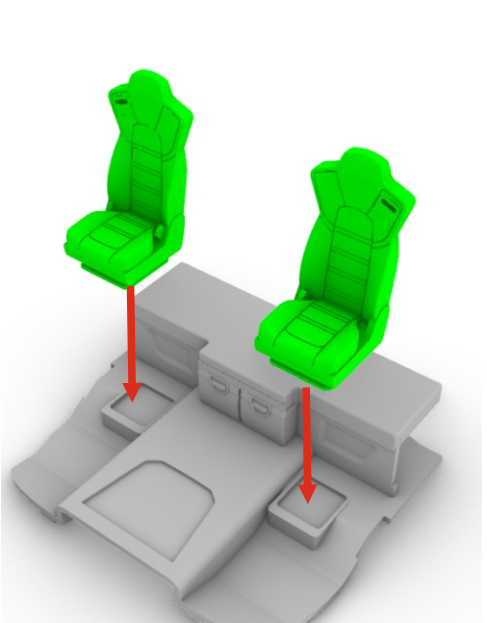


Italian truck (conversion kit)


28. 

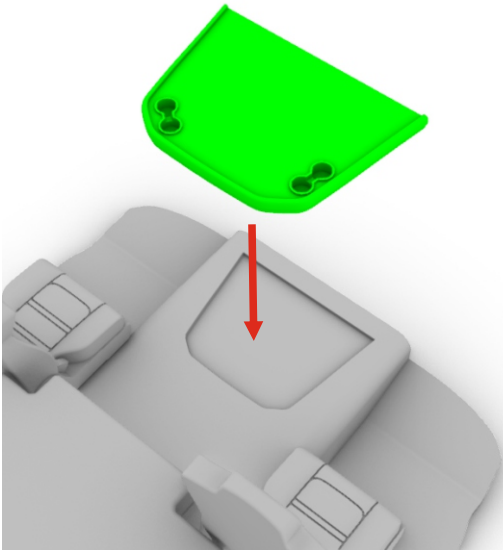


29. 

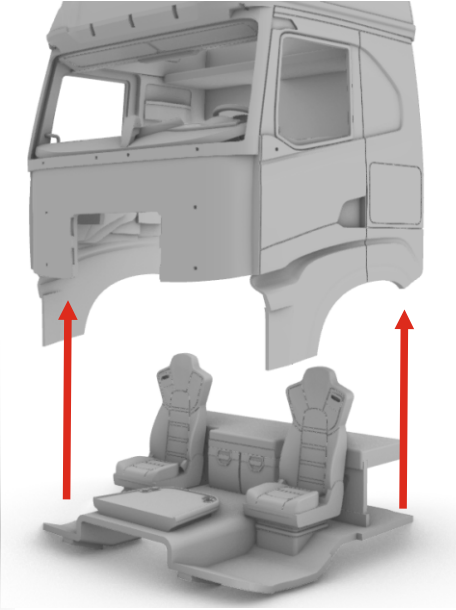


30.  x2

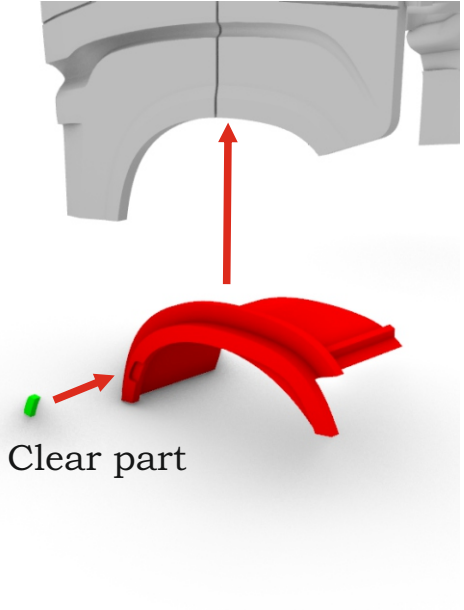


31.  x2

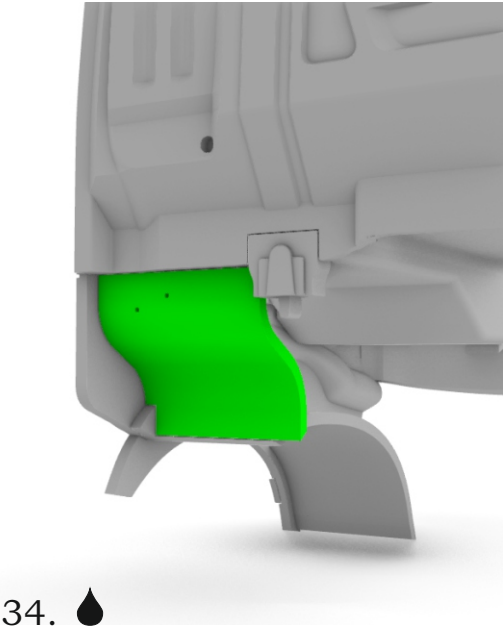


32.  x2

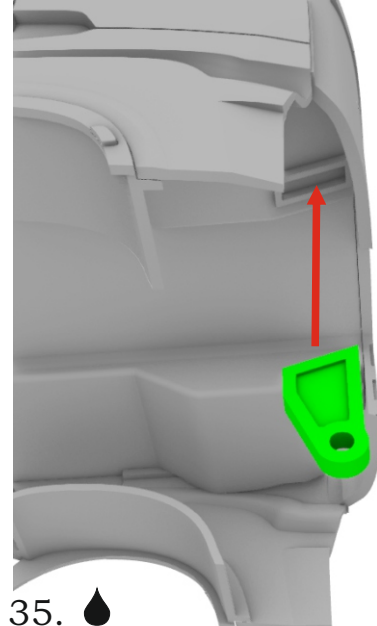


33.  x2

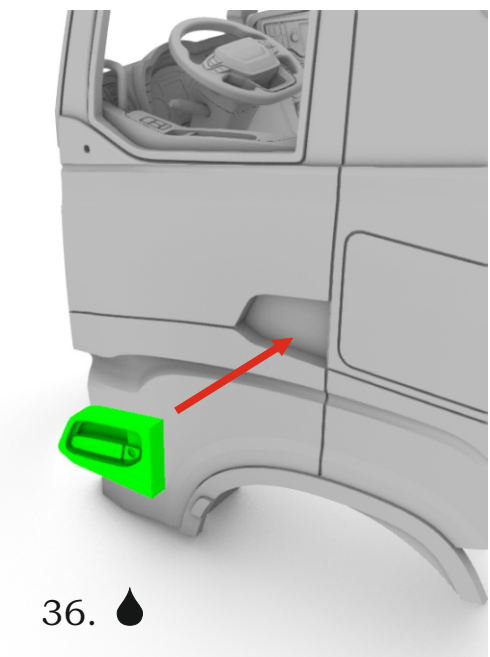

34. 

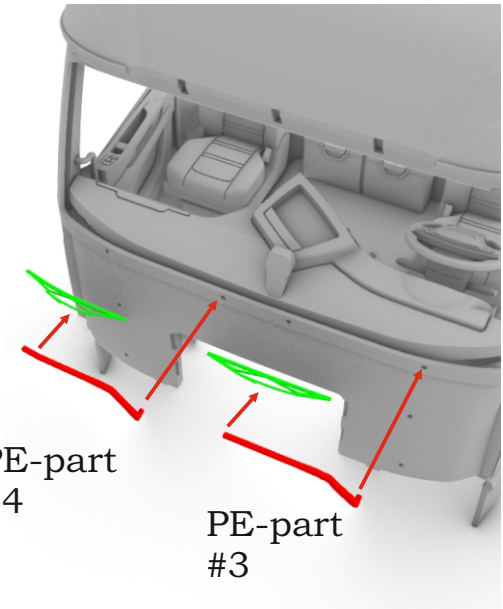


35. 

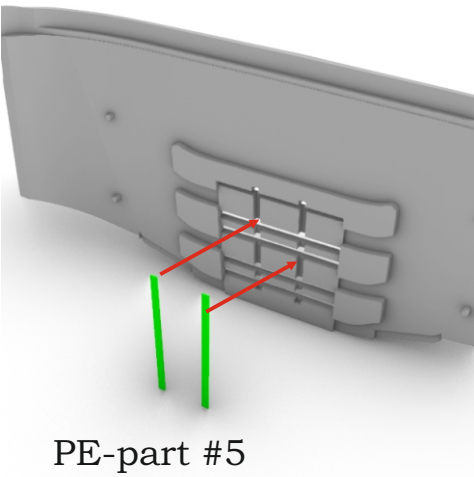

PE-parts #2




Italian truck (conversion kit)

37.  x2


PE-part #1




38.  x2

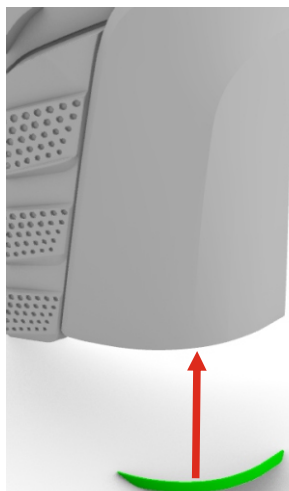


39. 

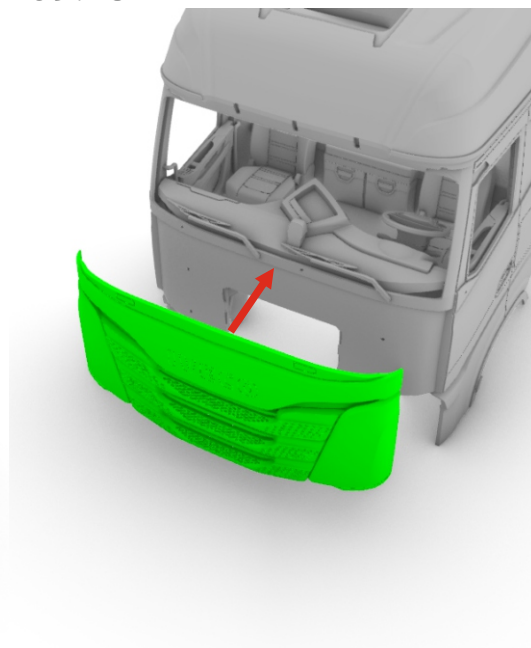


38. x8
PE-parts #6a-11a

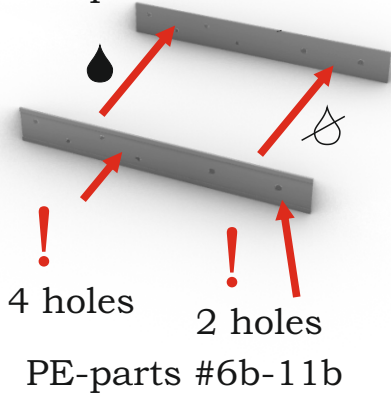


39.  x8

! A-parts

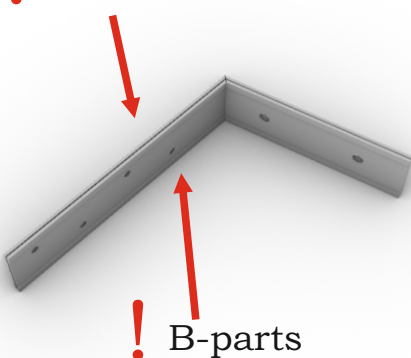


 40. x16


Diameter - 0.8

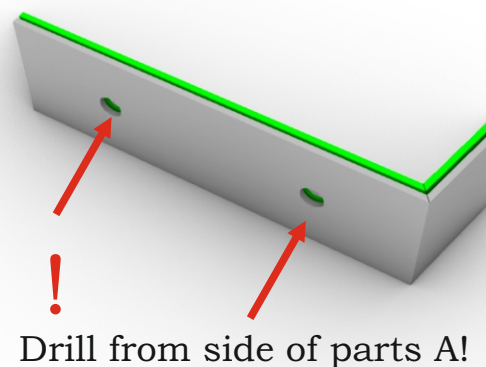

41. 

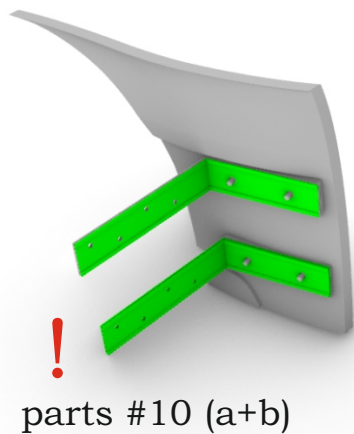


42. 

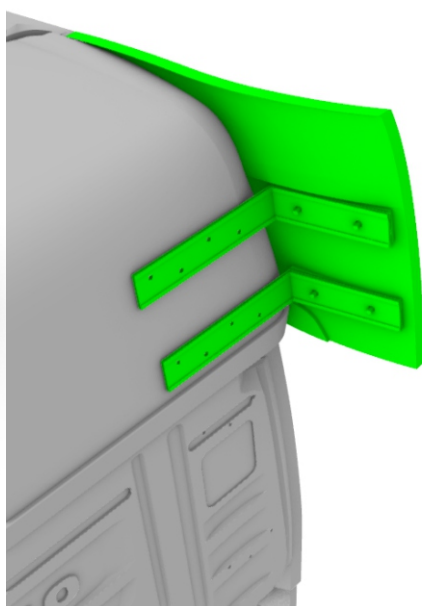


43. 

! parts #8, 11 (a+b)

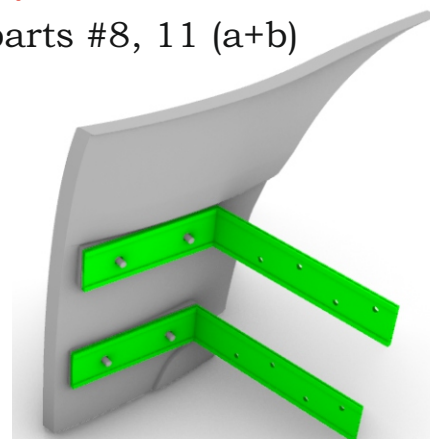


Italian truck (conversion kit)


44. 

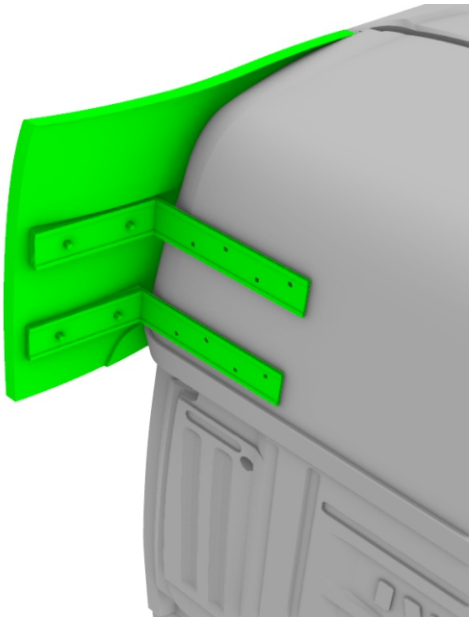

45. 

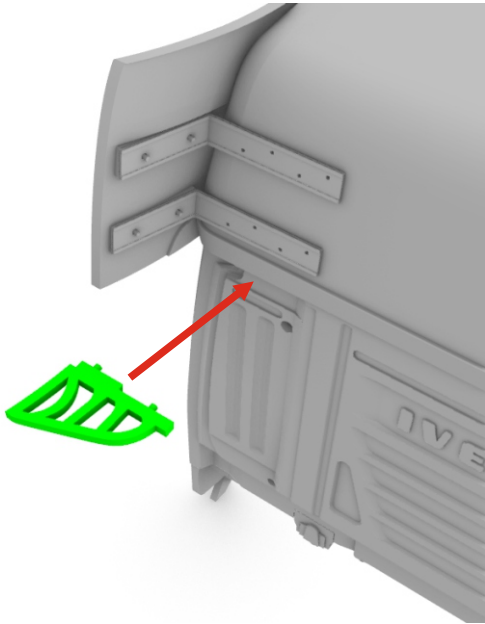

46. 

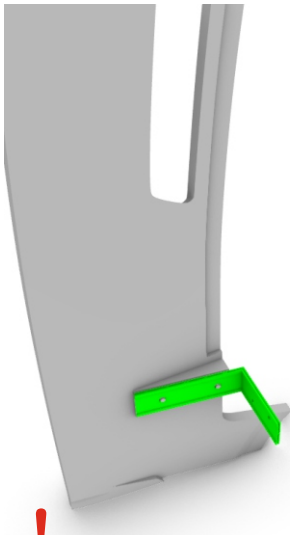


! parts #6 (a+b)

47. 




48. 

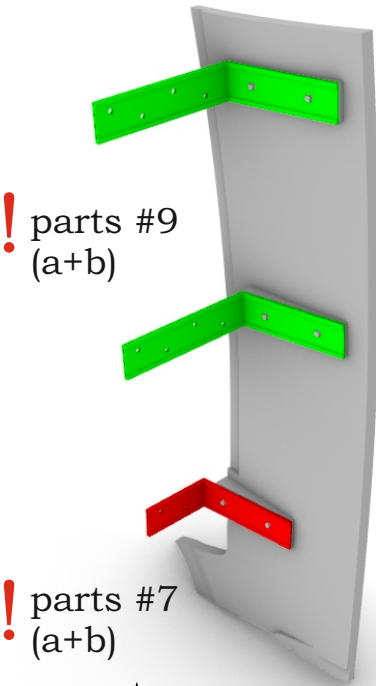

! parts #9 (a+b)


! parts #7 (a+b)

49. 

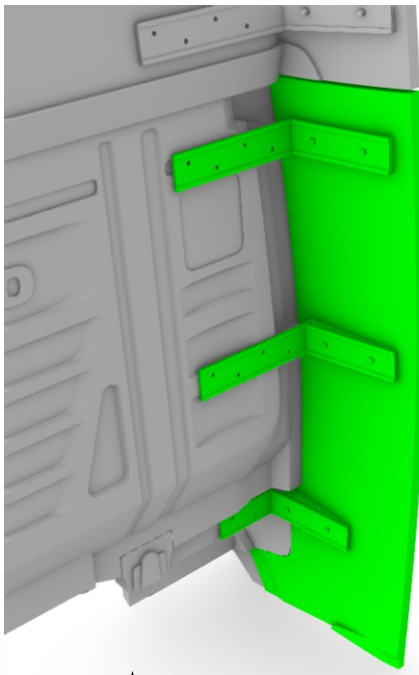


50. x26

Diameter - 0.8

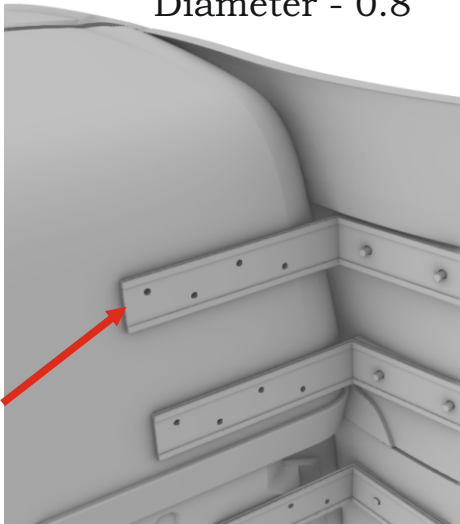


51.  x26

Rivets

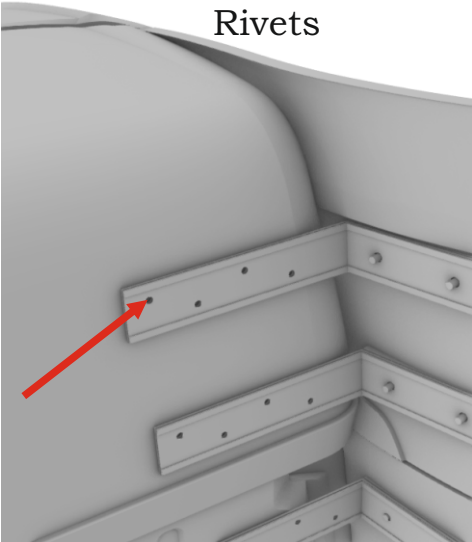

52.  x2

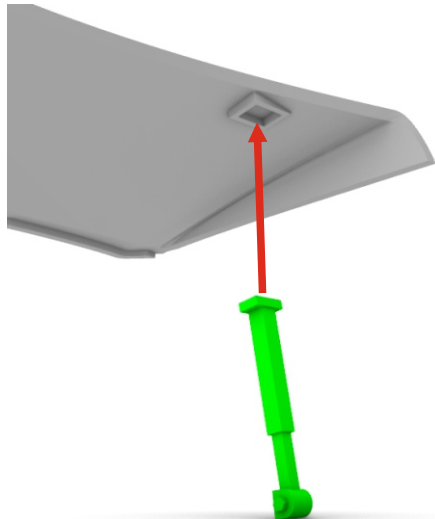


Italian truck (conversion kit)

53. 




54. 

PE-part #12

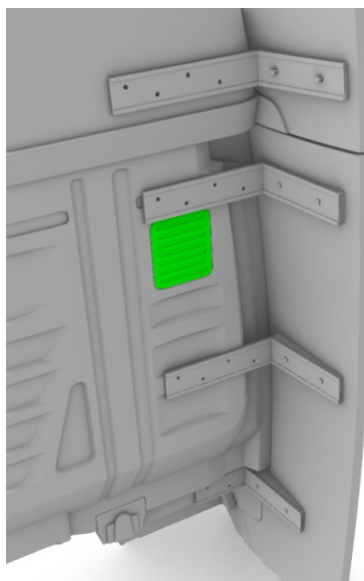


55. 


Glass

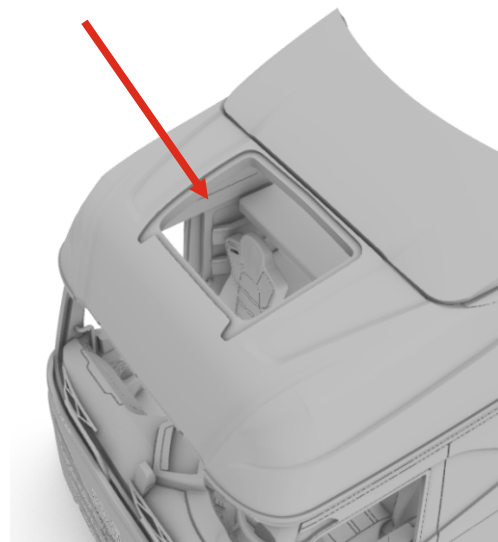

56. 

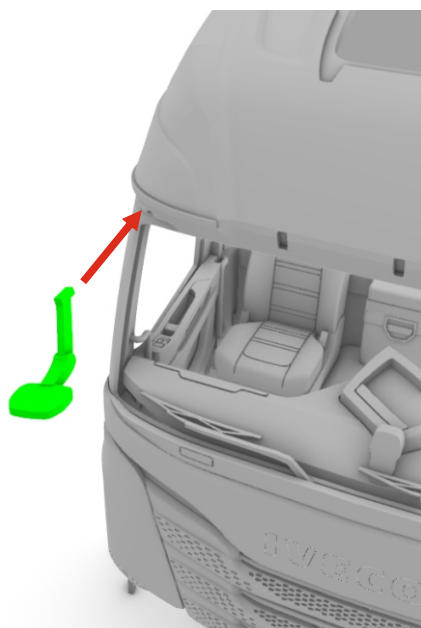


57. 

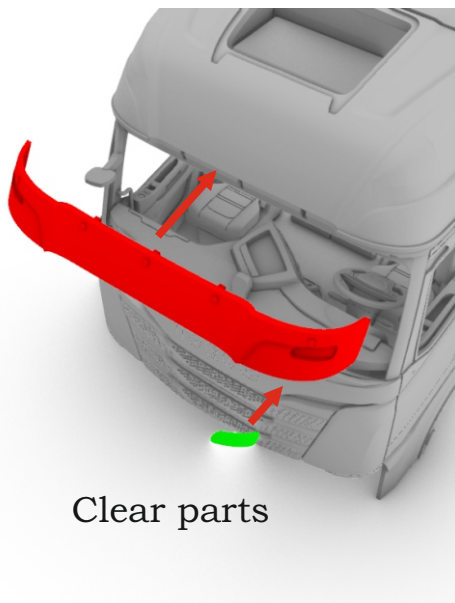

Clear parts


58. 

Proceed to instruction of Italeri donor chassis.
Stop at step #12.

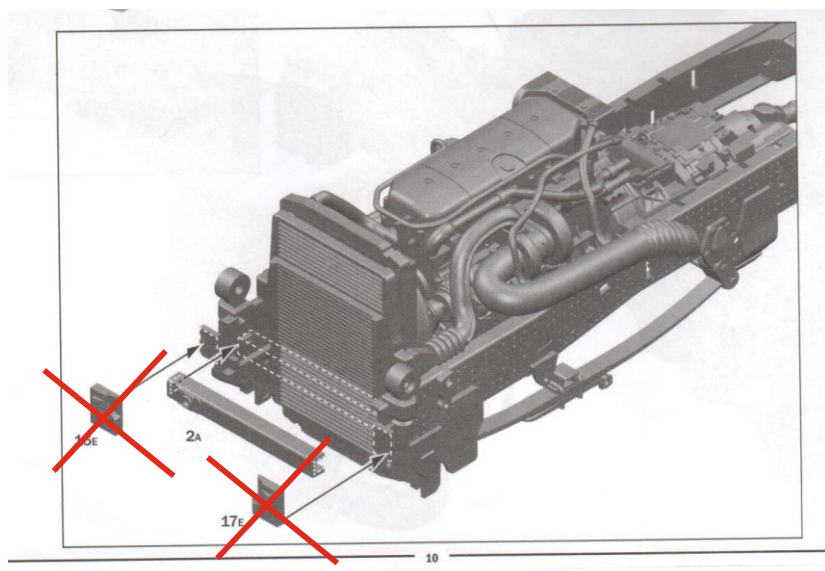


Proceed to instruction of Italeri donor chassis.
Stop at step #17. Look at next page of this instruction.

17

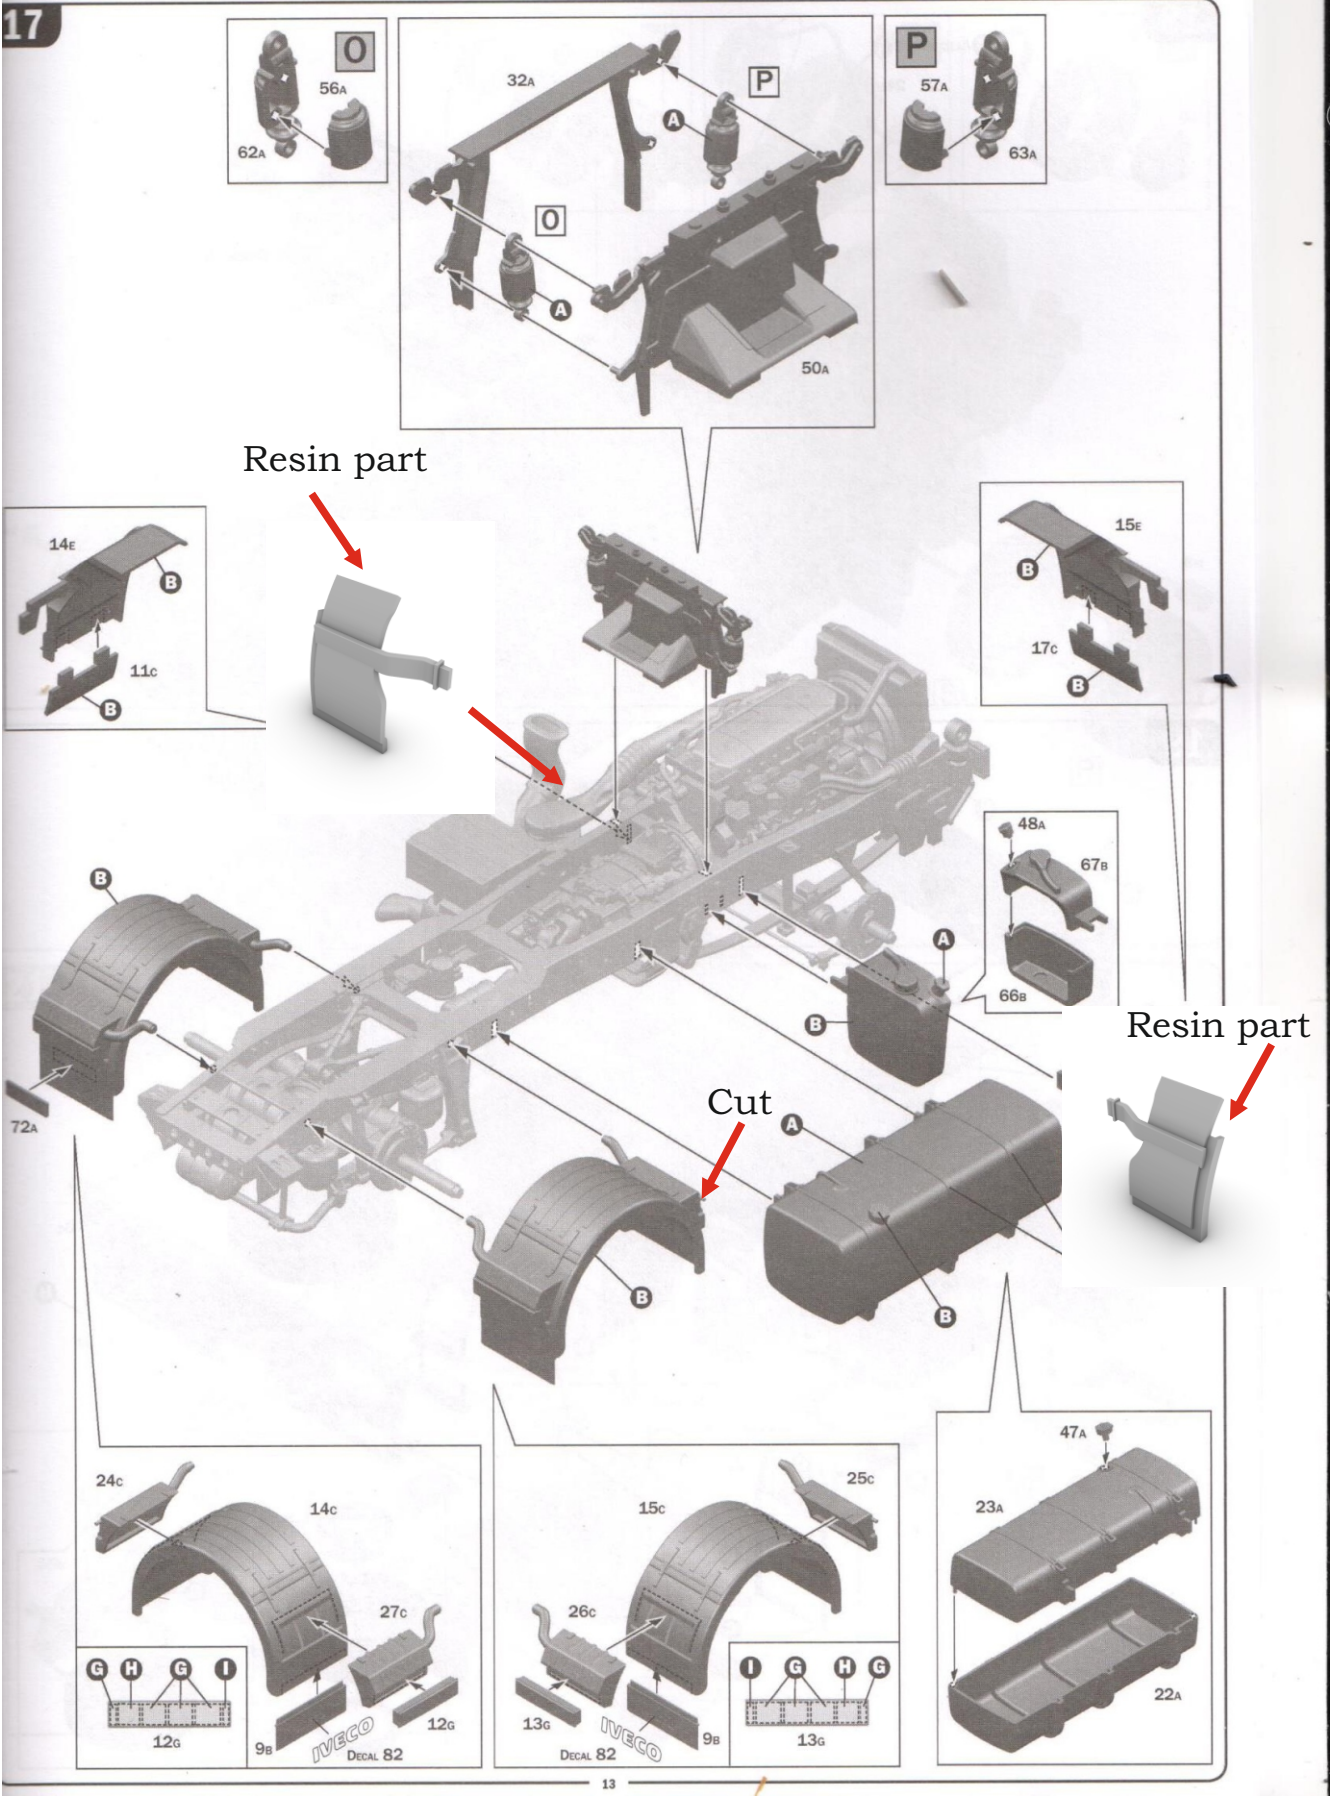

Italian truck (conversion kit)


Proceed to instruction of
Italeri donor chassis.
Stop at step #19.

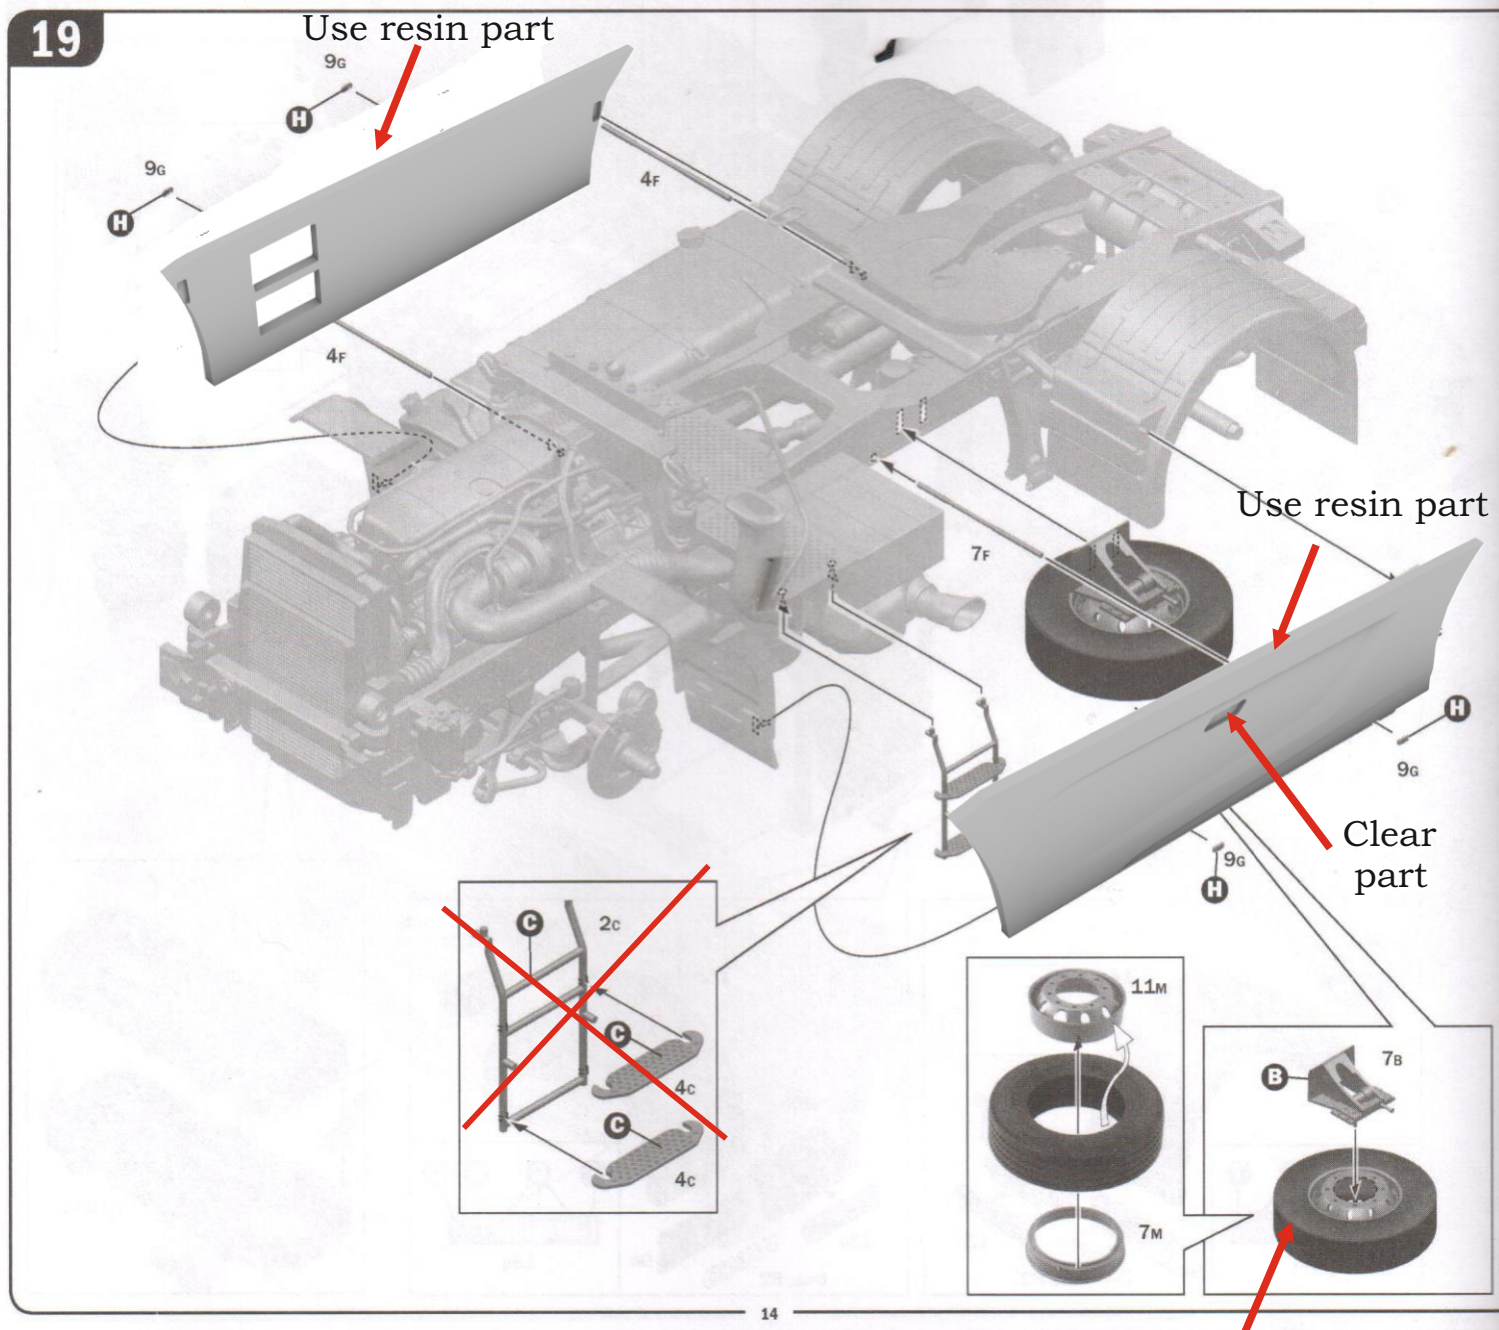

Italian truck (conversion kit)


59. 

Put the cabin on chassis.

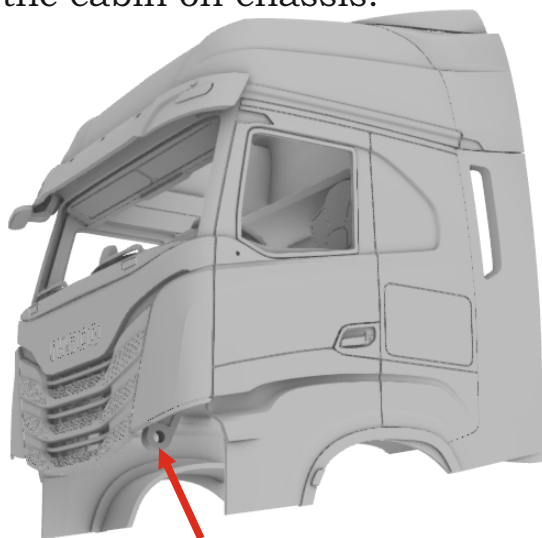

Use resin pins

60.  x2

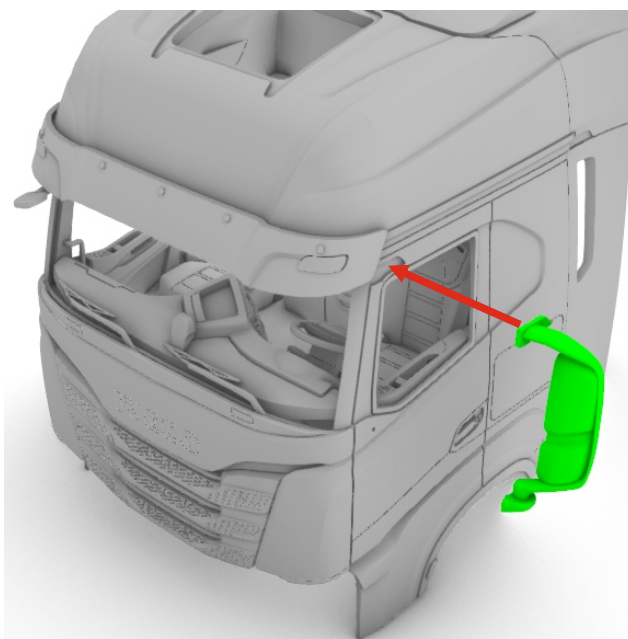


61.  x2


PE-part #13



62.  x2

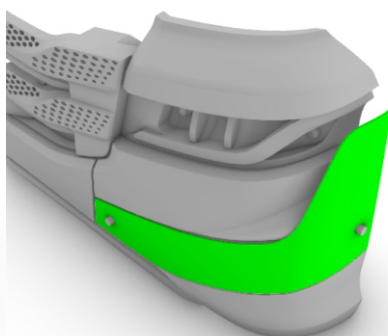


63.  x2

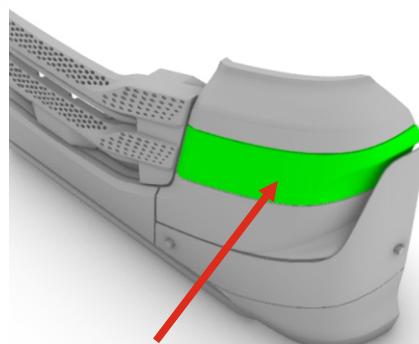


Clear parts

64. 

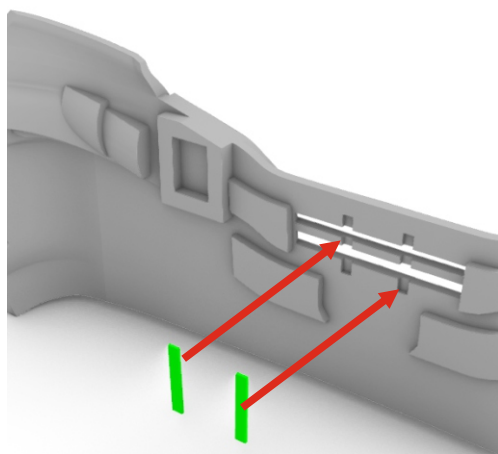


PE-part #14

65.  x2

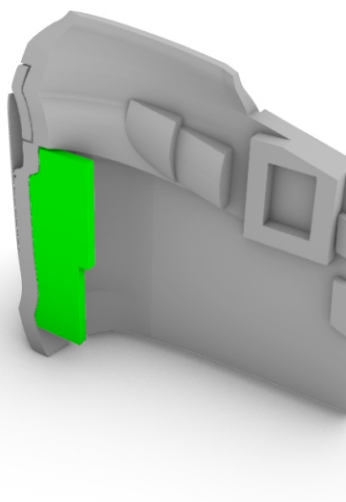


66.  x2

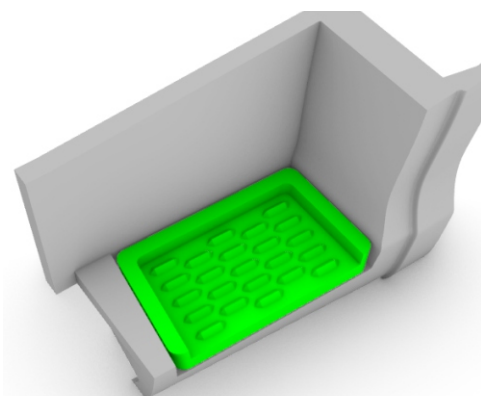

Italian truck (conversion kit)

67. 🖤 x2

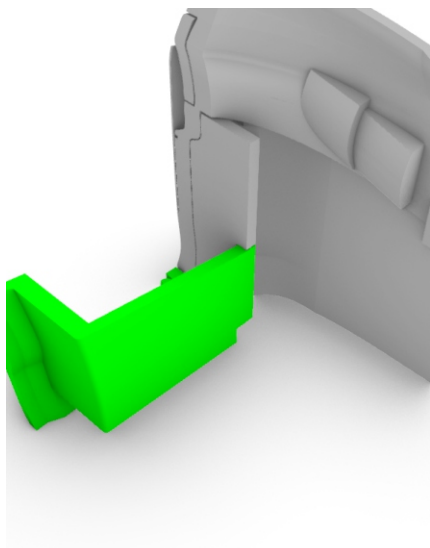

68. 🖤

