

A&N Model Trucks



FRENCH TRUCK T HIGH Conversion kit, scale 1/24

Warning!

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.


Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children. THIS IS NOT A TOY!

This kit requires chassis - Italeri Volvo FH4 recommended.

Symbols:

 - glue parts;


 - do not glue parts;

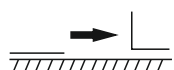 - bend parts;

 - attention;


 - moving parts;

 - your choice;


 - cut;


 - drill;


1. 

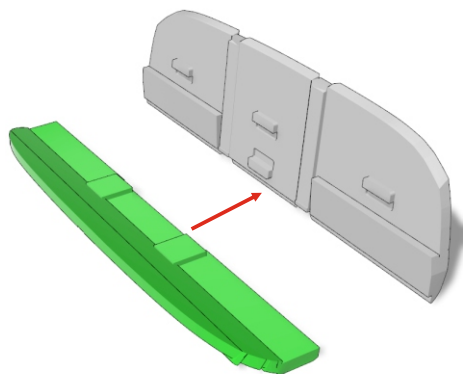


2. 

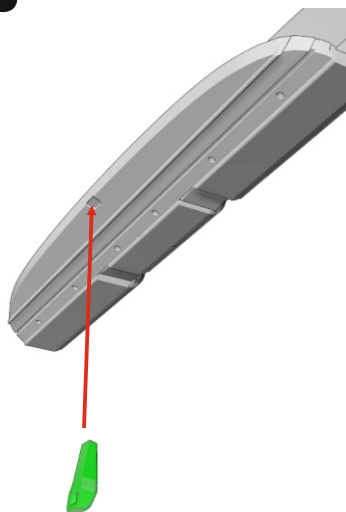


3. 

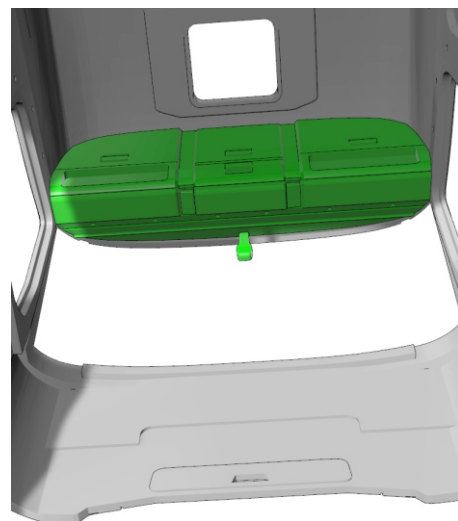


4. 

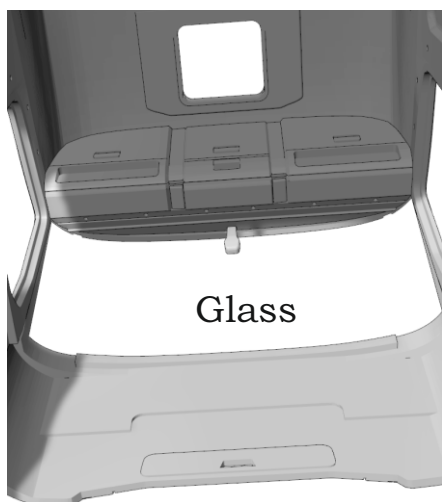


5.  x2

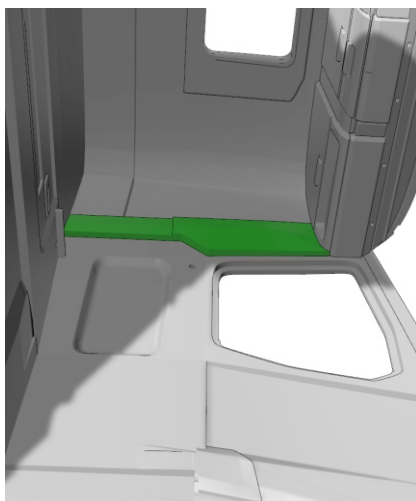


6.  x2

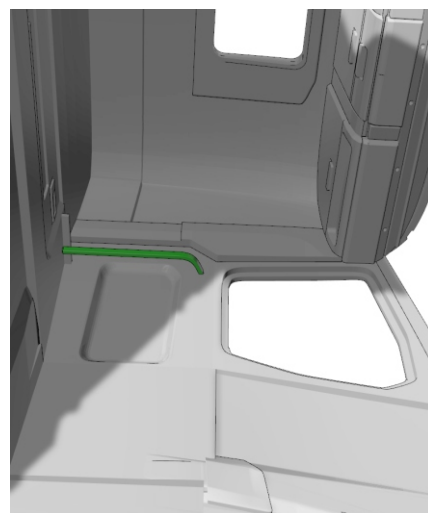

7. 

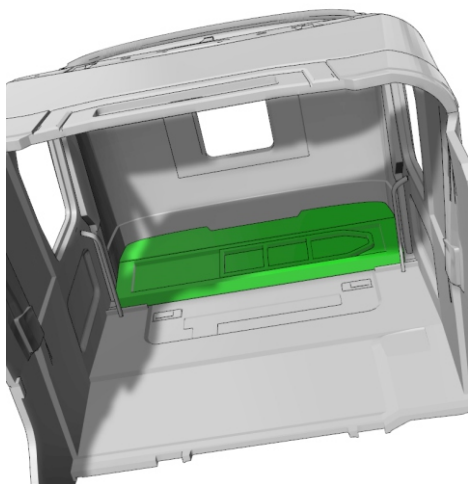


8.  x2

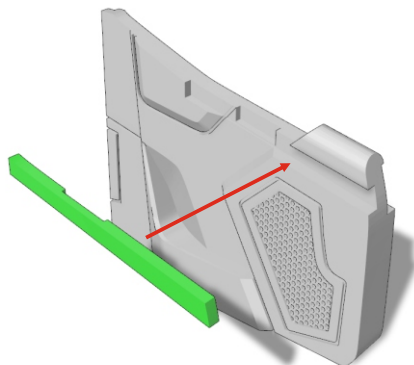


9.  x2




10.  x2

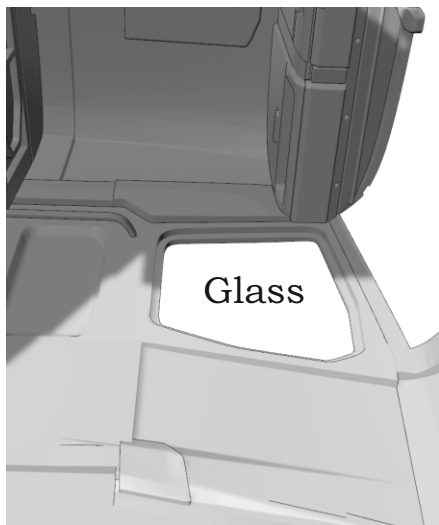


11.  x2

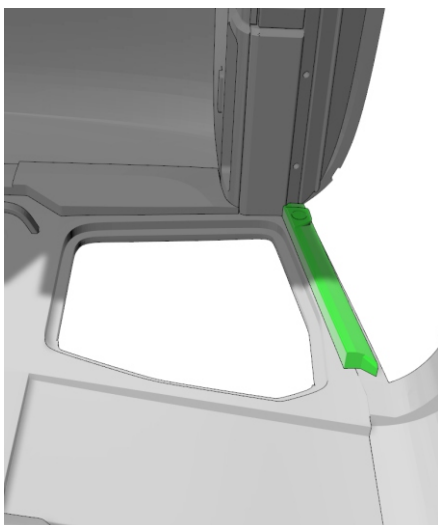


12.  x2

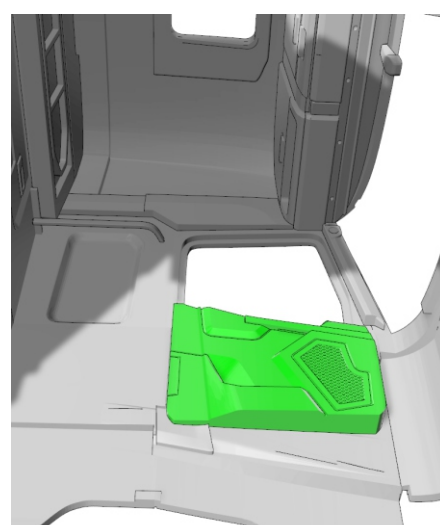


13. 

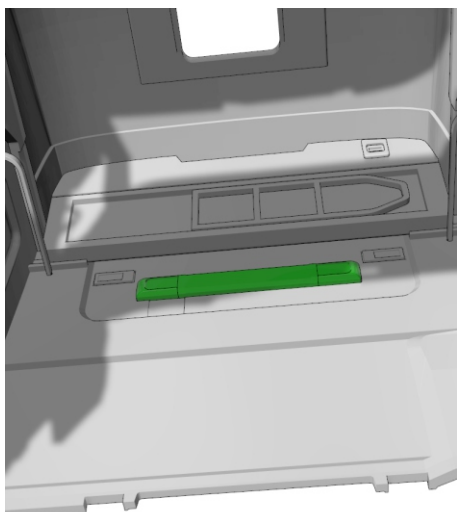

14. 

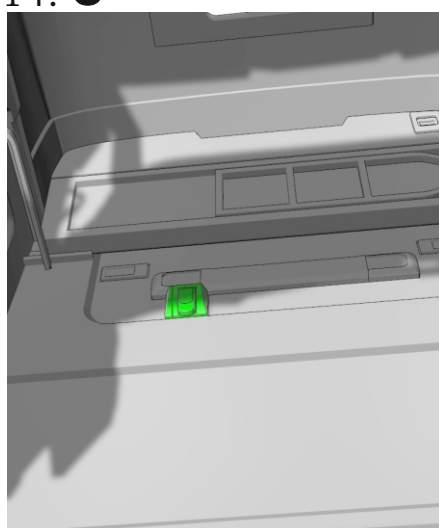


15. 

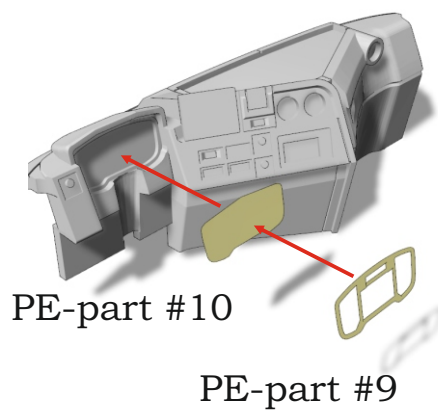


16. 

PE-part #13

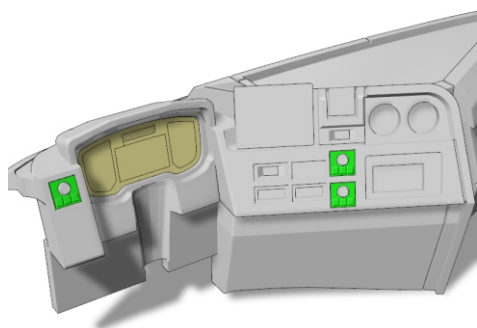


17. 

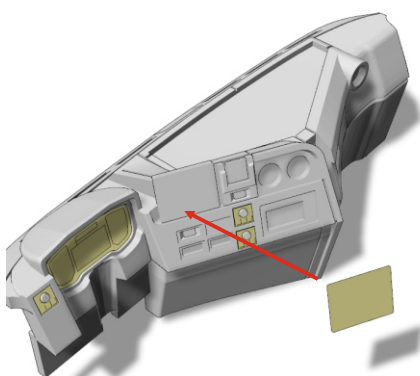


PE-part #14

18.  x2

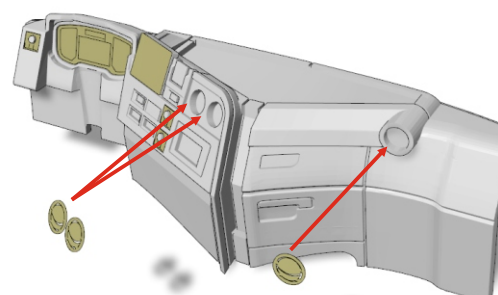



PE-part #3


19. 

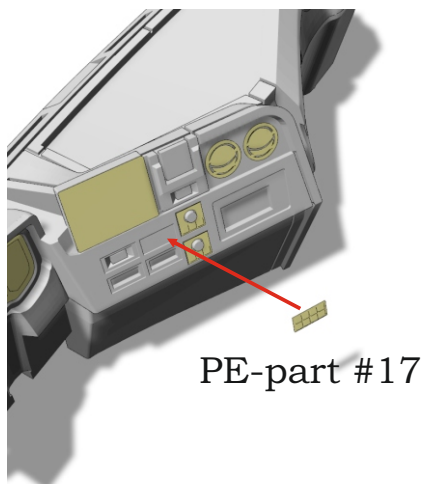


20. 

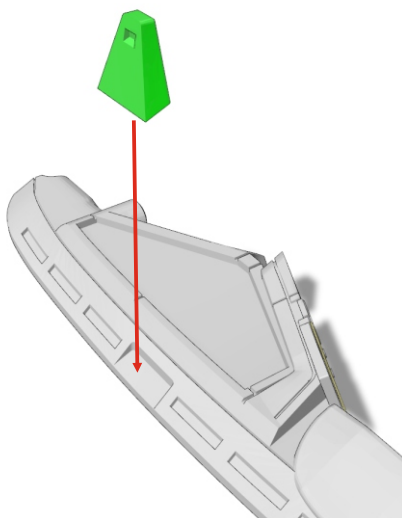


21. 

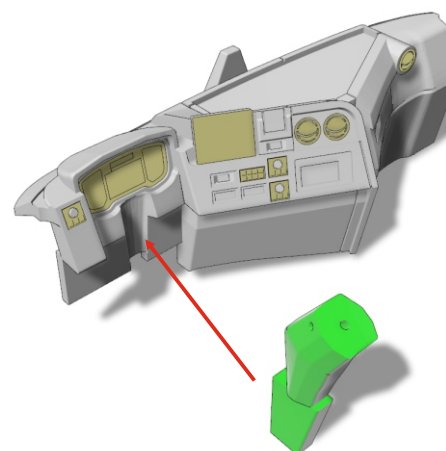


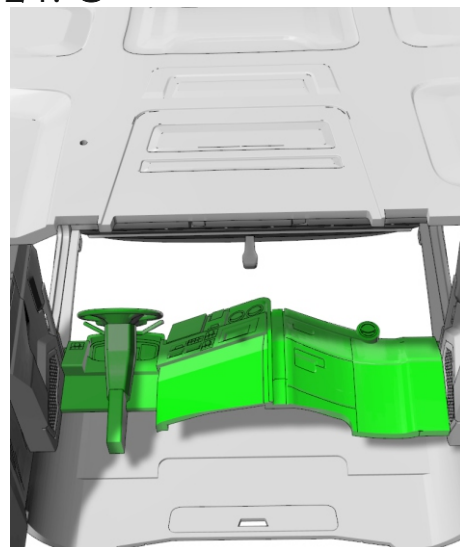
22. 

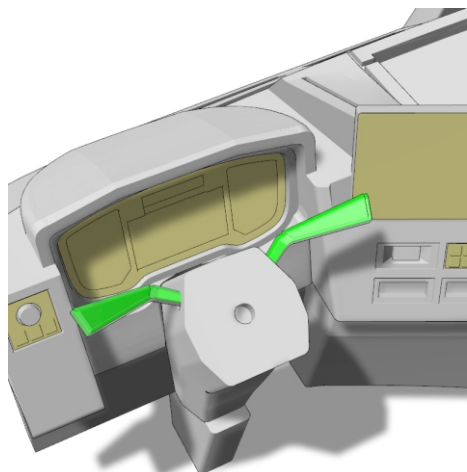

23. 

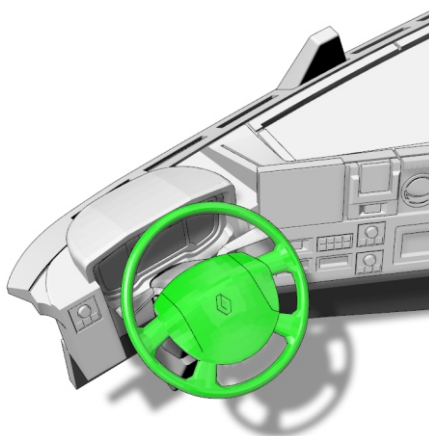

24. 




25.  x2



Seatbelt


26.  x2

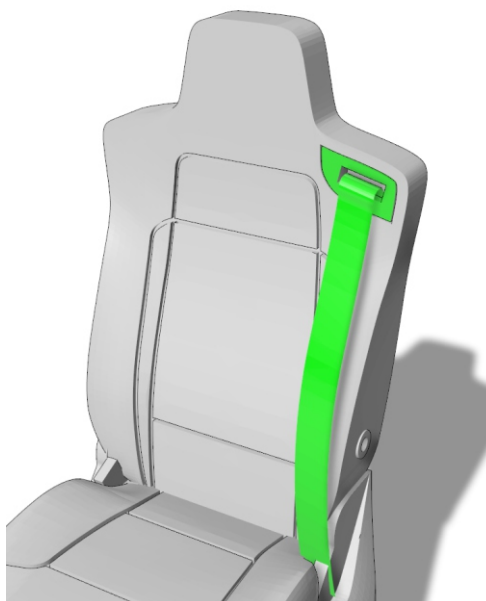


27.  x2




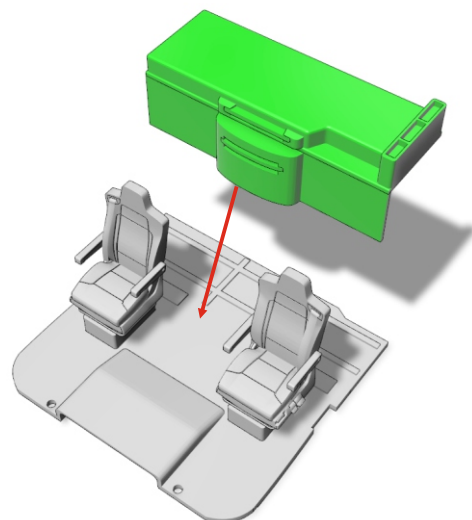
28.  x2

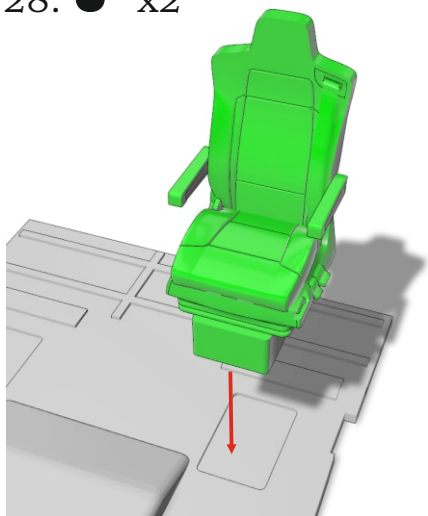


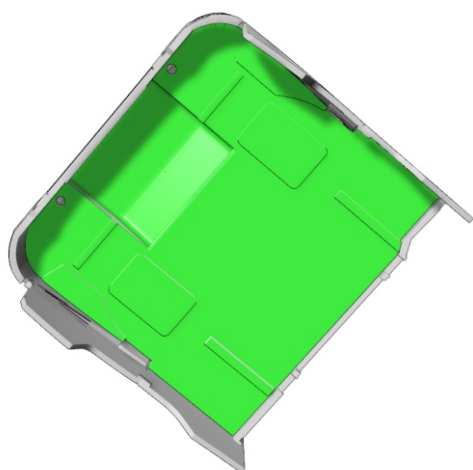
29. 

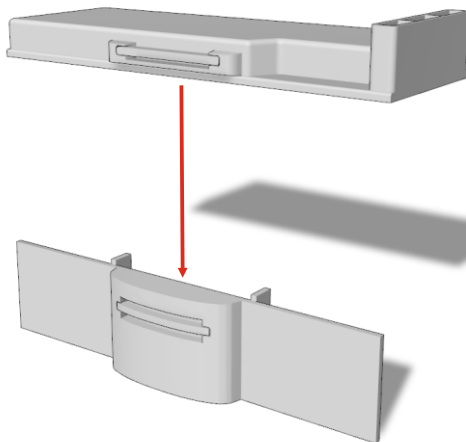


30. 




31. 




32.  x4


PE-part #7

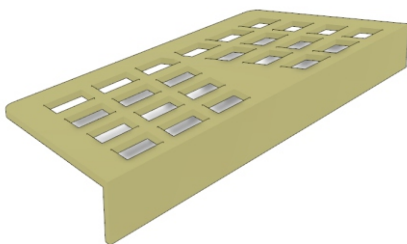


33.  x2

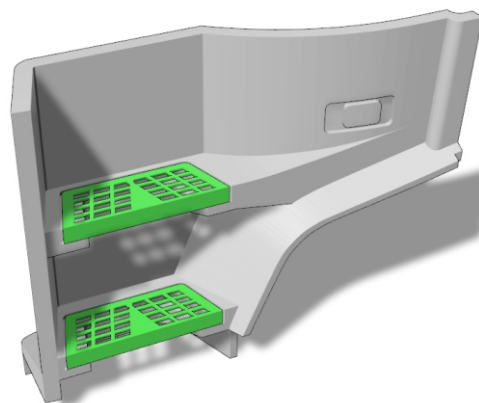


34.  x2

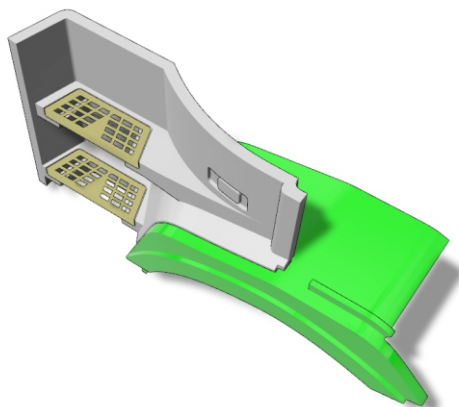


35.  x2

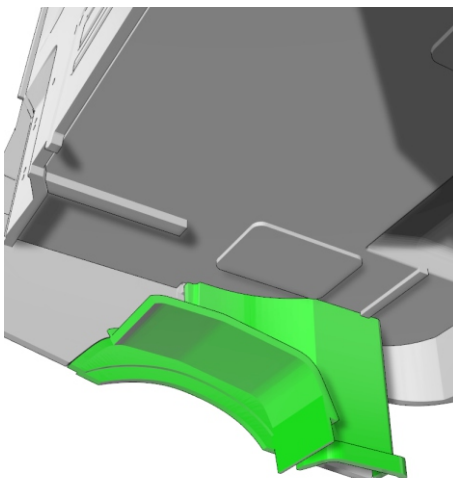


36.  x2

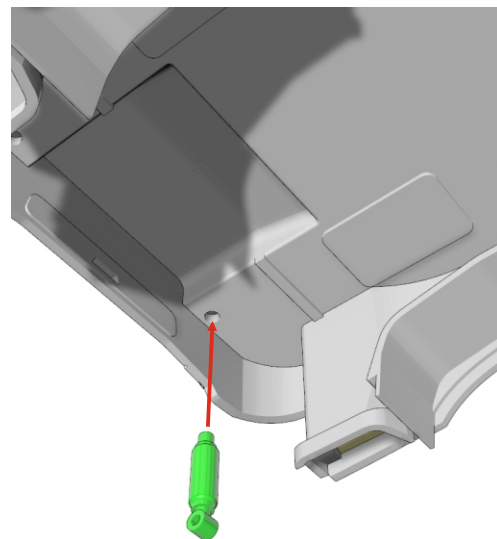


37. 

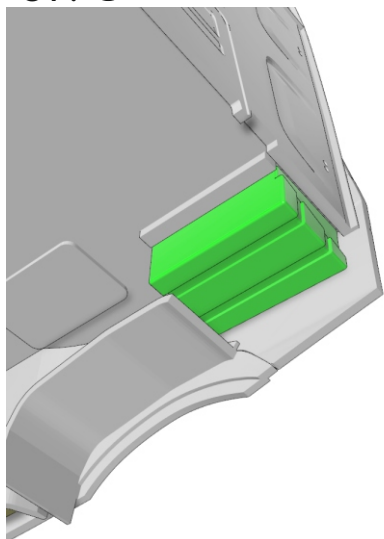


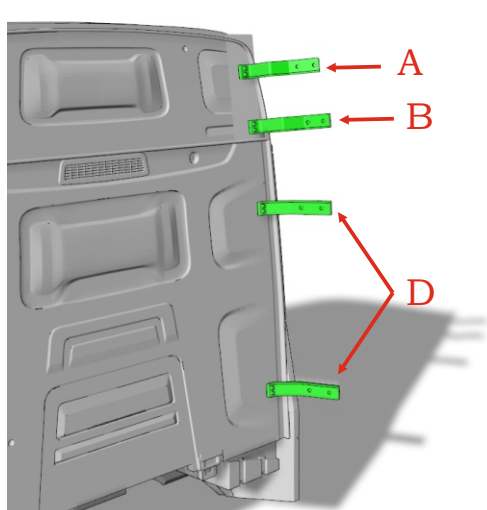
38.  x2

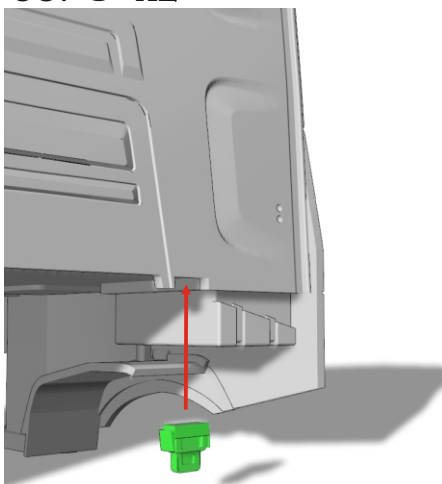


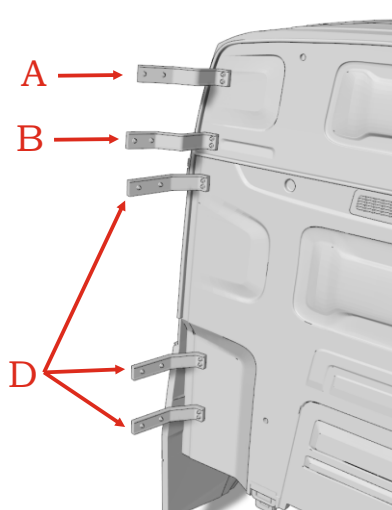
!

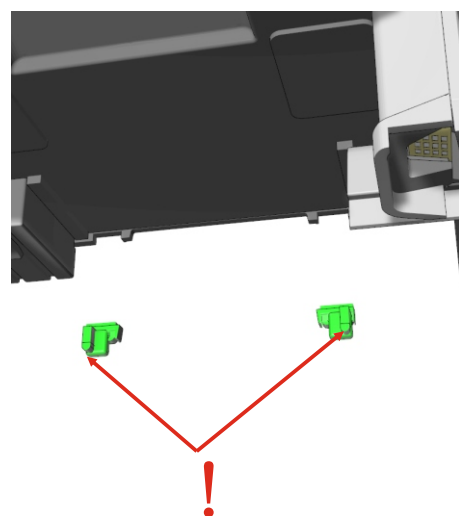


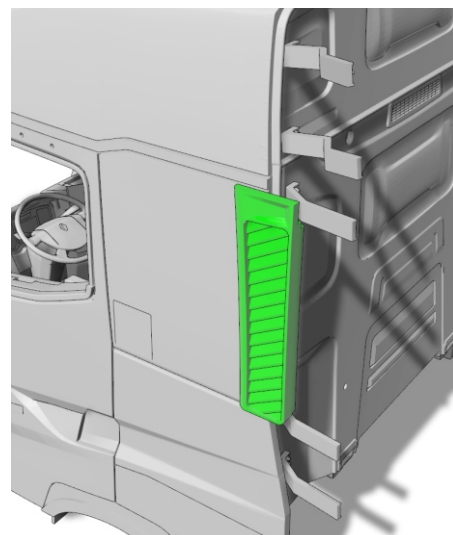
39. 




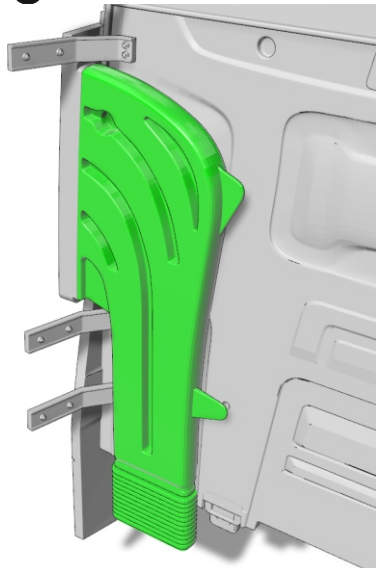
40. 




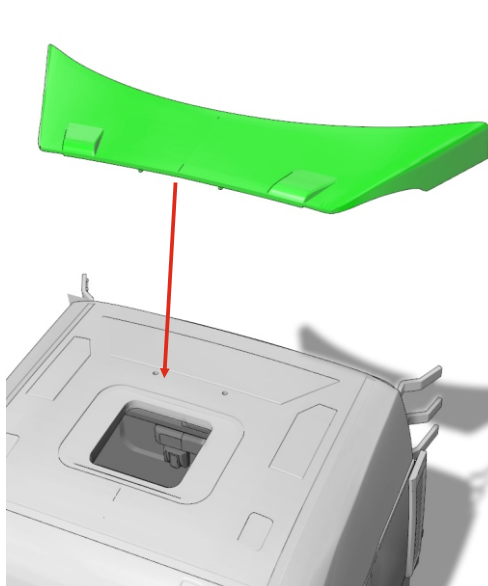
41. 




42. 




43. 




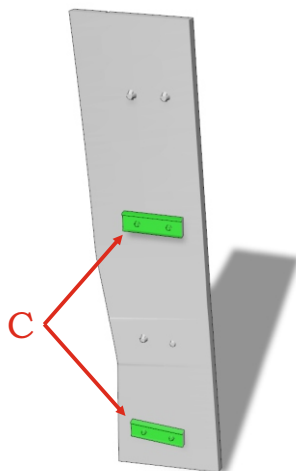
44.  x2

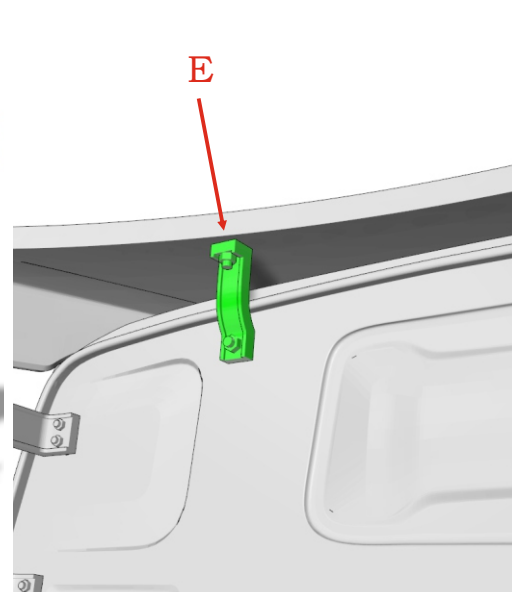


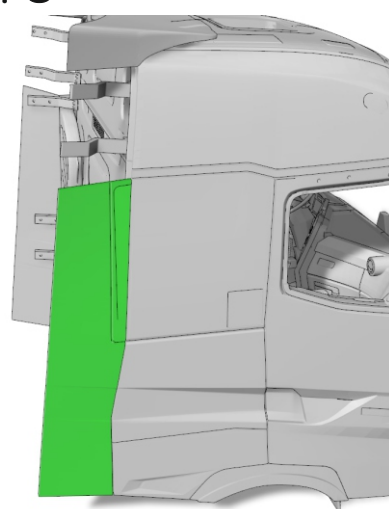
45. 

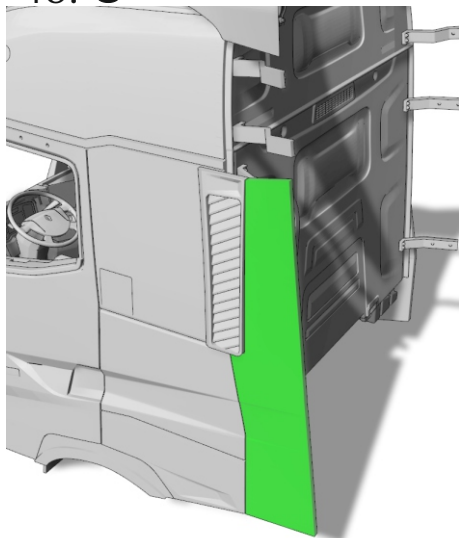


46. 




47. 




48.  x2

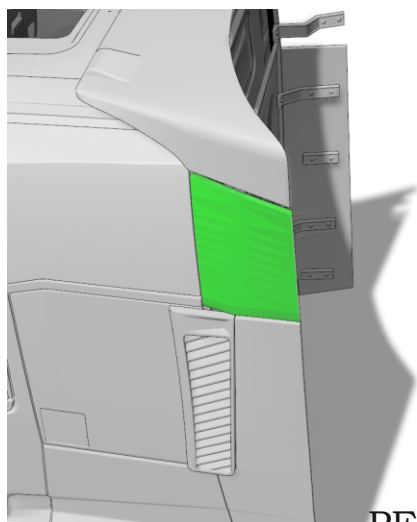


49.  x2 PE-part #16

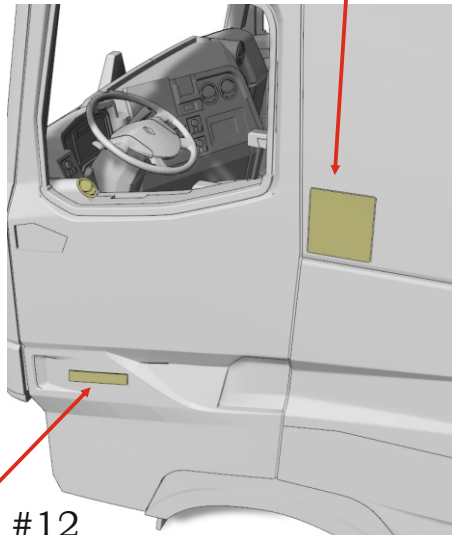


50.  x2

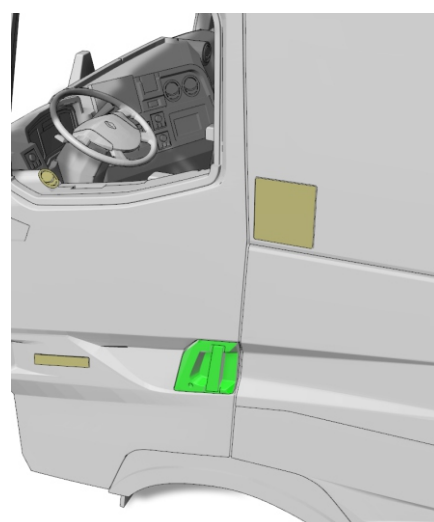


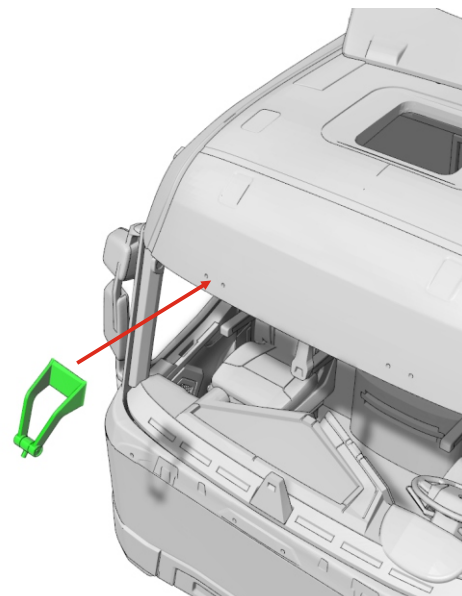
51.  x2

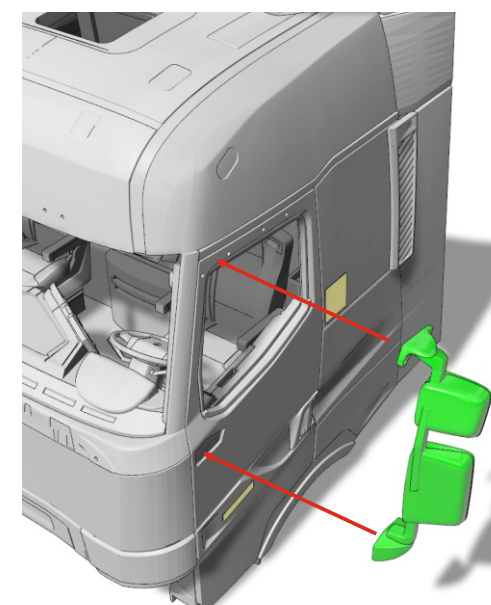


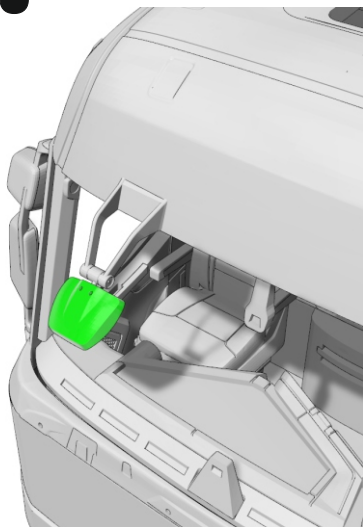
52.  x2

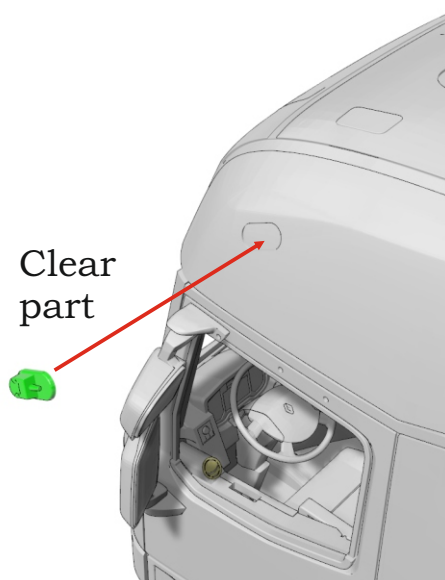

53. 




54. 




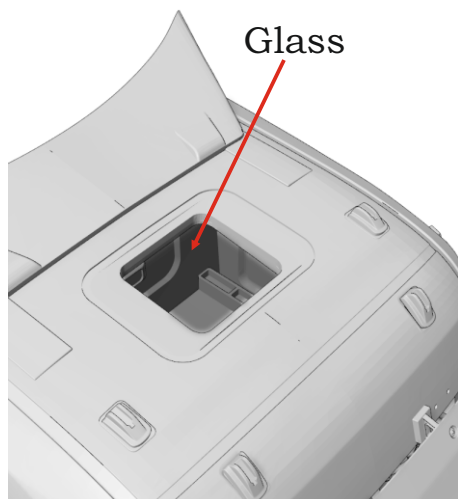
55. 




56. 

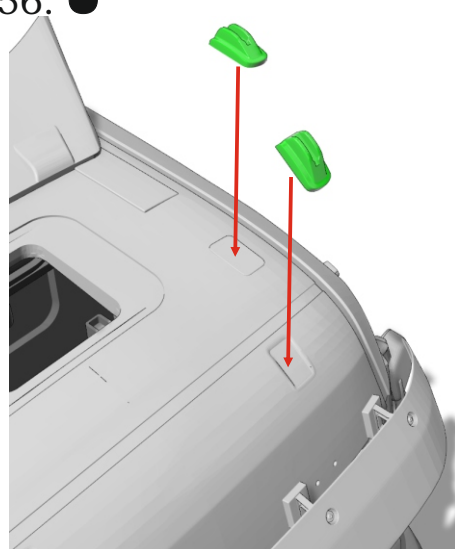


57. 




58.  x2

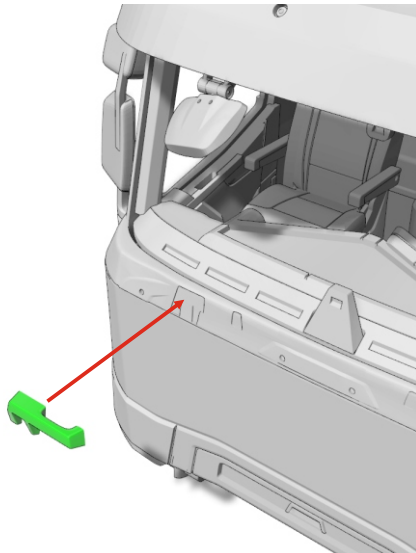


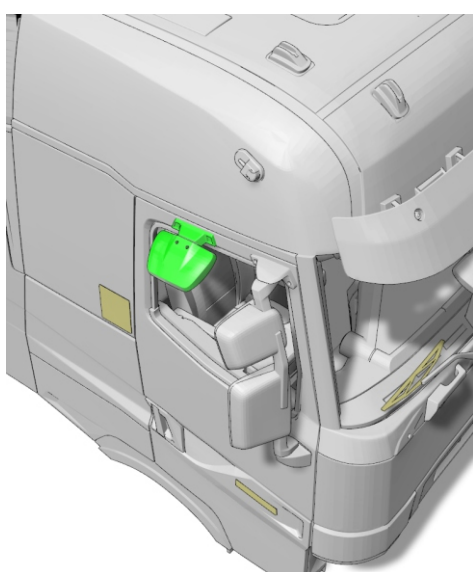
59.  x2

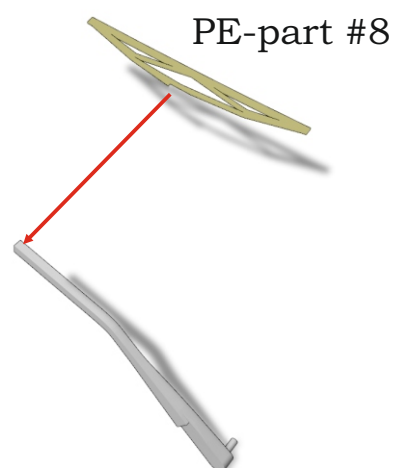


60. 

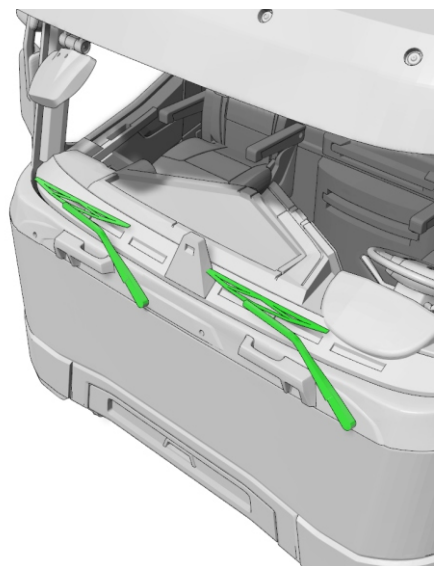



61. 




62. 


PE-part #1

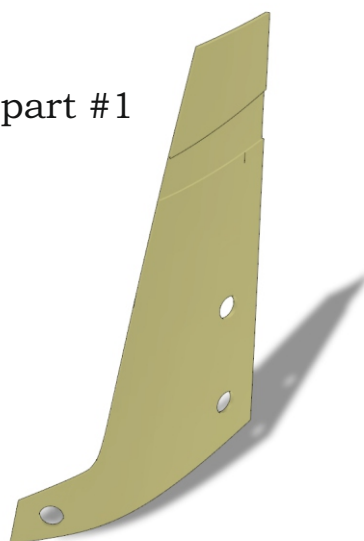

63. 

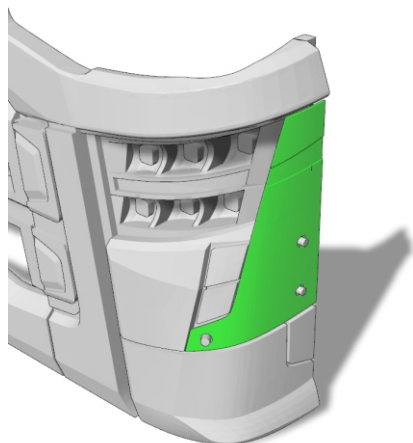


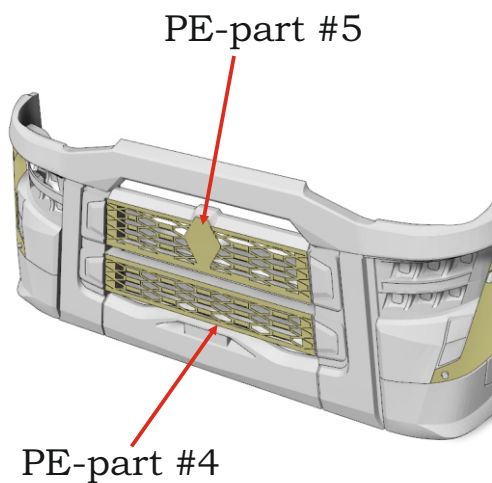
64. 

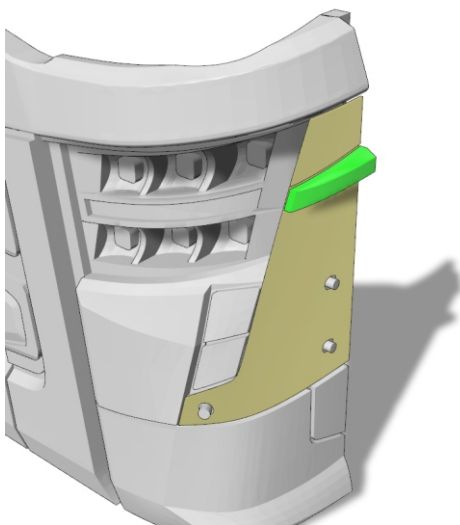


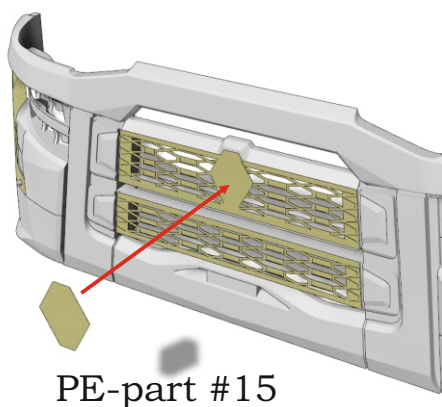
65. 

Repeat steps 62-64
for right side


66. 




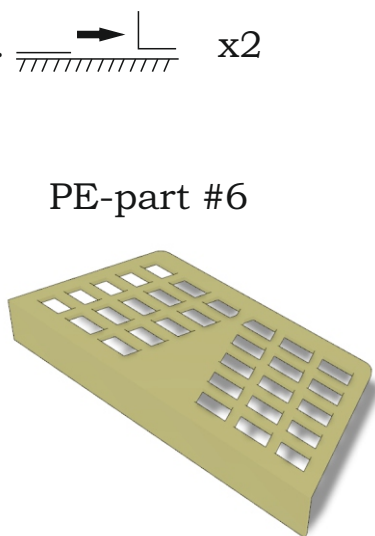
67. 




68.  x2

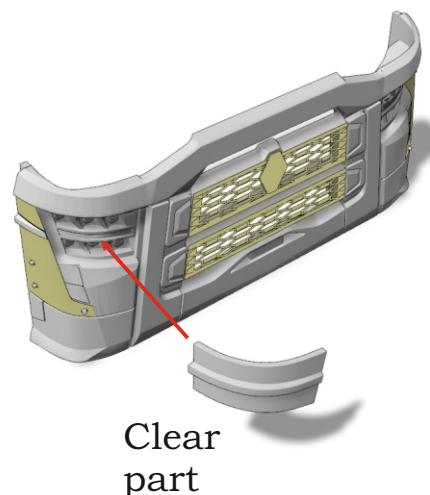


69.  x2




70.  x2

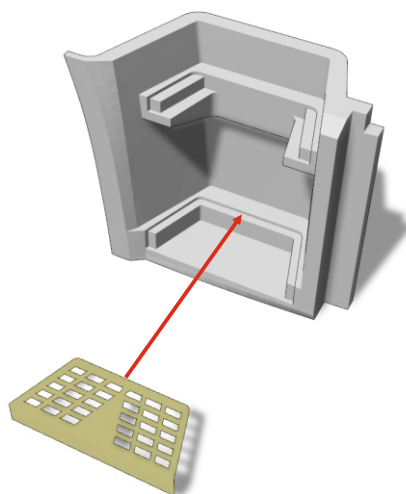


71.  x2


PE-part #7

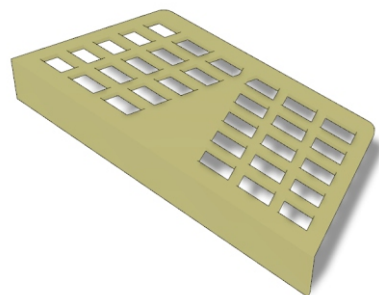


72.  x2

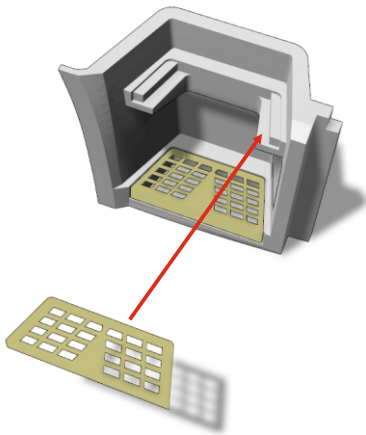

73.  x2

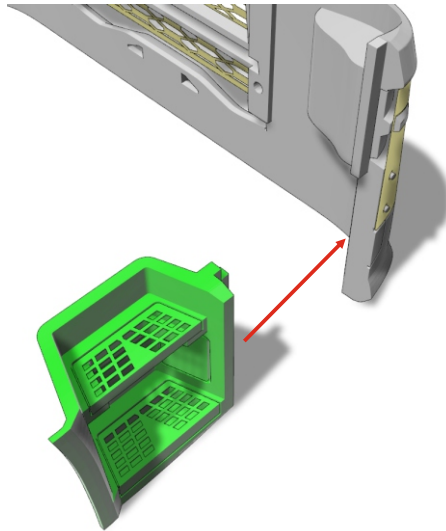


74.  x2

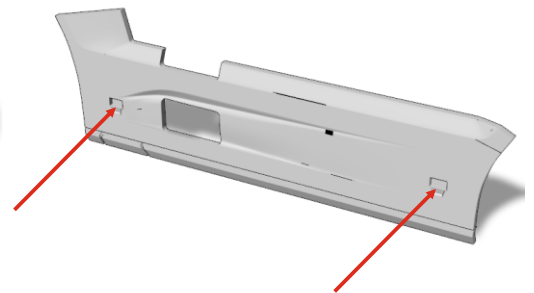


Italeri 10h parts

75.  x2

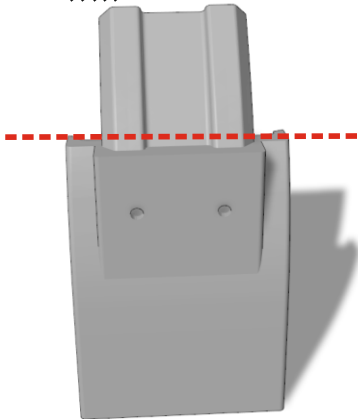

Italeri 63e parts

76. 

Mount all parts
on donor chassis.