

A&N Model Trucks



AUSSIE K220 TRUCK

Conversion kit, 1/24

Warning!

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.

This model kit contains very small parts and is not suitable for children. THIS IS NOT A TOY!

This kit requires chassis - we recommend to use our photo-etched chassis, but you still can use Italeri US trucks as donor kits (except Volvo VN and Peterbilt 377 or 378). Scroll down to page 17 to find illustrations with basic dimensions for donor kit.


Symbols:



- glue parts;



- do not glue parts;

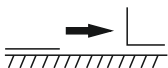

- bend parts;



- attention;



- moving parts;



- your choice;




- cut;




- drill;

Aussie K220 truck. Conversion kit. Scale 1/24


1.  x2

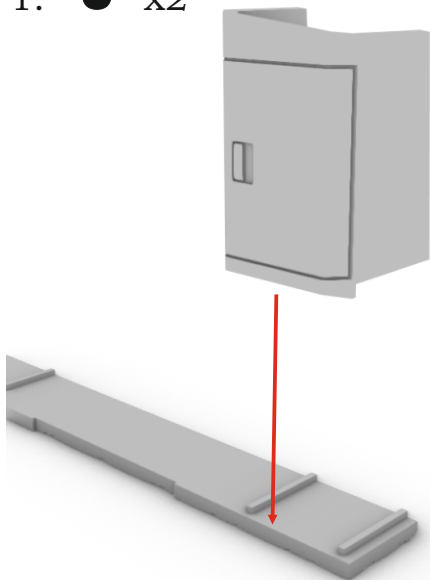


2. 

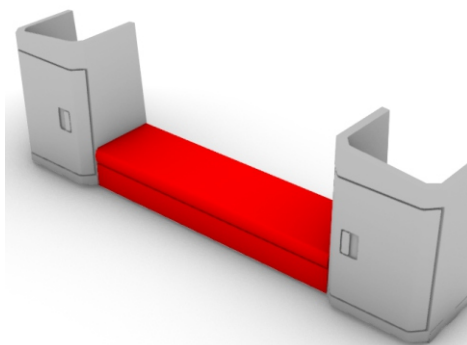


3. 

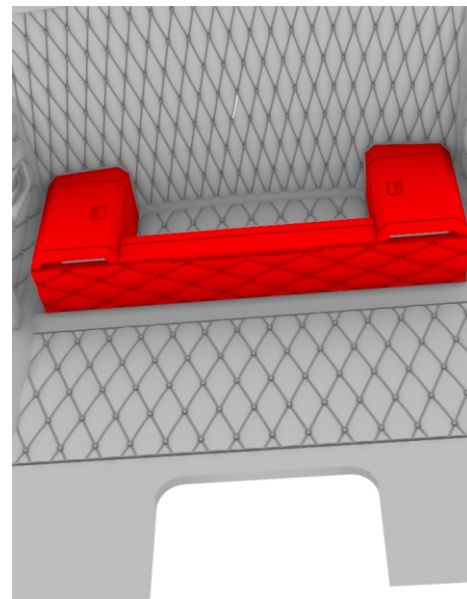


4.  x2

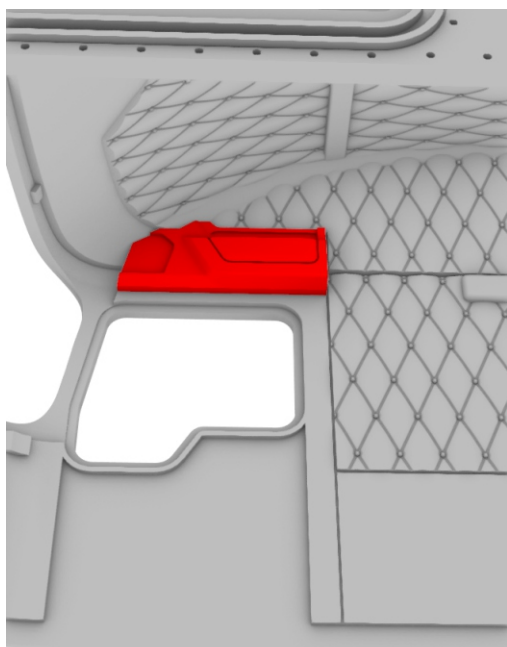

5. 

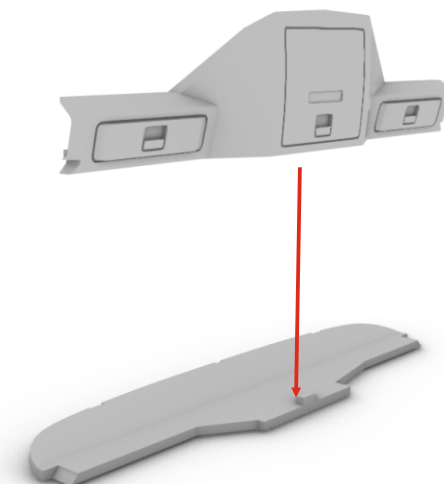


6. 

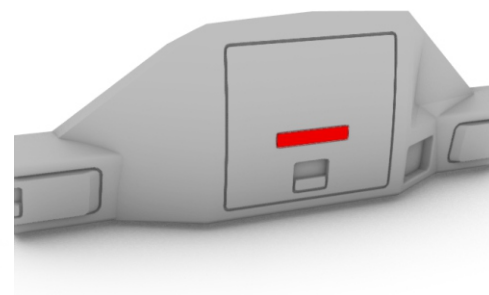


PE-part #6

7. 

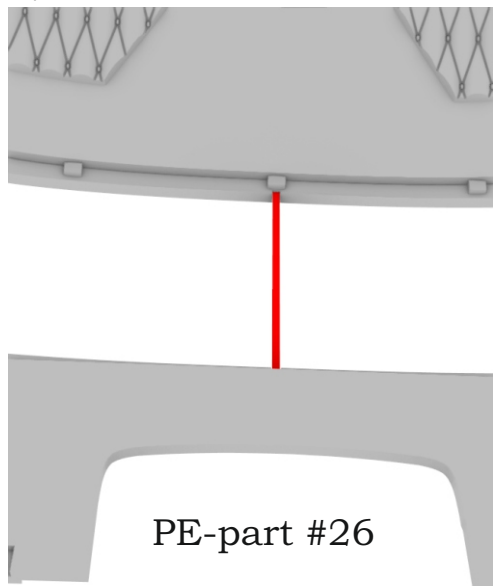


PE-part #26

8. 

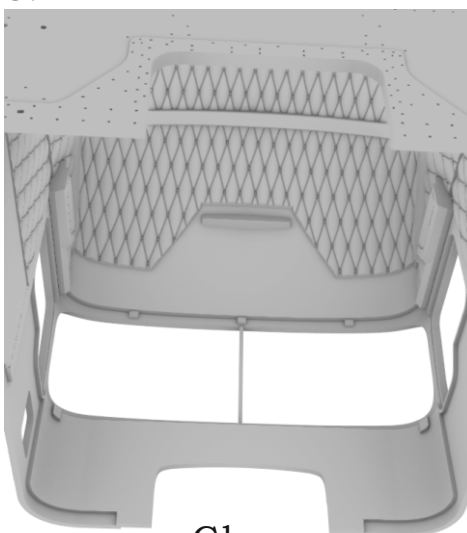


Glass


9. 

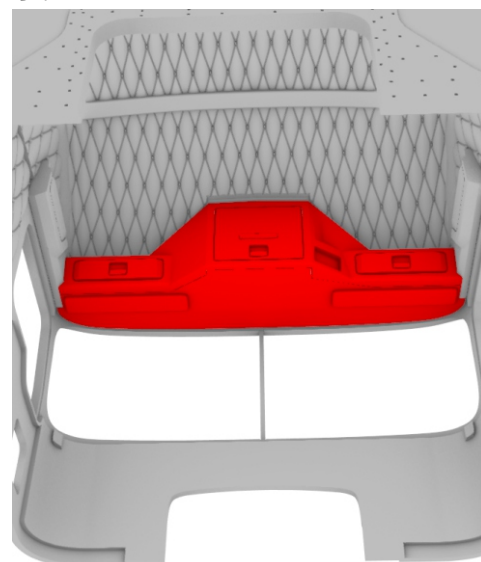


10.  x2

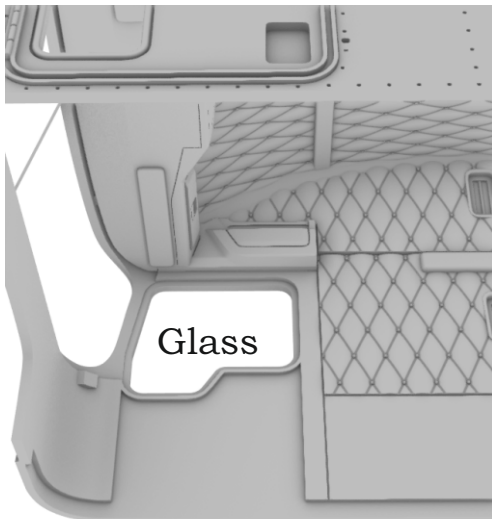


11.  x2

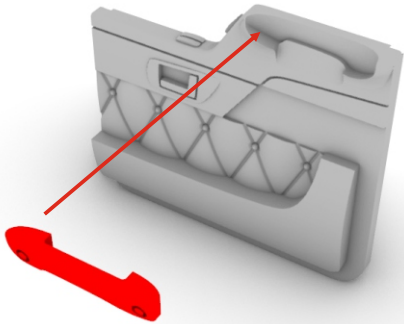


12.  x2

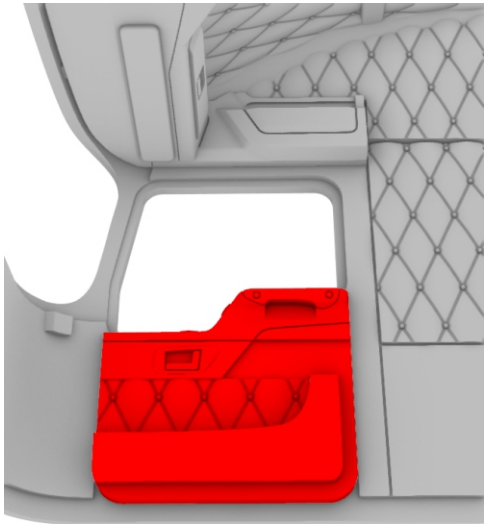


13.  x2

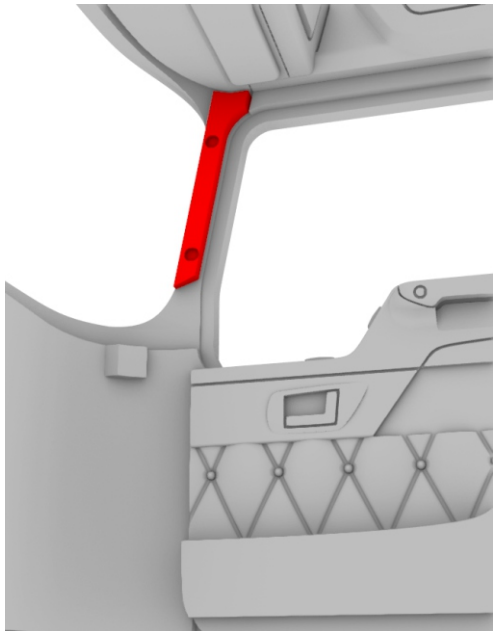


14.  x2

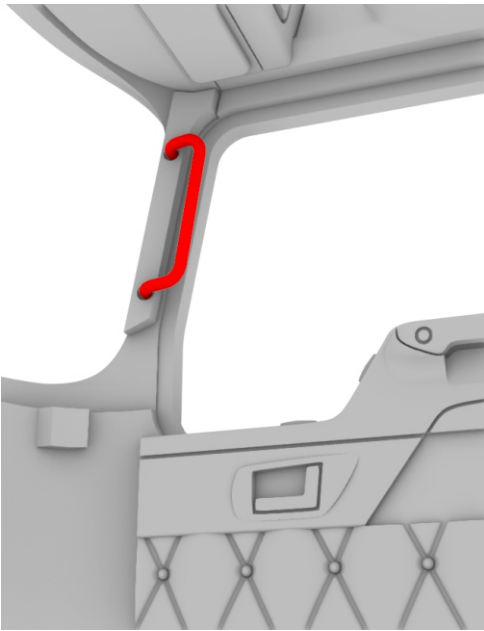


15. 

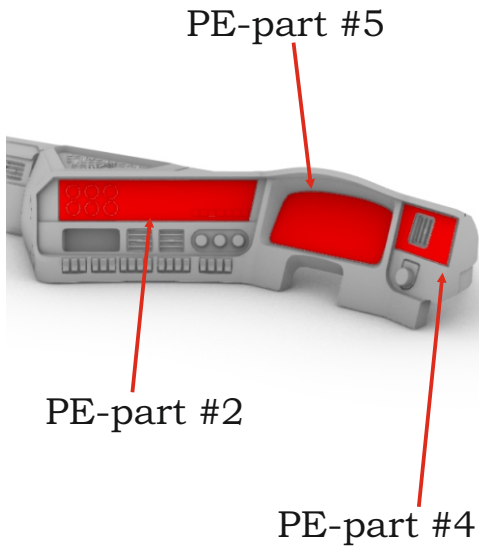


16. 

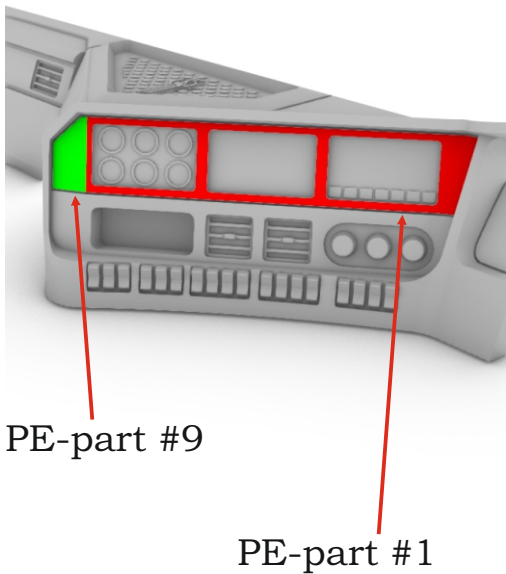

17. 

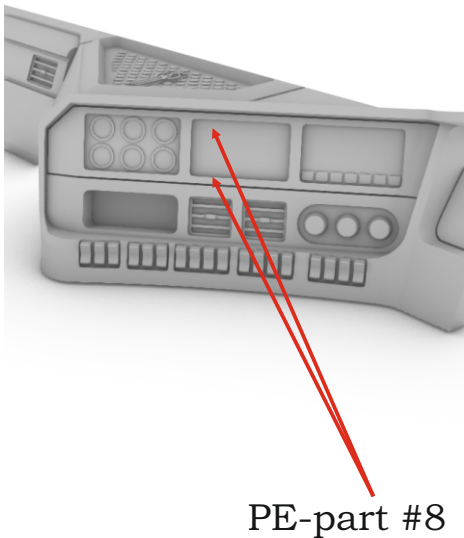


18. 

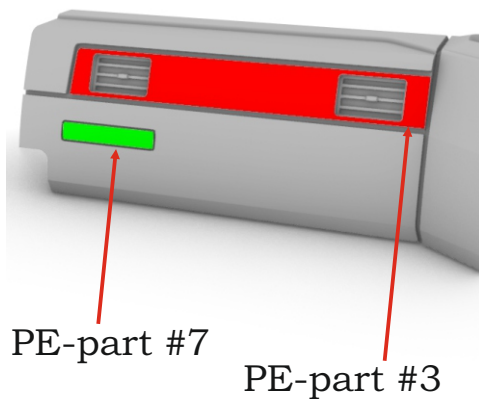

19. 

20. 




21. 

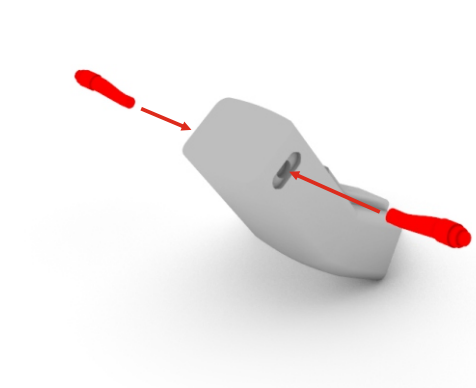

22. 

23. 




24. 

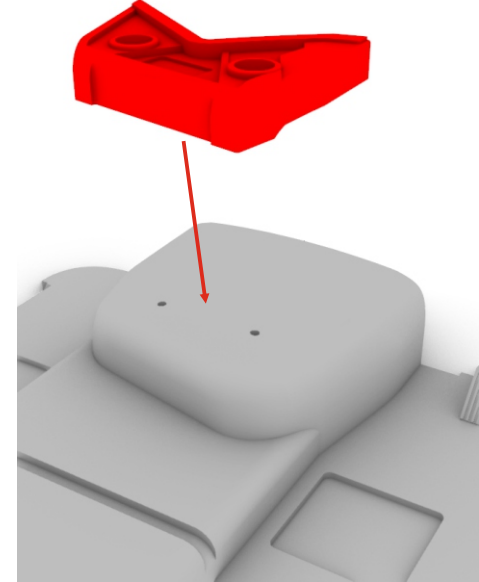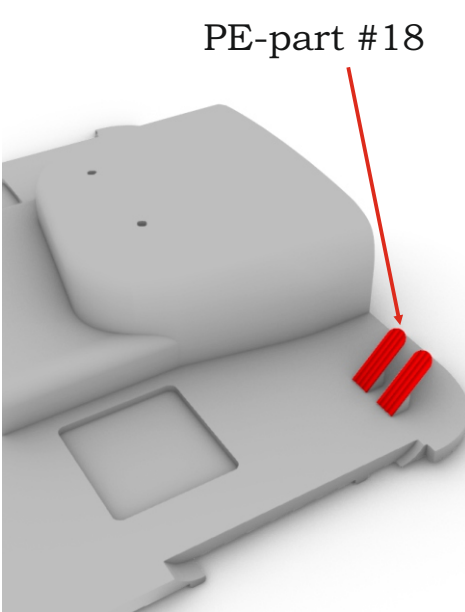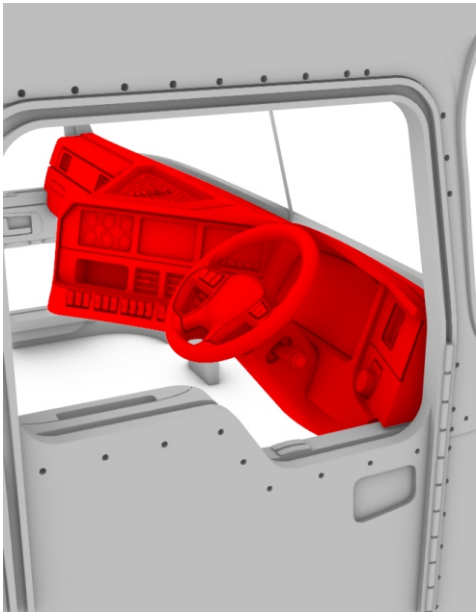


25.  x2

26. 

27. 

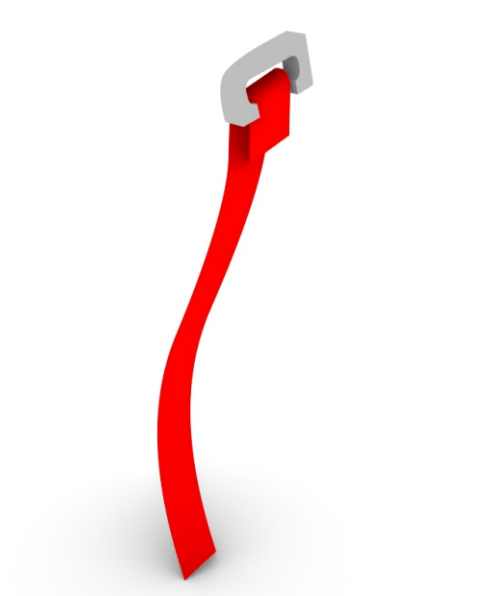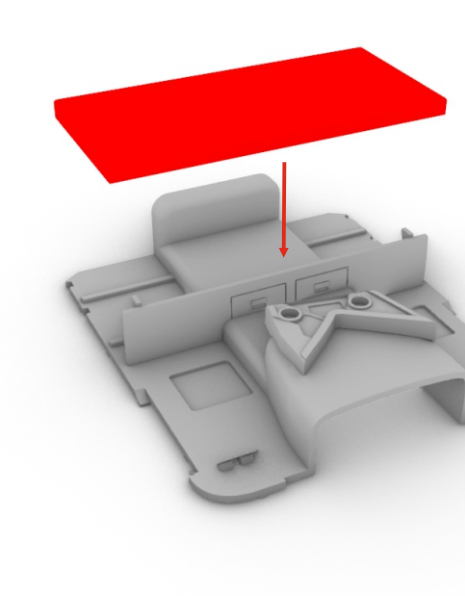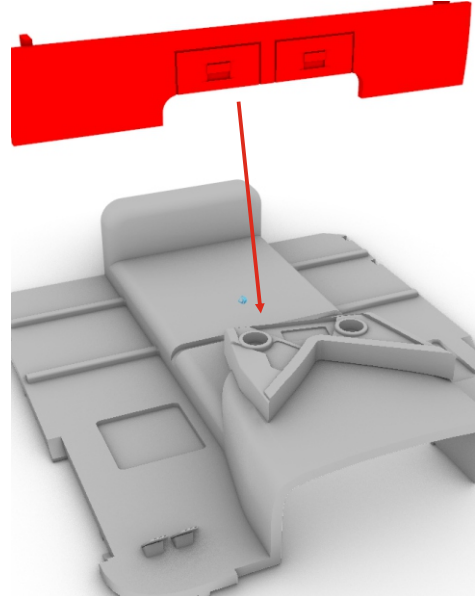


28.  x2

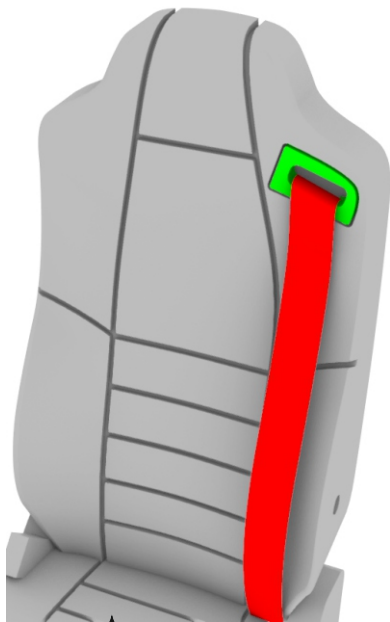



29.  x2




30.  x2

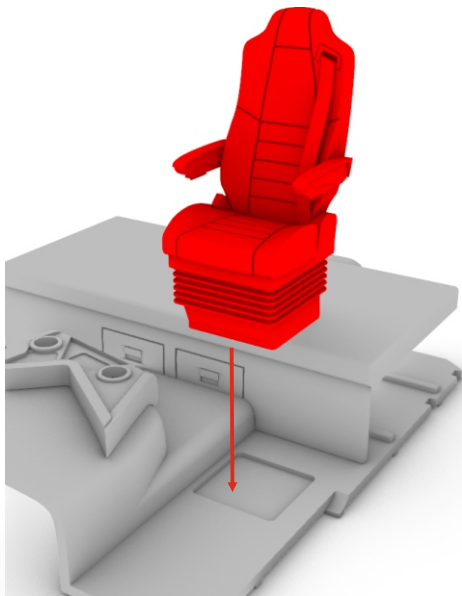

31. 

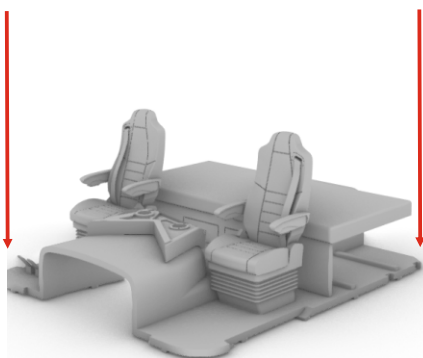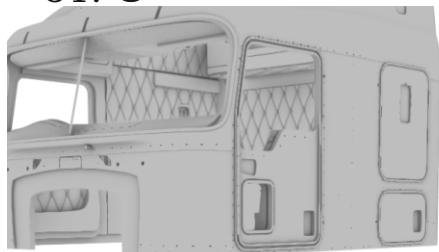

32.  x2

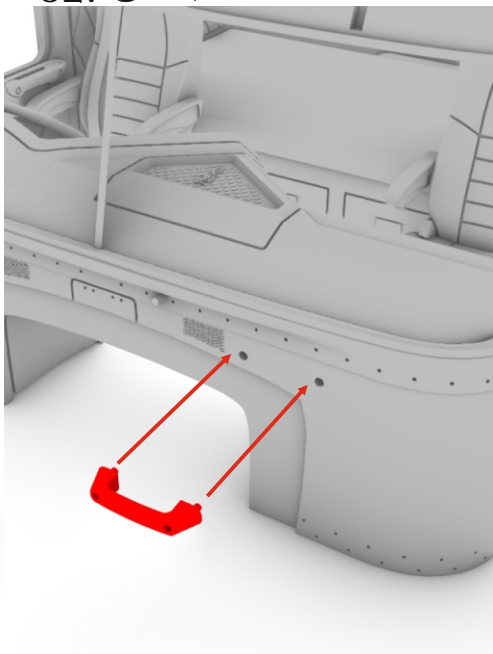


33.  x2



PE-part #25


34.  x2

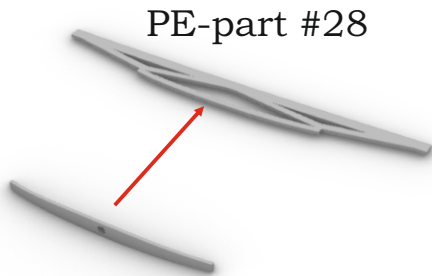


PE-part #28

PE-part #24


35.  x2

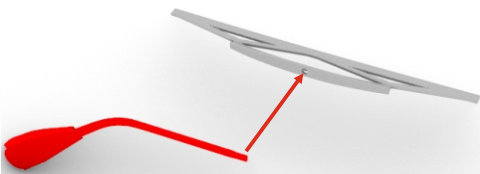


36.  x2

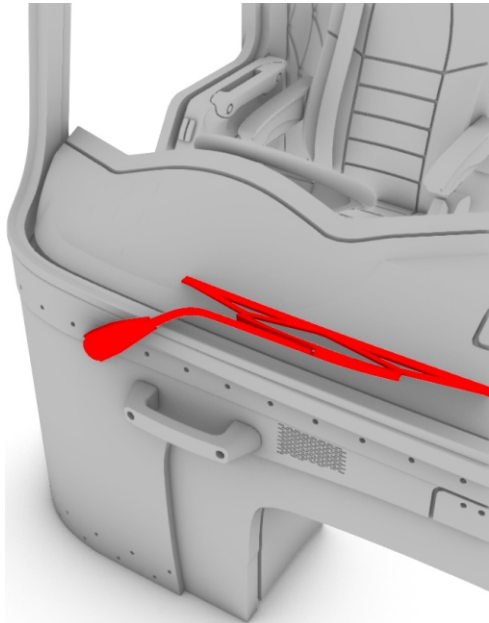


37. 

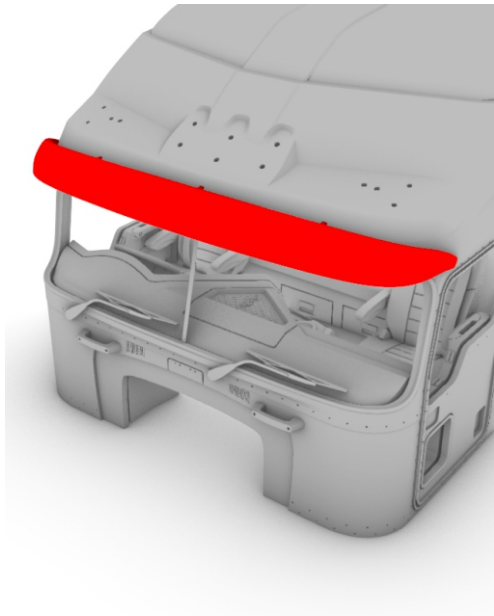


38.  x5

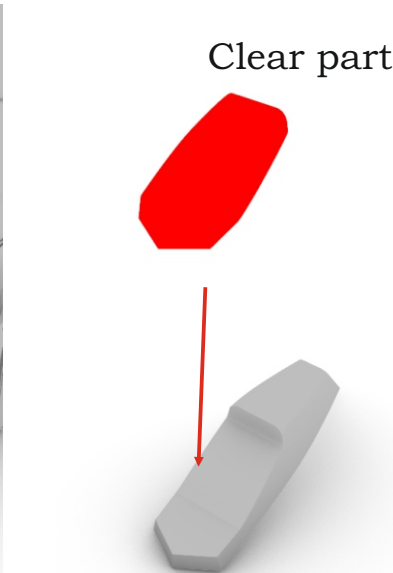


39. 

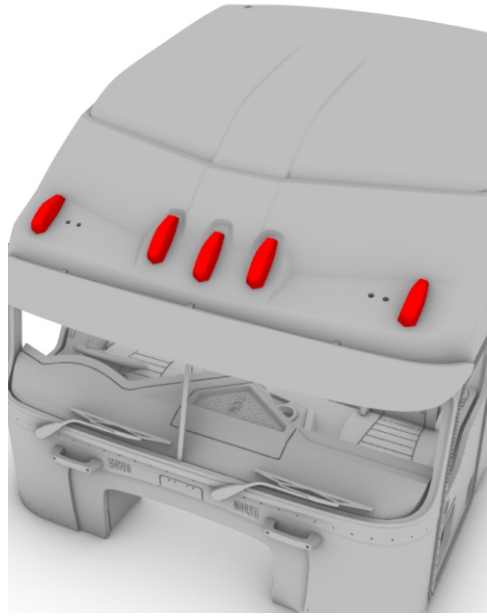


40.  x2

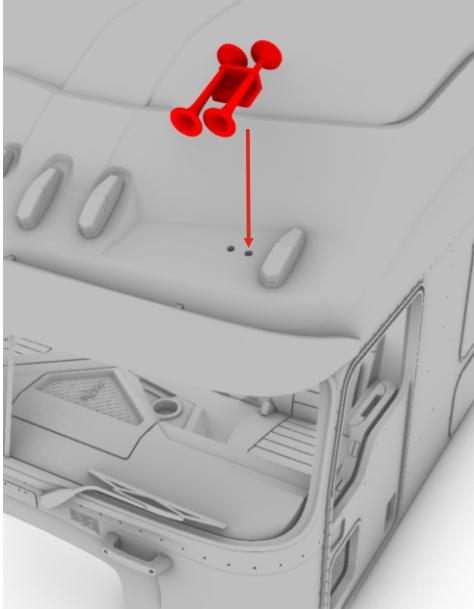


41.  x2

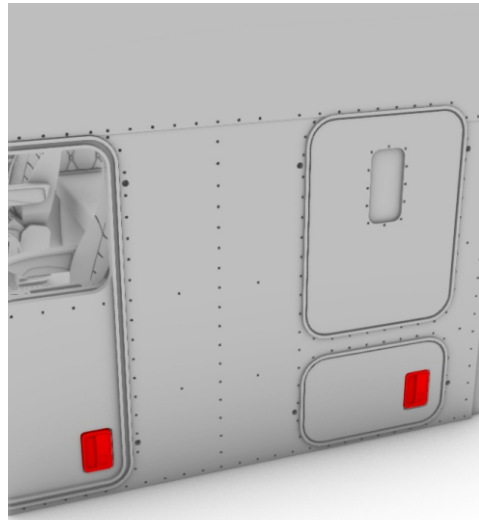


42.  x2

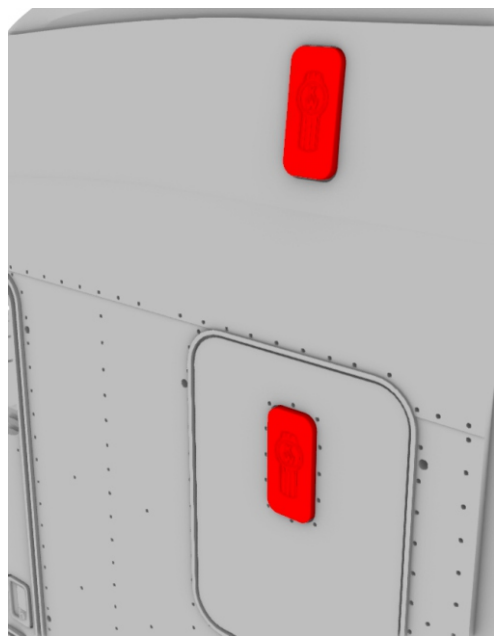


43.  x2

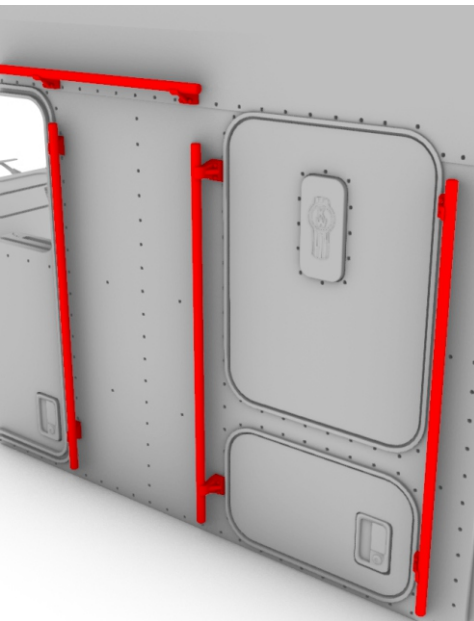



44.  x2

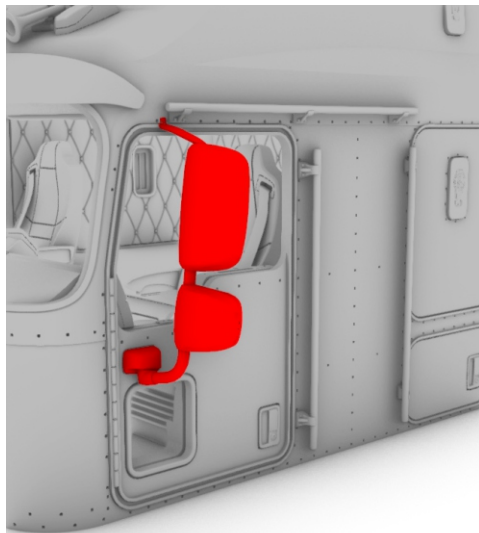

45. 

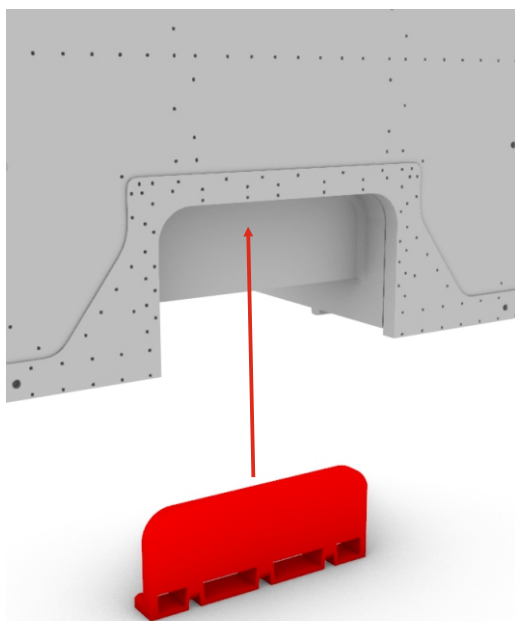


46.  x3

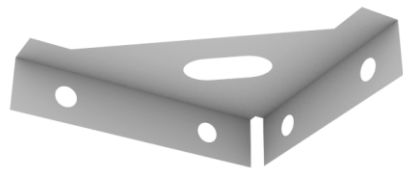


PE-part #14


47. 

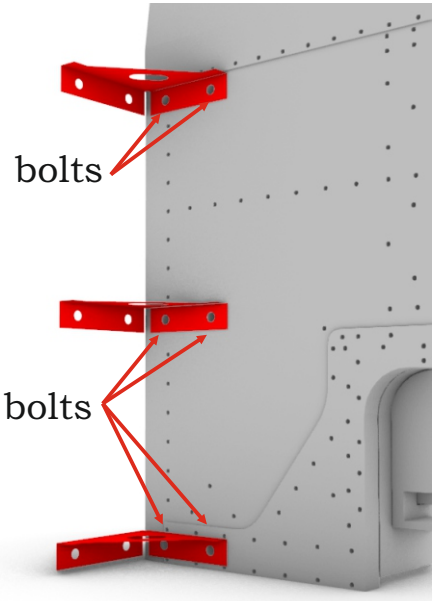

48. 

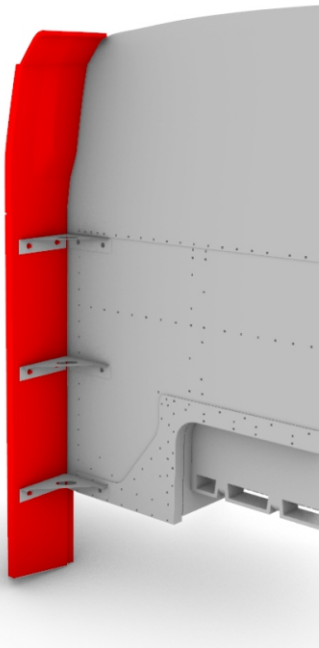


49. 

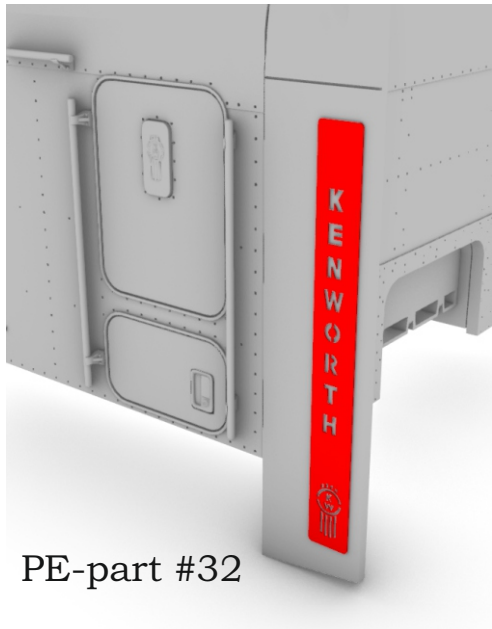


PE-part #32

50.
Repeat steps #46-49
for right side.

51. 

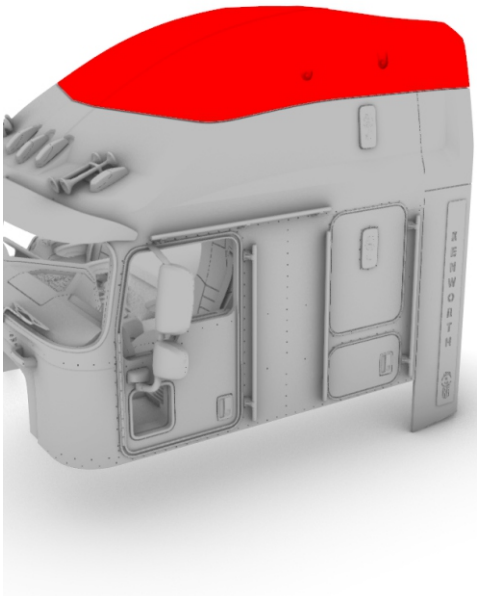


52.  x2

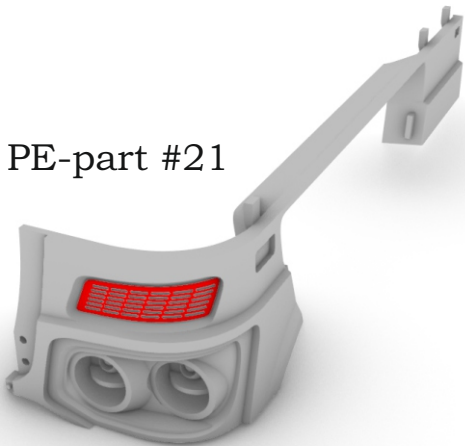


PE-part #21

53.  x2

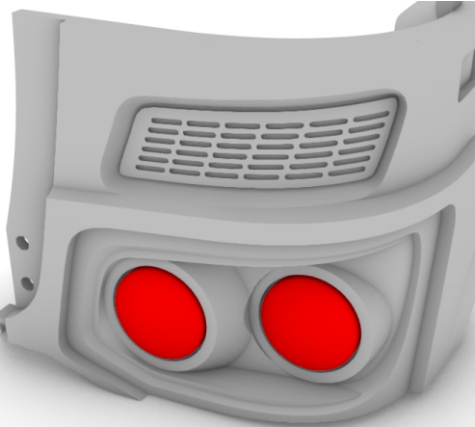


Clear parts

54.  x2

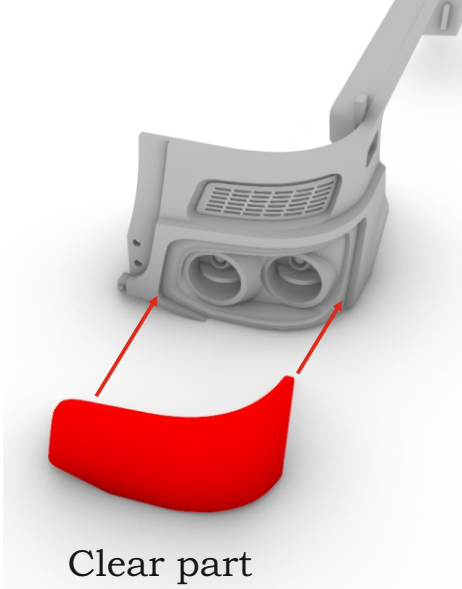


Clear part


55.  x2
Clear part

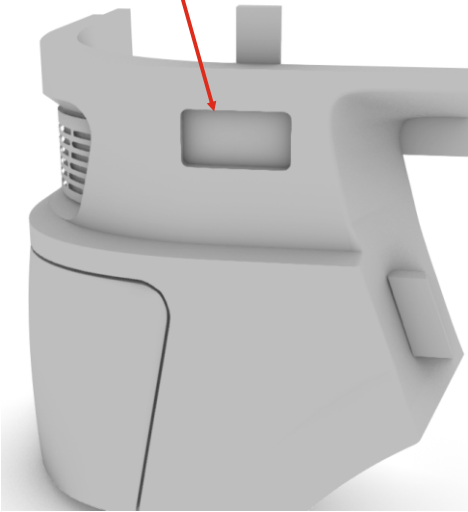

56.  x6

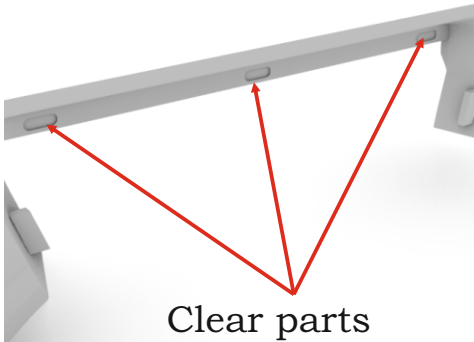


57. 

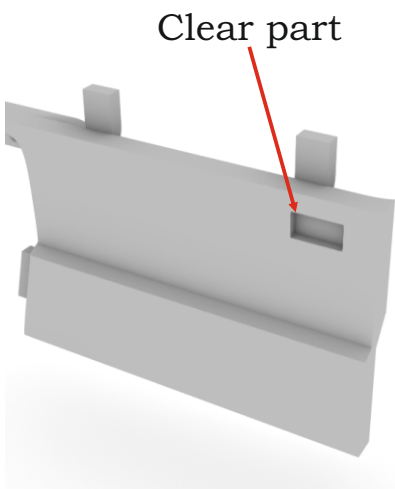


58.  x2


PE-part #13

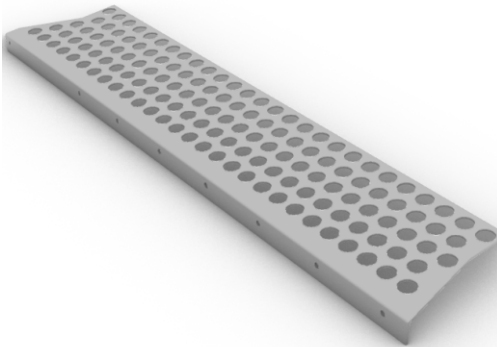

59.  x2

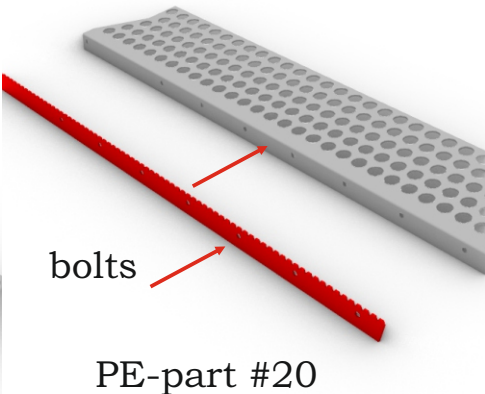


60.  x2

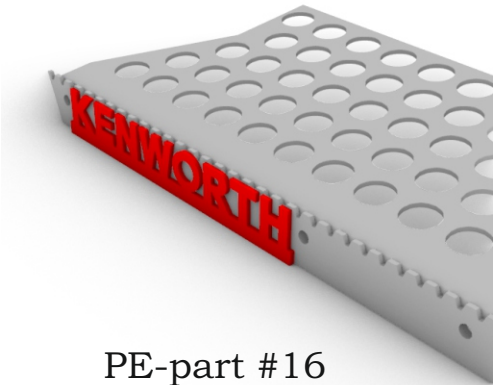


PE-part #16


61.  x2

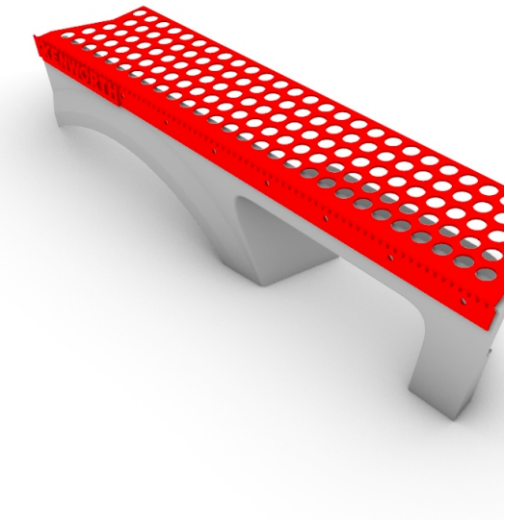


62.  x2

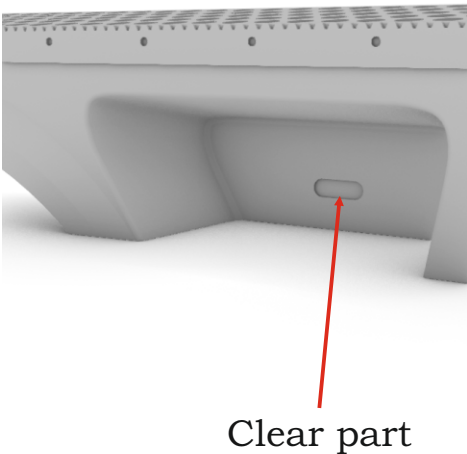


63.  x2

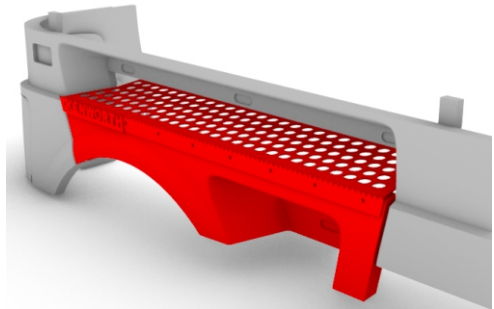


64.  x2

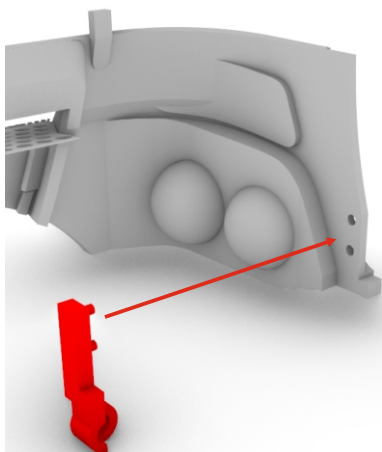

65.  x2

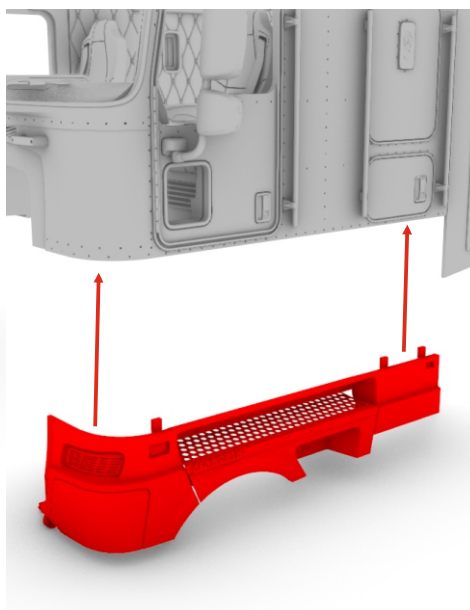


66. 

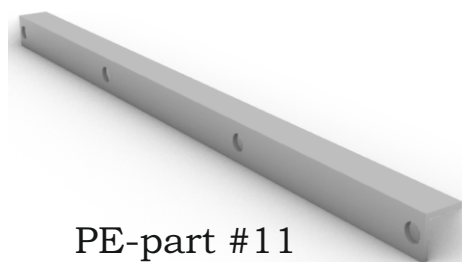


PE-part #11

67. 

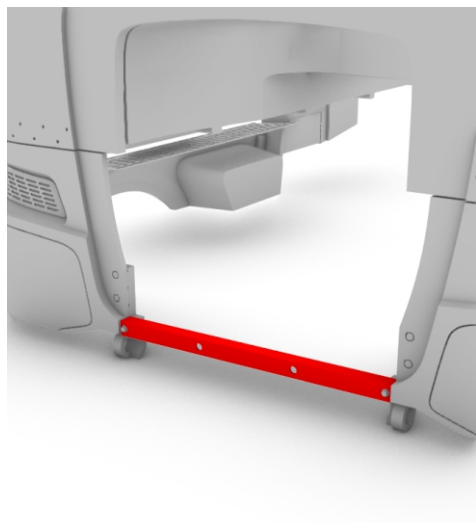


68. 

PE-parts #22

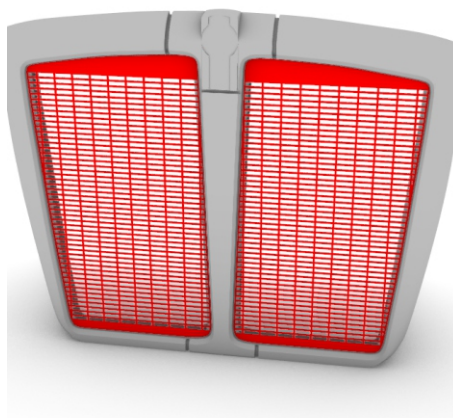


69. 

PE-part #10

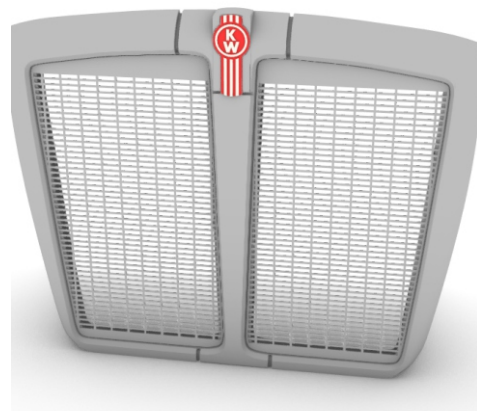


70. 

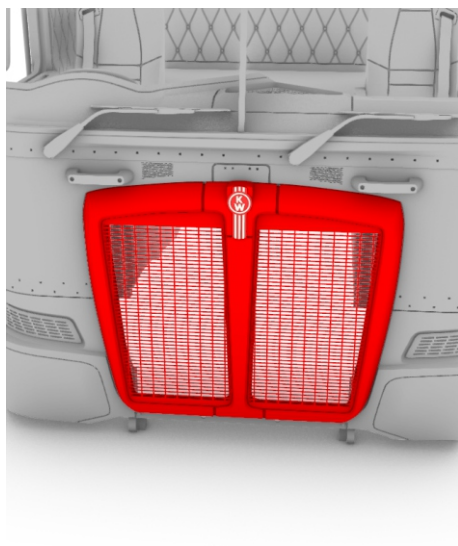

71.  x2

PE-parts #17

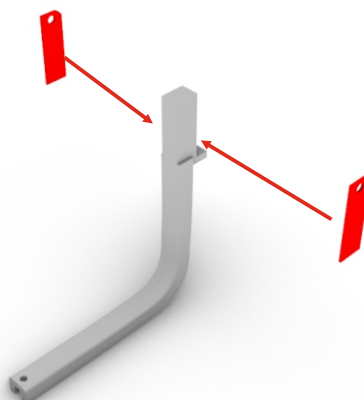


72.


! For next steps were used photo-etched chassis and X15 engine kits by A&N Model Trucks. Refer booklet from chassis kit for apertures' numbers.

If you use Italeri donor chassis, scroll down to page 17 for illustrations with basic dimensions.


73. 

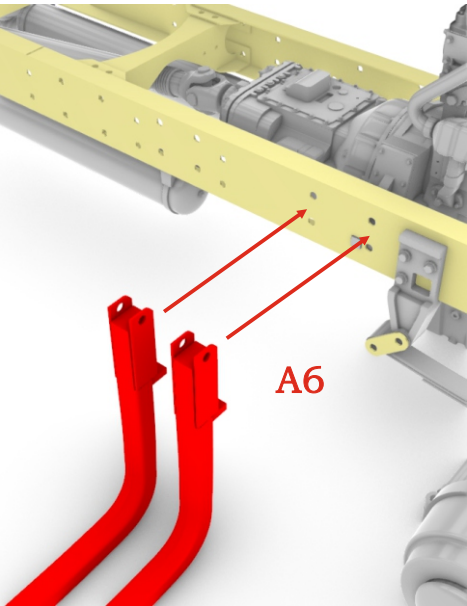


74. 

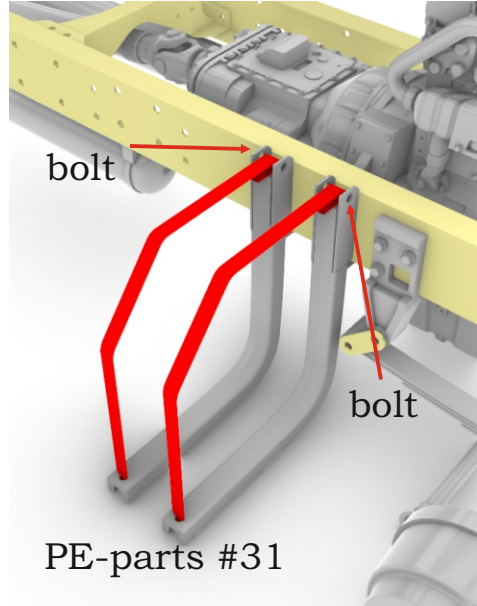

75. 

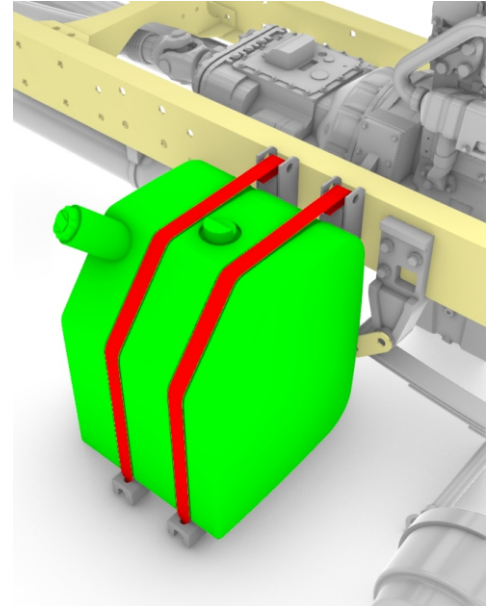

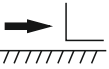76. 


PE-part #12



77. 



78. 

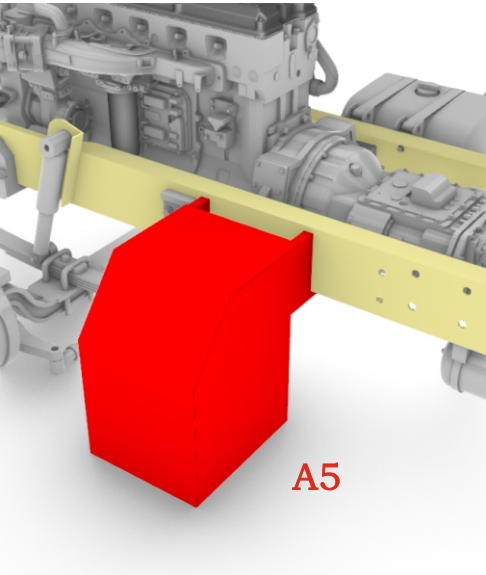


79.  x2


PE-part #19

PE-part #27


PE-part #29

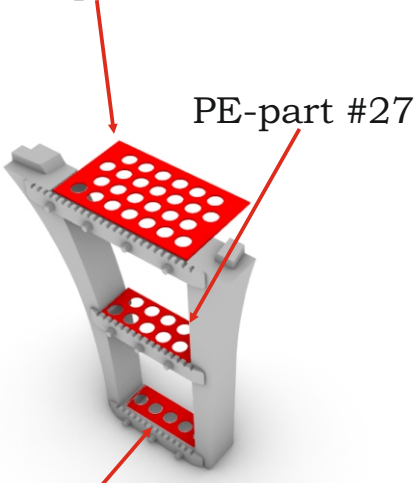


80.  x2

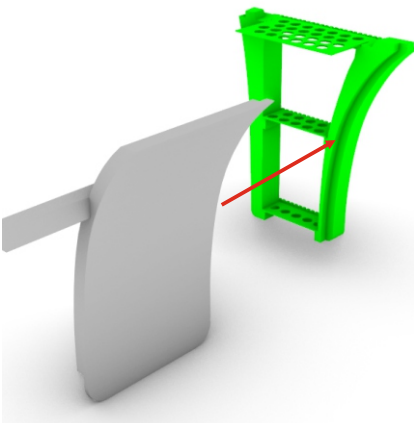


81.  x2

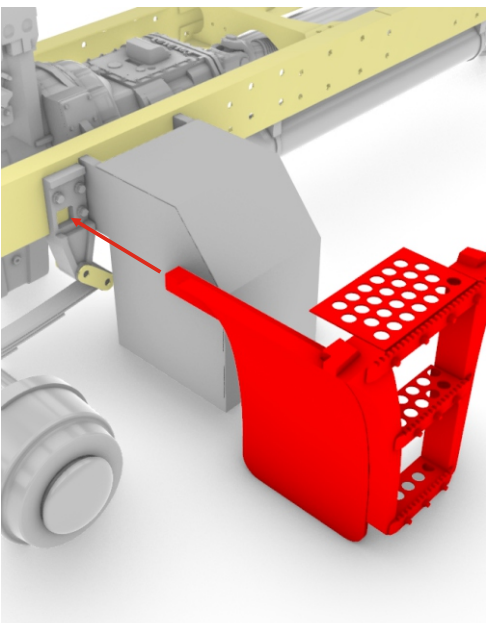

82. 

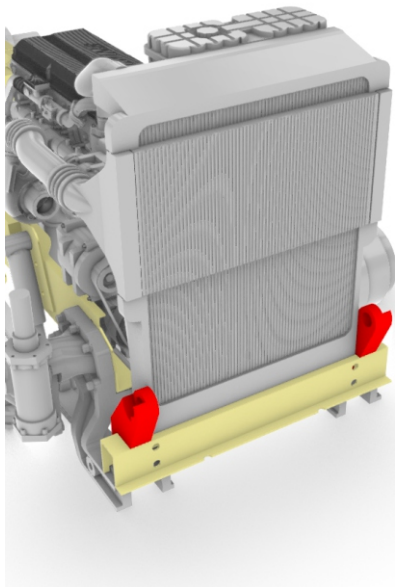



83.  x2

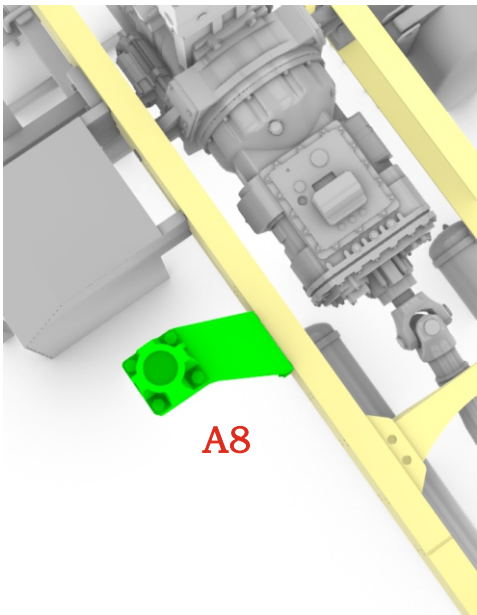

84.  x2


PE-part #40

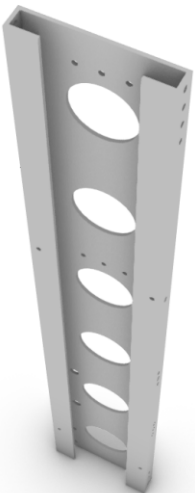


85.  x4

PE-part #34




86.  x2


PE-part #38

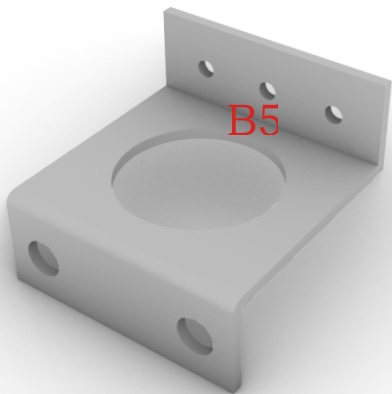


87.  x2

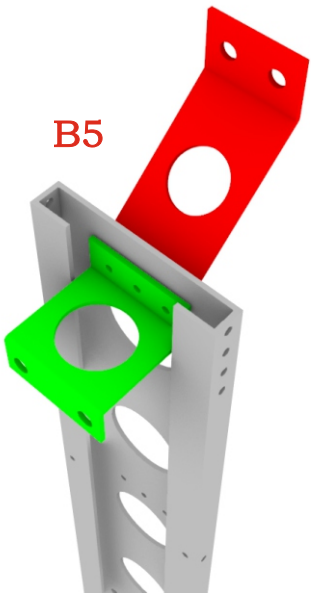


88.  x2

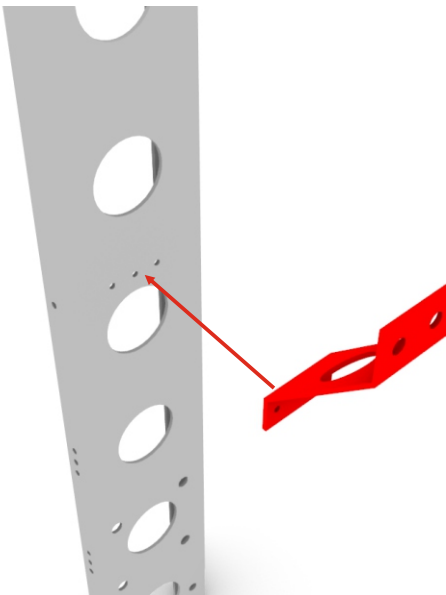


89.  x4


PE-part #36

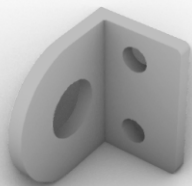


90. 

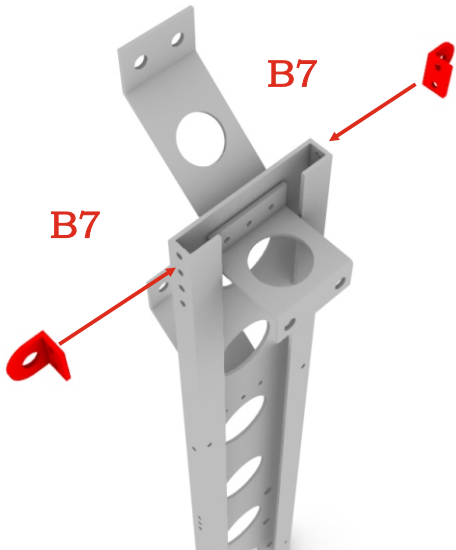

91.  x2

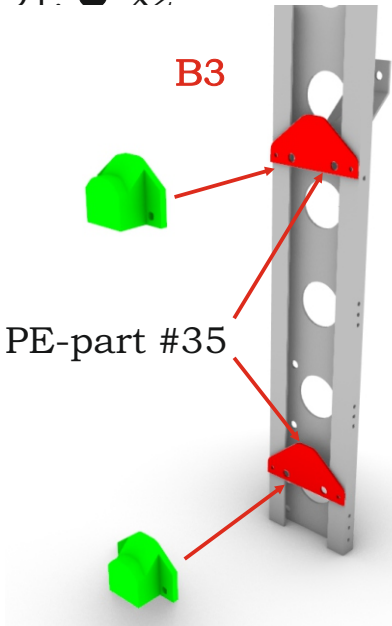


92.  x2


PE-part #37




93. 

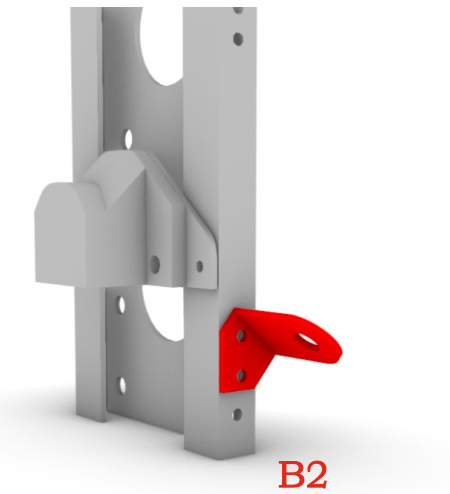


94. 

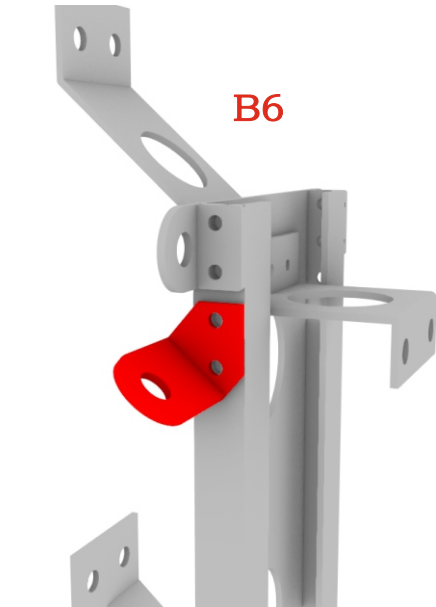

95.  x2

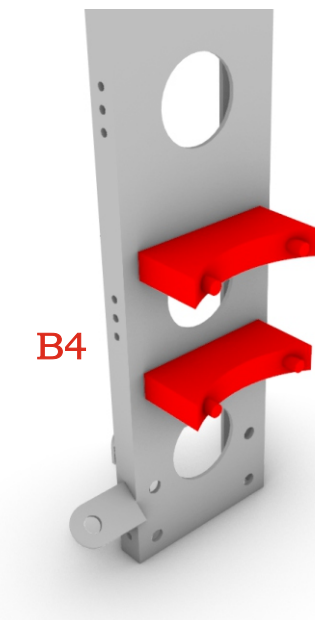


96. 

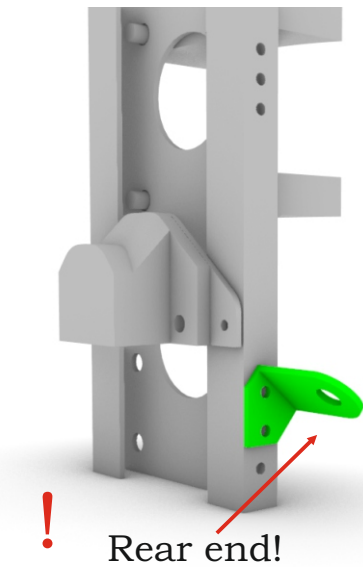


97.  x2




98.  x2

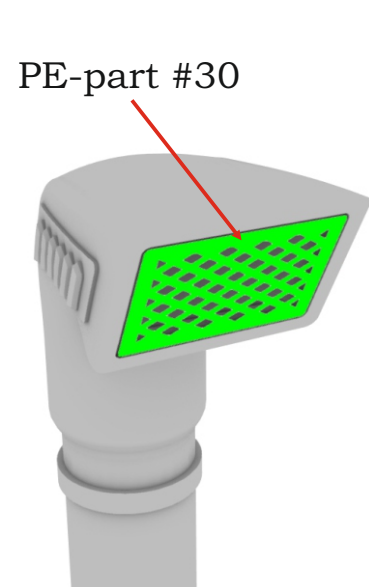


99.  x2

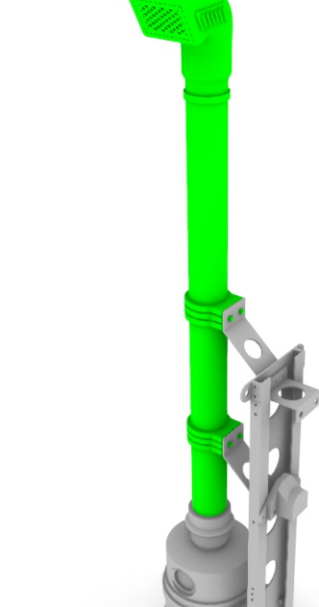


100.  x2

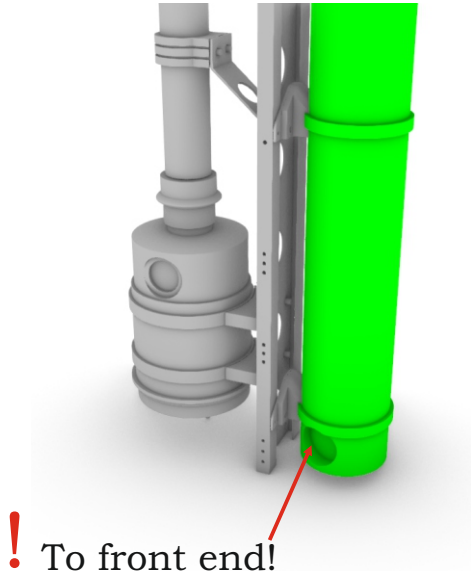


101.  x2

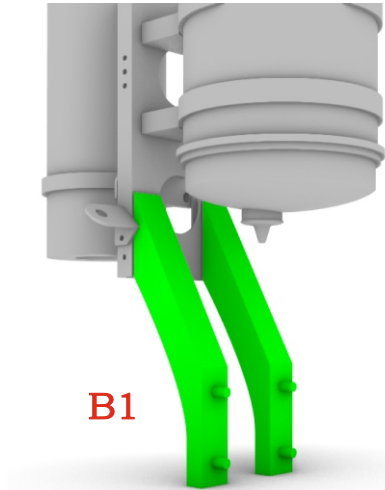


102.  x2

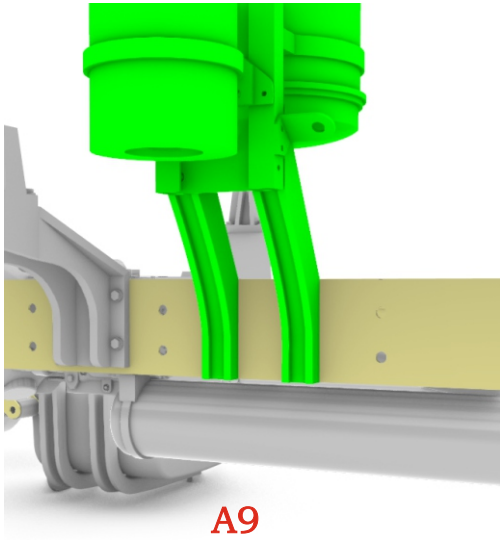


103. 

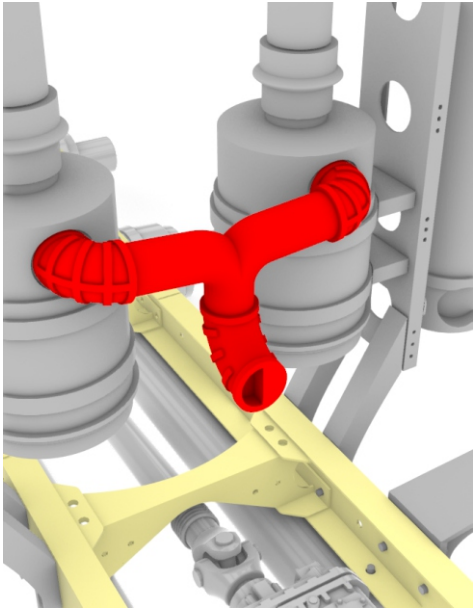


104. 

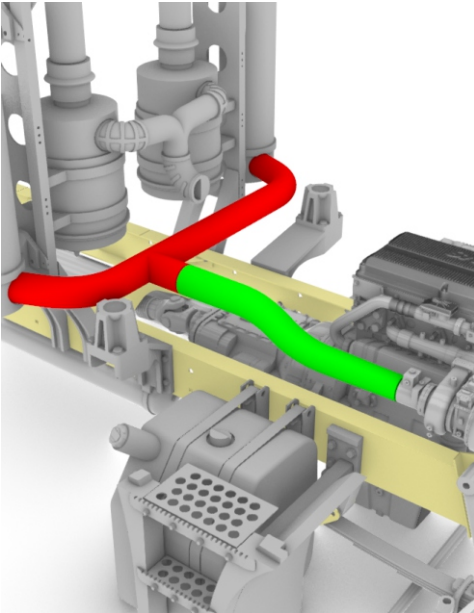



105. 

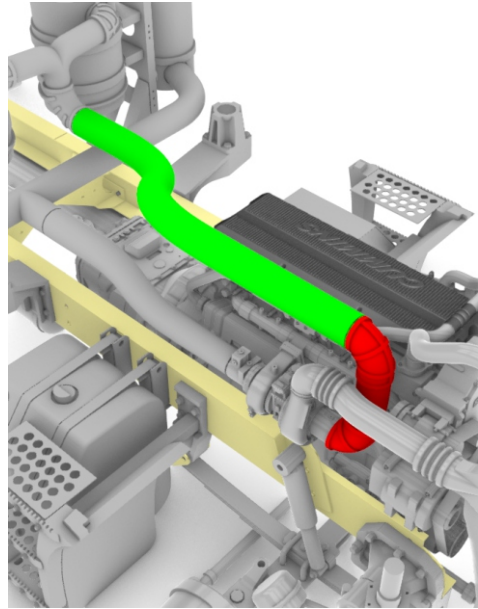


106. 

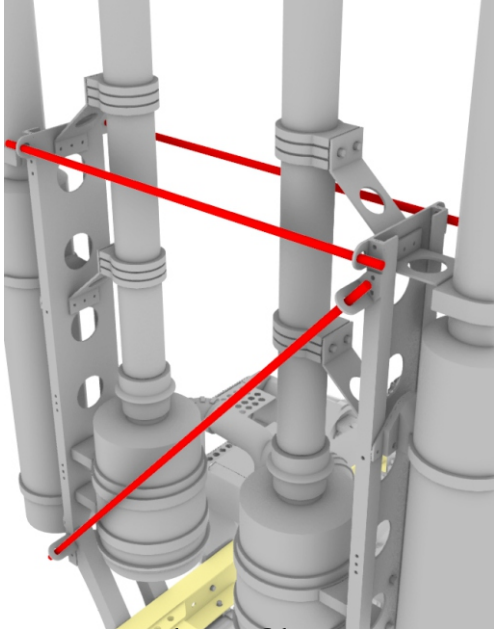

107.  x2
PE-part #23

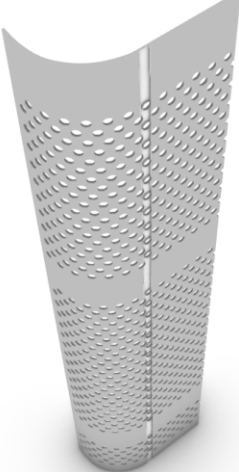



108.  x2

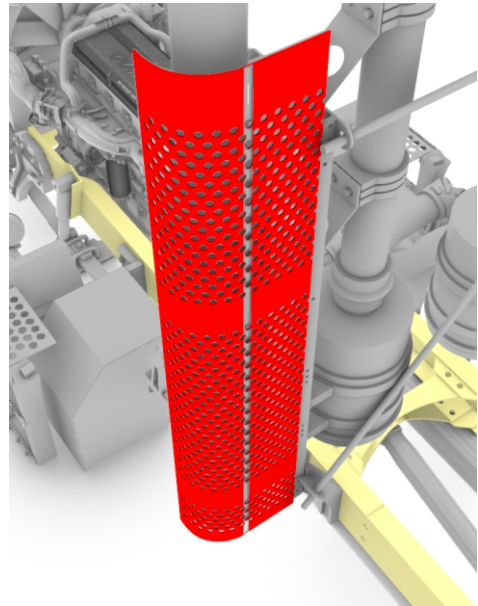

109. 


PE-part #41

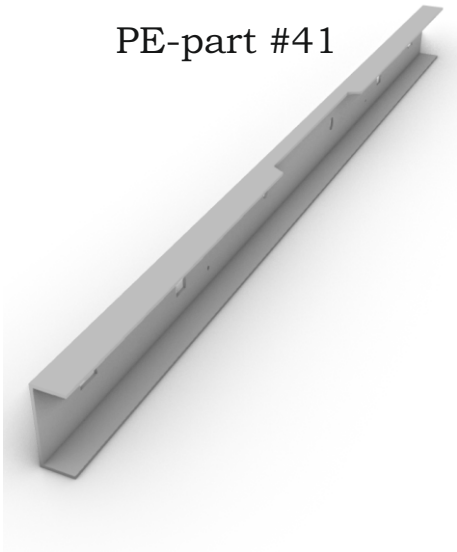



110.  x2




PE-part #39


111. 

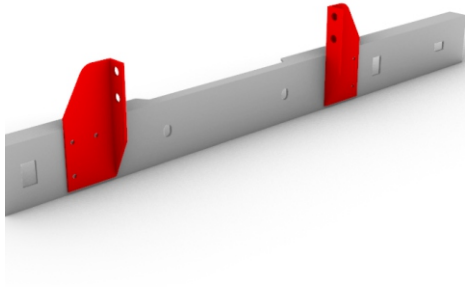


112. 

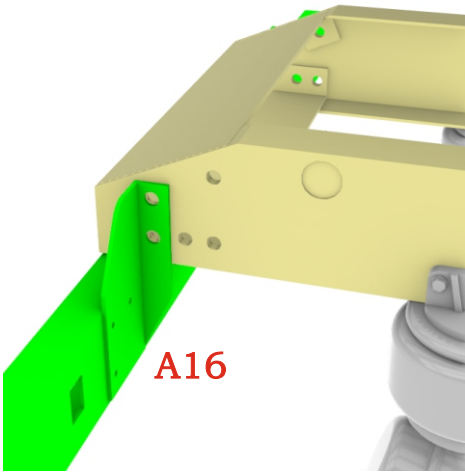



A16


113.  x2

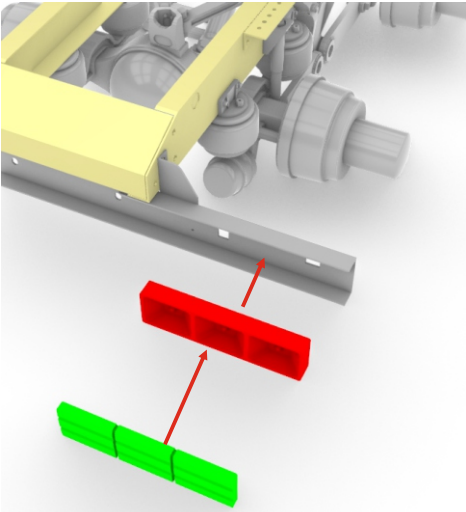


Clear part


114. 

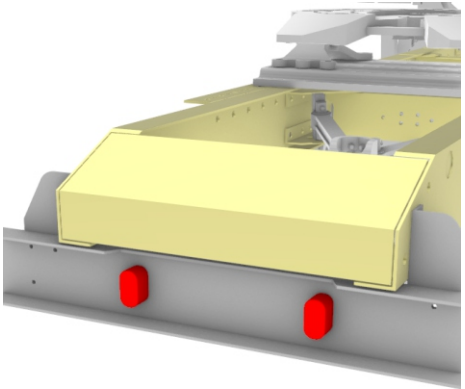



115. 

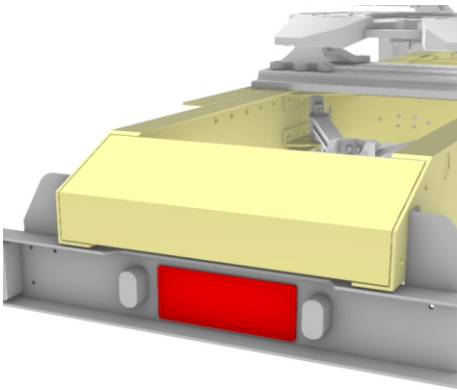


PE-part #33

116. 

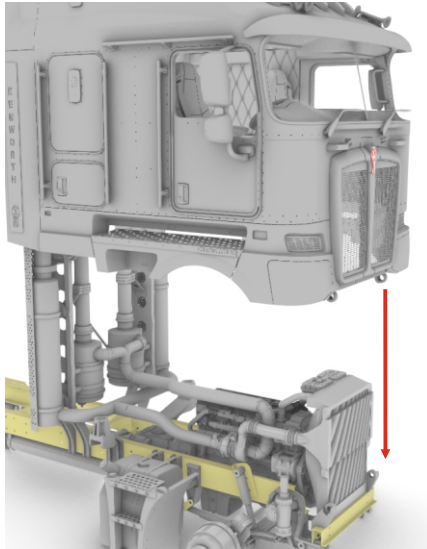

117.  x2

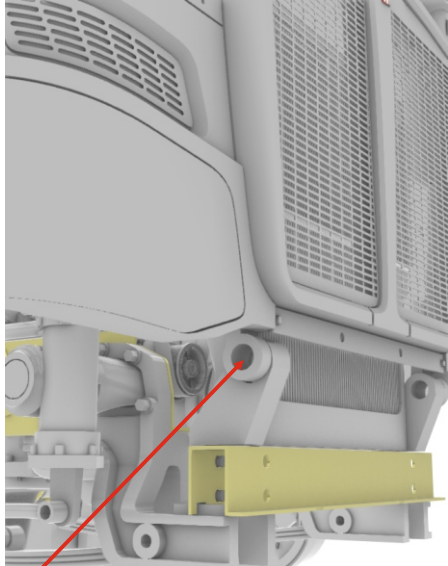


Round profile 2mm

118.

Tilt the cab.

119. ✂

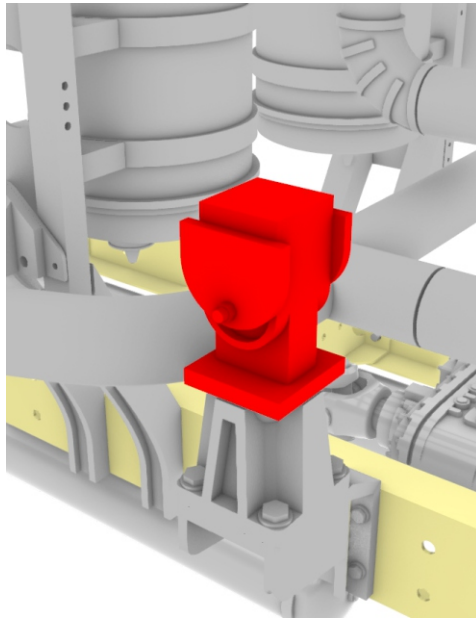


120.

Apply glue on the support and put the cab down on support.


121.

Repeat for other side.


122. 💧

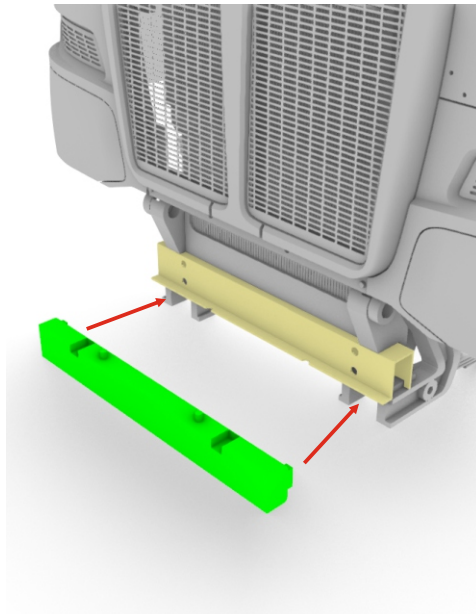

123. 💧

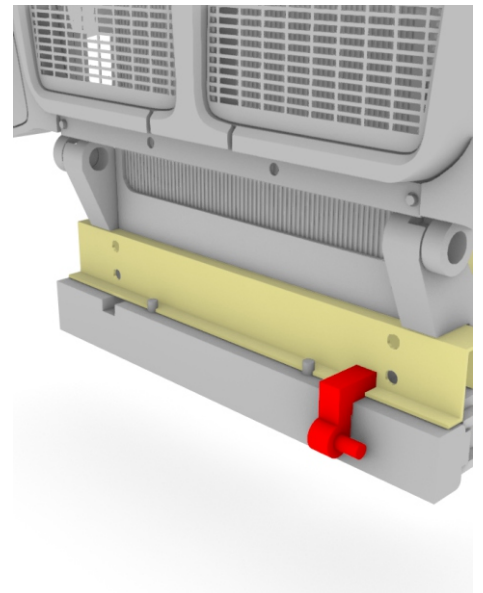


124. 💧

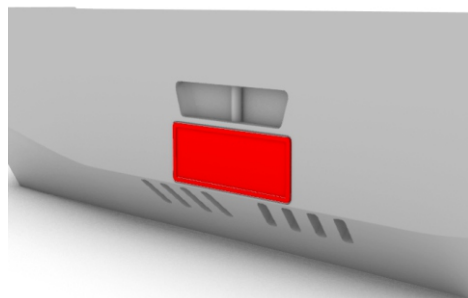


PE-part #33


125. 💧

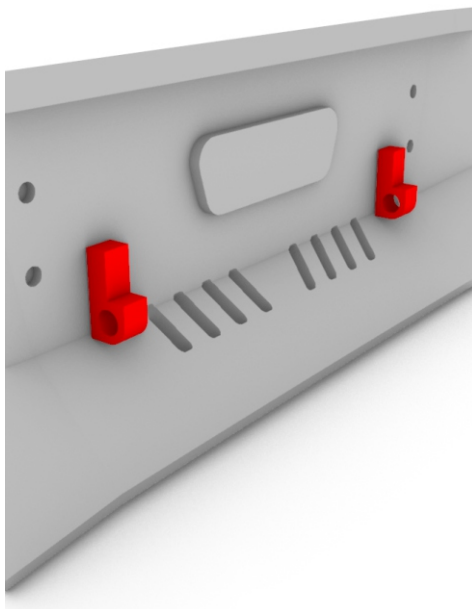

126. ✂

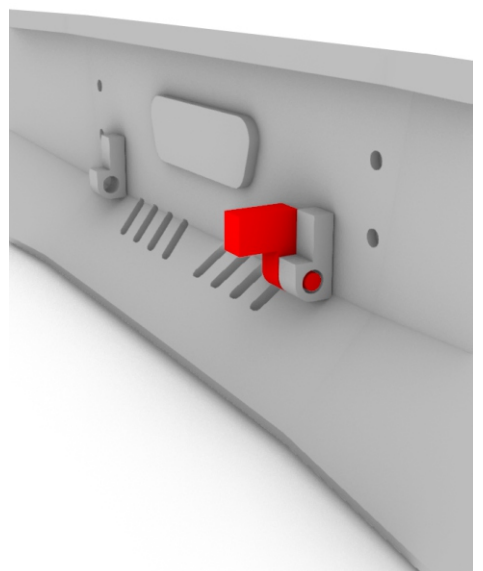

127. 

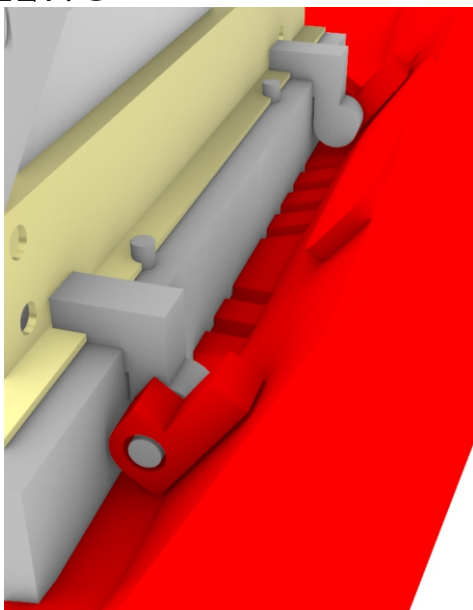


BASIC DIMENSIONS FOR ITALERI DONOR CHASSIS


To figure out what part is on a picture, refer step's number in main part of assembling instruction.

All dimensions in millimetres.



WHEELBASE.

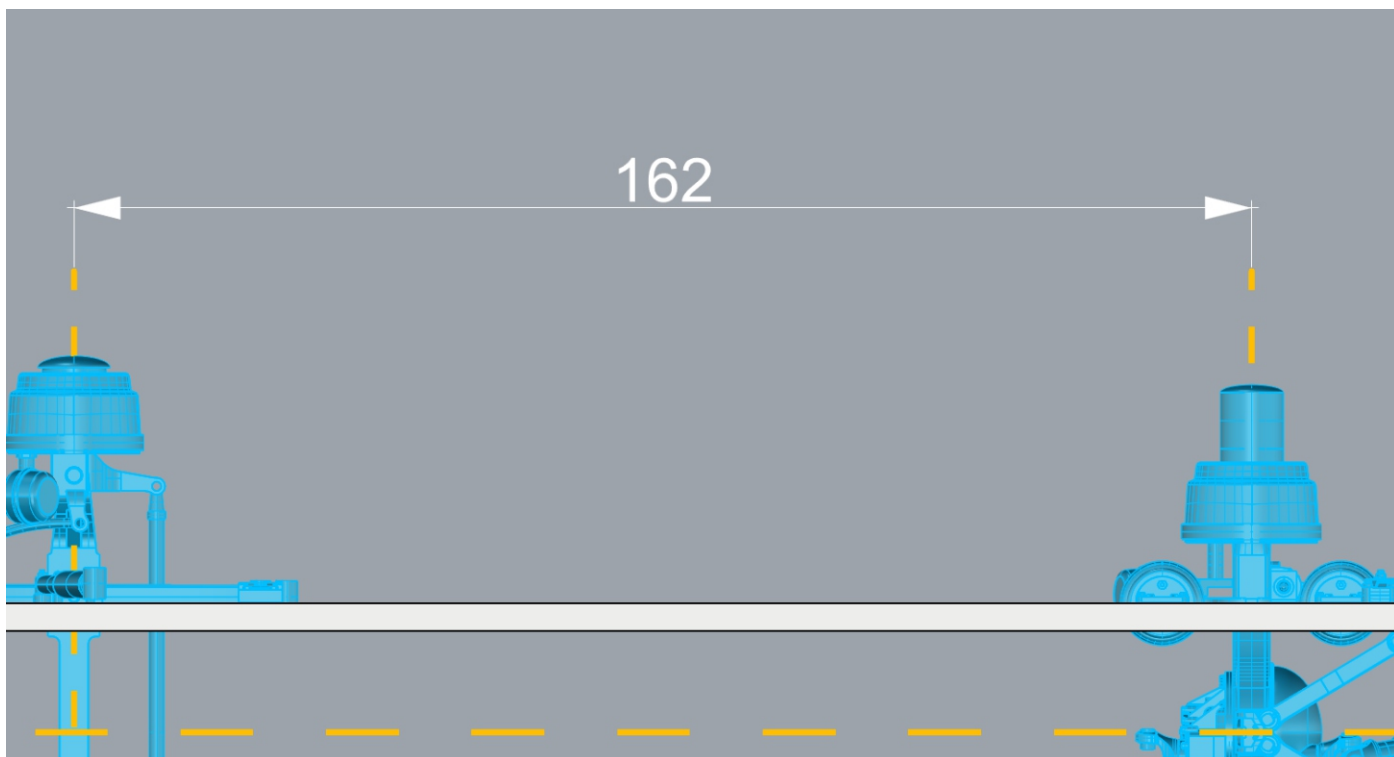


POSITION OF FRONT AXLE

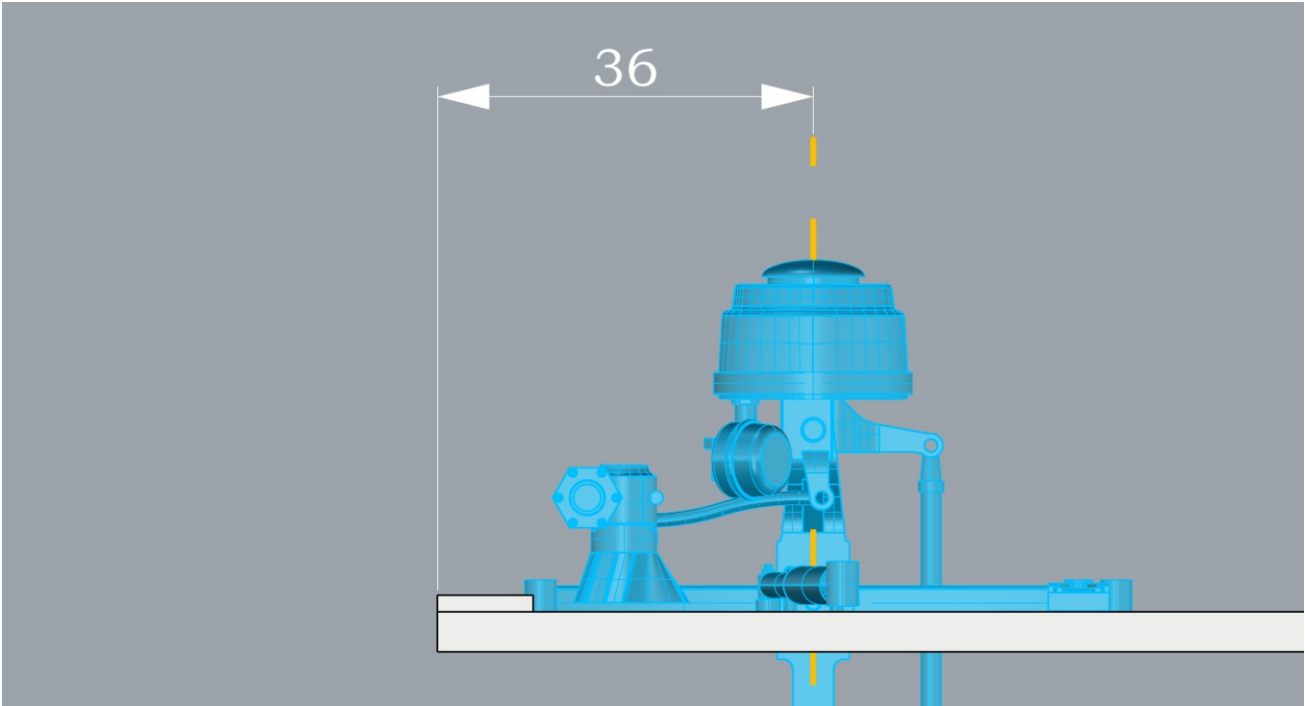


STEP 81

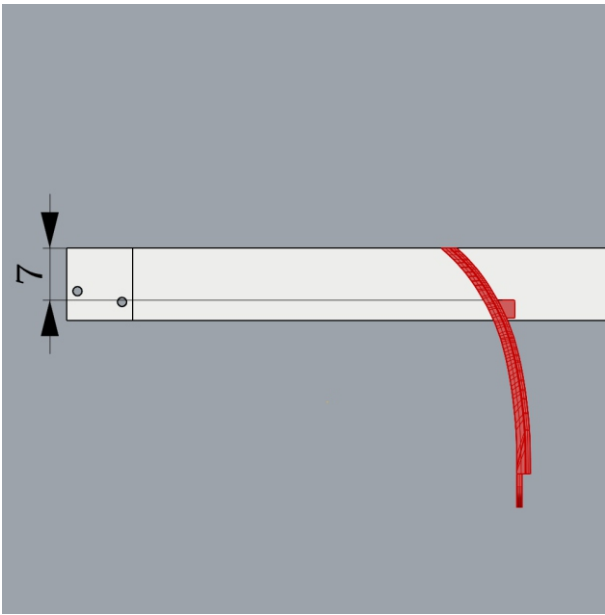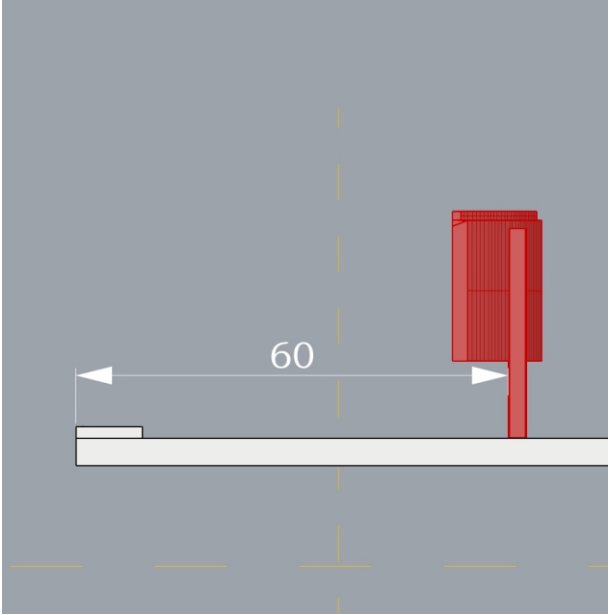


STEP 73

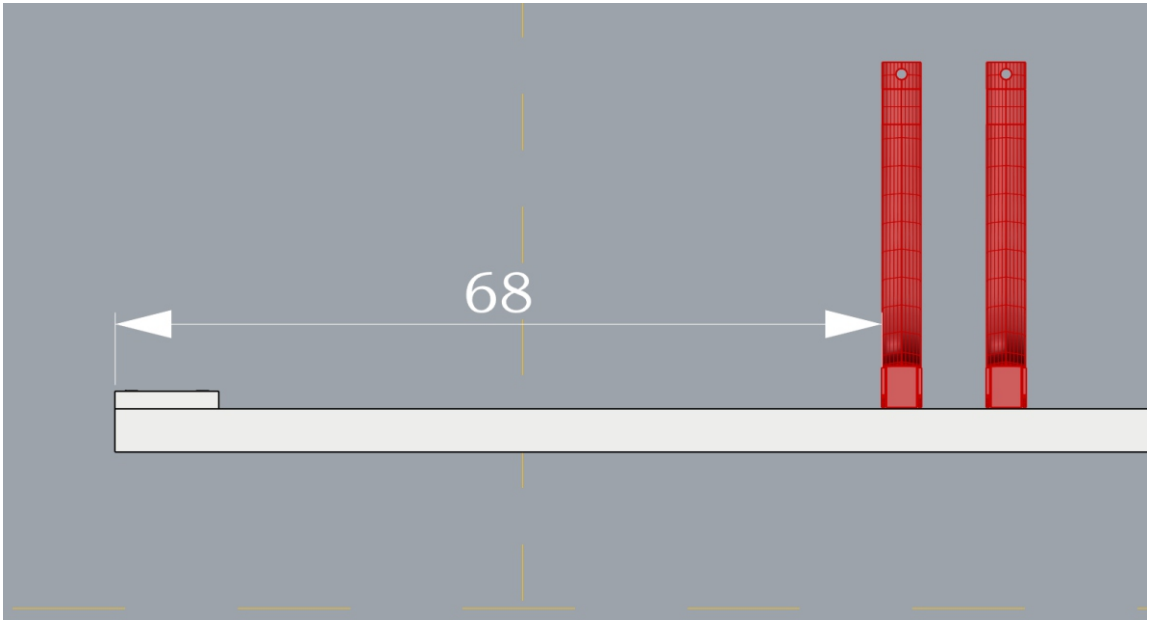

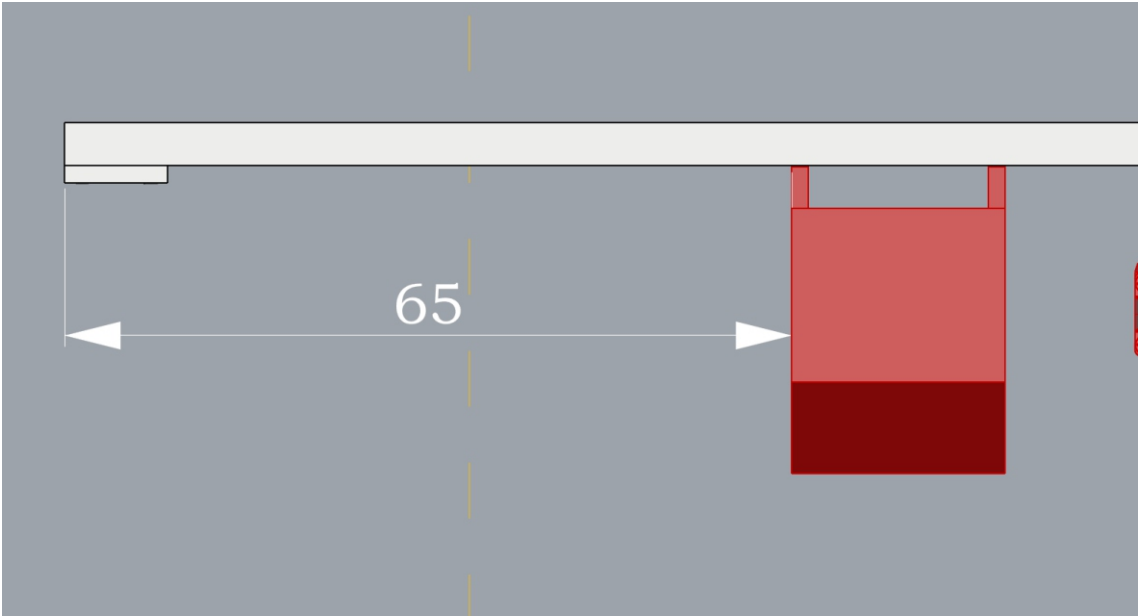

STEP 83

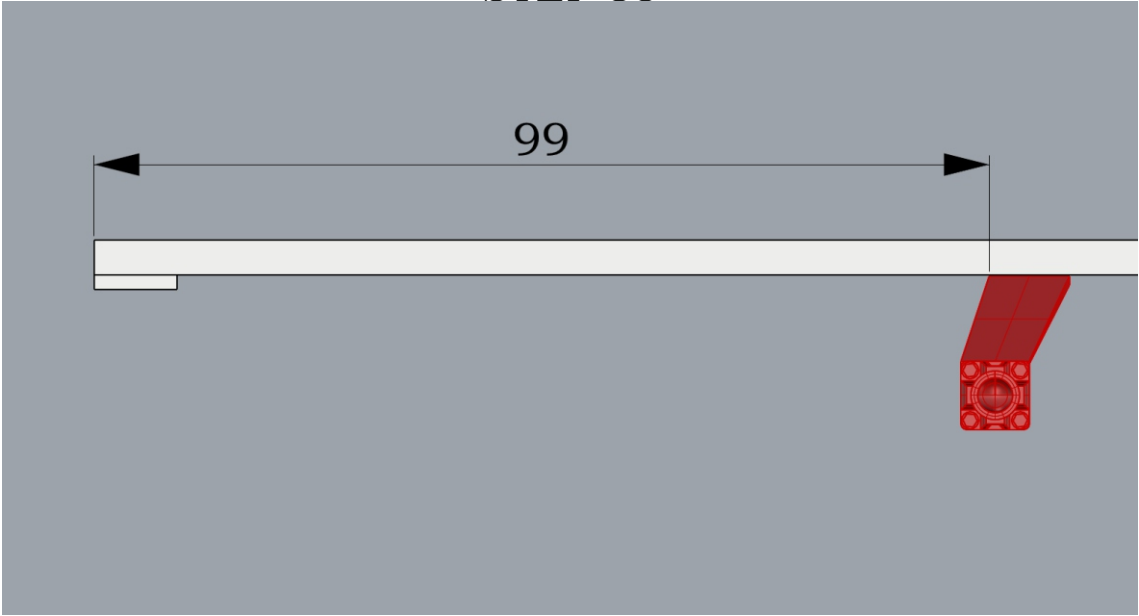

STEP 102

